RG COLORADO

OWNER'S HANDBOOK

HOLDEN

GM Holden Ltd, ABN 84 006 893 232 (hereinafter Holden)

Change of name, address or ownership

If you drive a pre-owned Holden, have moved house or changed any of your details, we'd like to hear from you!

Holden uses your details to keep your vehicle's factory provided Roadside Assistance and Warranty details up to date.

It also helps us let you know if there is an existing safety recall or rework on your vehicle. To update your details, please take a few minutes to fill in and mail the form at the back of the Service/Warranty booklet or visit Holden's website at: www.holden.com.au/forms/change-of-owner-details

GM Holden Ltd (Holden) is collecting the new owner's personal information in order to process the request for transfer for the specified vehicle. We may disclose your personal information to our related companies and third parties who provide us with (or help us provide) products and services, including to overseas locations such as the USA, and other countries in Europe, Oceania and Asia. Holden's privacy policy (available at: www.holden.com.au/privacypolicy) states how you can seek to access or correct any personal information Holden holds about you, how to complain about a privacy breach by Holden and how Holden will deal with a privacy complaint.
You can contact Holden on 1800 033 349 or alternatively, you may prefer to email Holden at: holdencustomercare@gm.com

Note: Please refer to the inside front cover of the Service/Warranty booklet for the Vehicle Identification Certificate.

Printed in Australia
Part No. 92282222
May 2016
(MY16 RG Colorado. Print 4)

© 2016 GM Holden Ltd
Reproduction in whole or part is prohibited without written approval from GM Holden Ltd, ABN 84 006 893 232

Contents

Introduction 2
In Brief 3
Keys, Doors, and Windows 14
Seats and Restraints 26
Storage 44
Instruments and Controls 54
Lighting 76
Infotainment System 82
Climate Controls 147
Driving and Operating 154
Vehicle Care 186
Service and Maintenance 225
Technical Data 227
Customer Information 234
Index 237

Notes

We thank you for choosing Holden and want to assure you of our continuing interest in your driving pleasure and satisfaction.

This handbook applies to the current Colorado model. Therefore, due to different models and options, you may find reference in this Handbook to some equipment not fitted to your own vehicle.

Please note that all information, illustrations and specifications in this Handbook are based on the latest production information available at the time of printing. Holden reserves the right to make changes at any time without notice and without incurring any obligation.

Introduction

Your vehicle is a designed combination of advanced technology, safety, environmental friendliness and economy.

This Owner's Handbook provides you with all the necessary information to enable you to drive your vehicle safely and efficiently.

Make sure your passengers are aware of the possible risk of accident and injury which may result from improper use of the vehicle.

Using this Manual

- The "In brief" section will give you an initial overview.
- The table of contents at the beginning of this manual and within each chapter shows where the information is located.
- The index will enable you to search for specific information.
- Directional data, e.g. left or right, or front or back, always relate to the direction of travel.
- Depending on the model variant, integrated special equipment and accessories, the scope of equipment of your vehicle can differ from the descriptions in this Owner's Handbook.
- The *Bluetooth*® word mark and logo are registered trademarks and are owned by the Bluetooth SIG, Inc.
- iPod® is a registered trademark of Apple Inc.
- ESP® is a registered trademark of Daimler Chrysler AG.

Danger, Warning, and Caution

⚠ Danger

Text marked ⚠ **Danger** provides information on risk of fatal injury. Disregarding this information may endanger life.

⚠ Warning

Text marked ⚠ **Warning** provides information on risk of accident or injury. Disregarding this information may lead to injury.

Caution

Text marked **Caution** provides information on possible damage to the vehicle. Disregarding this information may lead to vehicle damage.

In Brief

Instrument Panel
Instrument Panel Overview 3

Initial Drive Information
Remote Keyless Entry (RKE) System 5
Seat Adjustment 5
Head Restraint Adjustment 7
Seat Belts 7
Mirror Adjustment 7
Steering Wheel Adjustment 8
Exterior Lighting 8
Horn 10
Washer and Wiper Systems . . . 10
Climate Controls 11
Transmission 11
Parking 12
Getting Started 12

Instrument Panel

Instrument Panel Overview

1. Exterior lamp control. See *Exterior Lamp Controls* ⇨ *76*.
2. Side air vents. See *Adjustable Air Vents* ⇨ *152*.
3. Steering wheel controls (cruise control). See *Cruise Control* ⇨ *172*.
4. Turn signals, headlamp flash, low beam and high beam. See *Exterior Lamp Controls* ⇨ *76*.

5. Warning lights, gauges and indicators. See *Warning Lights, Gauges, and Indicators* ⇨ *59*.
6. Horn. See *Horn* ⇨ *57*. Driver's airbag. See *Airbag System* ⇨ *35*.
7. Driver Information Centre (DIC) under *Driver Information Centre (DIC)* ⇨ *65*.
8. Steering wheel controls. See *Steering Wheel Controls* ⇨ *56*.
9. Windscreen wiper, windscreen washer system. See *Windscreen Wiper/ Washer* ⇨ *57*.
10. Central air vents. See *Adjustable Air Vents* ⇨ *152*.
11. Infotainment screen. See *Infotainment* ⇨ *82*.
12. Hazard warning flashers. See *Hazard Warning Flashers* ⇨ *77*.
13. Instrument panel storage compartment. See *Instrument Panel Storage* ⇨ *44*.
14. Passenger airbag. See *Airbag System* ⇨ *35*.
15. Cupholder and storage. See *Cupholders* ⇨ *46*.
16. Glovebox. See *Glovebox* ⇨ *46*. Instrument panel storage. See *Instrument Panel Storage* ⇨ *44*.
17. Shift lever, manual transmission. See *Manual Transmission* ⇨ *163*.
18. Power outlets. See *Power Outlets* ⇨ *58*.
19. Traction control system off. See *Traction Control System (TCS)* ⇨ *169*. Electronic stability control off. See *Electronic Stability Control (ESC)* ⇨ *170*.
20. Shift lever, automatic transmission. See *Shift Lever* ⇨ *160*.
21. Steering wheel adjustment. See *Steering Wheel Adjustment* ⇨ *56*.
22. Clutch pedal. See *Manual Transmission* ⇨ *163*.
23. Brake pedal. See *Brakes* ⇨ *167*.
24. Accelerator pedal. See *New Vehicle Running-in* ⇨ *157*.
25. Bonnet release lever. See *Bonnet* ⇨ *189*.
26. Instrument panel fuse box (behind storage compartment). See *Instrument Panel Fuse Box* ⇨ *207*.
27. Fuel tank door release lever. See *Refuelling* ⇨ *178*.
28. Ignition switch/lock. See *Ignition Positions* ⇨ *157*.
29. Climate control. See *Air Conditioning System* ⇨ *147*.
30. Descent Control System (DCS). See *Descent Control System (DCS)* ⇨ *171*.
31. Heated Seats. See *Heated Front Seats* ⇨ *29*.

Initial Drive Information

Remote Keyless Entry (RKE) System

Remote keyless entry

The key operates all doors and the ignition.

- Press once to unlock the driver's door.
- Press twice to unlock all other doors.
- Press to lock the doors.

See *Remote Control* ⇨ *15* and *Central Locking System* ⇨ *17*.

Seat Adjustment

Seat Positioning

1. Move the seat forwards or backwards by lifting the handle at the front and sliding the seat.
2. Release the handle to engage the latch.

See *Seat Adjustment* ⇨ *27*.

Seat Backrests

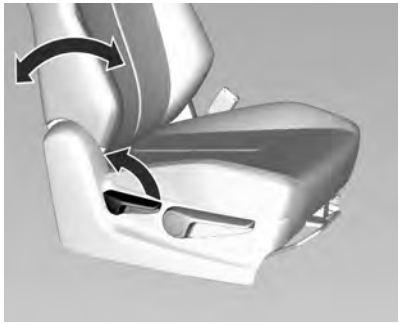

1. Recline the seatback by pulling the lever.
2. Adjust the angle and release the lever.
3. Allow the seat to engage.

Note

Do not lean on the seat when adjusting.

See *Seat Adjustment* ⇨ *27*.

Seat Height

The vehicle may have seat height adjustment.

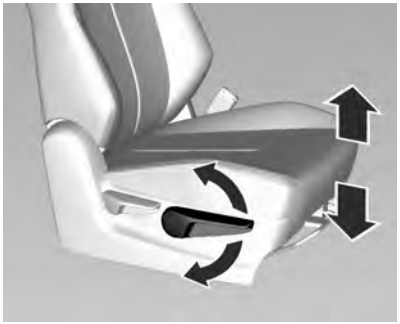

- To lower the seat cushion, push the lever down several times.
- To raise the seat cushion, pull the lever up several times.

See *Seat Adjustment* ⇨ *27*.

Power Seat Adjustment

Seat Positioning

The vehicle may have power seat adjustment.

- Move the seat forwards or backwards by sliding the switch.

See *Power Seat Adjustment* ⇨ *28*.

Seat Backrests

- Recline the seatback by sliding the switch forwards or backwards.

See *Power Seat Adjustment* ⇨ *28*.

Seat Height

- To lower the seat cushion, push the switch downwards.
- To raise the seat cushion, pull the switch upwards.

See *Power Seat Adjustment* ⇨ *28*.

Head Restraint Adjustment

- To raise the head restraint, pull the head restraint upwards.
- To lower the head restraint, press the button and push the head restraint downwards.

See *Head Restraints* ⇨ *26*.

Seat Belts

1. Withdraw the belt from the reel.
2. Pull the metal tongue across your body into the buckle, until it clicks into place.
3. Tension the lap belt regularly while driving by tugging the shoulder belt.

See *Seat Belts* ⇨ *31* and *Airbag System* ⇨ *35*.

Mirror Adjustment

Interior Mirror

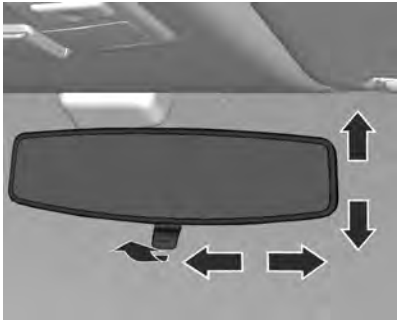

- To reduce headlamp glare from following vehicles, push the lever towards the front of the vehicle.

See *Manual Rear View Mirror* ⇨ *22*.

Exterior Mirrors

The vehicle may have power mirrors.

L: Left side mirror selected.

R: Right side mirror selected.

●: No mirrors selected.

To adjust an exterior mirror:

1. Push the switch to **L** or **R**.
2. Press the directional switch to adjust the angle of the mirror.

See *Power Mirrors* ⇨ *21*, *Convex Mirrors* ⇨ *21*, or *Folding Mirrors* ⇨ *21*.

Steering Wheel Adjustment

The vehicle may have steering wheel adjustment.

1. To unlock, move the lever down.
2. Adjust the steering wheel.
3. To lock, move the lever up.
4. Ensure the steering wheel is locked in position before driving.

See *Steering Wheel Adjustment* ⇨ *56*, *Airbag System* ⇨ *35*, or *Ignition Positions* ⇨ *157*.

Exterior Lighting

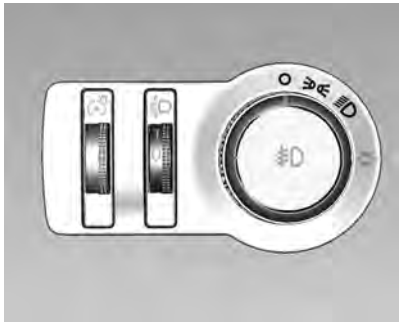

(OFF) : Rotate to turn all lamps and lights off.

(Park lamps) : Turns on the park lamps, number plate lamps and instrument panel lamps.

(Headlamps) : Turns on the headlamps and all park lamps.

(Fog lamps) : Press to turn the front fog lamps on or off, when the park lamps or headlamps are on, while the ignition is on.

See *Exterior Lamp Controls* ⇨ *76*.

High Beam/Low Beam

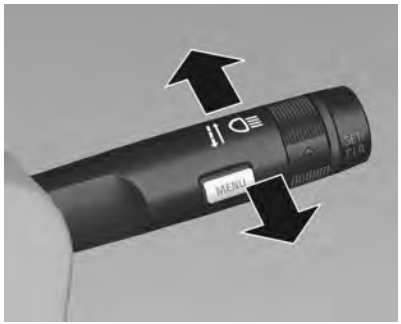

- To flash the headlamps, pull the lever.
- To switch from low to high beam, push the lever.
- To switch to low beam, push again or pull the lever.

See *Headlamp High/Low-Beam Changer* ⇨ *77* and *Headlamp flash* ⇨ *77*.

Turn and Lane-Change Signals

- Push the lever in the direction the steering wheel is turned.
- A green arrow on the instrument panel flashes when the lamps are in operation.

See *Turn and Lane-Change Signals* ⇨ *78*.

Hazard Warning Flashers

- Press ⚠ to turn the hazard warning flasher on or off, when the ignition is in any position.

See *Hazard Warning Flashers* ⇨ *77*.

Horn

Press .

Washer and Wiper Systems

Windscreen Wiper

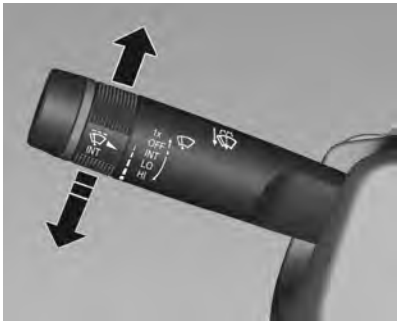

1x : Single wipe

OFF : Off

INT : Intermittent operation

LO : Continuous wipe, slow speed

HI : Continuous wipe, fast speed

For a single wipe when the windscreen wipers are off, move the lever up lightly and release it.

See *Windscreen Wiper/Washer* ⇨ *57* and *Wiper Blade Replacement* ⇨ *198*.

Windscreen Washer

- Pull the lever towards you to wash the windscreen.

  Washer fluid is sprayed onto the windscreen and the wipers operate.

See *Windscreen Wiper/Washer* ⇨ *57* and *Washer Fluid* ⇨ *195*.

Climate Controls

The climate control panel is located in the centre of the instrument panel.

See *Air Conditioning System* ⇨ *147* or *Electronic Climate Control System* ⇨ *149*.

Transmission

Manual Transmission

- When shifting from one gear to another, push the clutch pedal to the floor.
- Do not engage reverse gear while the vehicle is still moving.
- Pause between pressing the clutch pedal and moving into reverse gear.

See *Manual Transmission* ⇨ *163*.

Automatic Transmission

P : Park

R : Reverse

N : Neutral

D : Drive

The shift lever can only be moved out of **P** when the ignition is on and the brake pedal is applied.

To engage **P** or **R**, push the release button on the front of the shift lever.

Manual mode: Move the shift lever to position **D**, then push to the left.

+ : higher gear

− : lower gear

See *Automatic Transmission* ⇨ *160* and *Four-Wheel Drive* ⇨ *163*.

Parking

1. Apply the park brake.
2. Automatic transmission: Select position **P**.

   Manual transmission: If facing uphill or on flat ground, select 1st gear. If facing downhill, select reverse gear.
3. Shut all windows.
4. Keep the engine running for about 1 to 2 minutes to protect the turbocharger.

   Turn the ignition off and remove the key.
5. Press 🔒 on the key to lock all doors.

See *Parking* ⇨ *159*.

Getting Started

Check Before Starting

- Check that windows, mirrors and lamps are clean.
- Visually check tyre inflation. Check the tyre pressures weekly.
- Ensure that all doors are closed and secured.
- Position your seat for comfortable driving.
- Adjust rear view mirrors.
- Fasten seat belts.
- Check that the warning indicators illuminate when turning the ignition on.

See *Warning Lights, Gauges, and Indicators* ⇨ *59*.

Starting the Engine

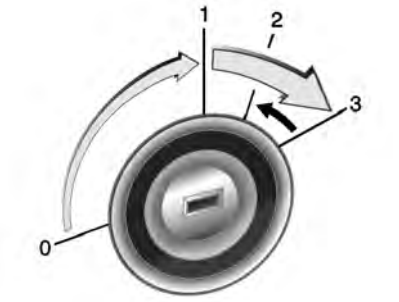

⚠ Warning

Do not turn the engine off while the vehicle is moving as there will not be any power assist for brakes or steering.

Never remove the key while the vehicle is moving, as this will lock the steering.

0: (LOCK) The key can only be inserted and removed from this position.

1: (ACC) When the key is in this position, the audio system operates.

2: (ON) Turn the key to this position for preheating, until goes out.

When the key is in this position, the engine is ready to start and all electrical systems are active.

Do not leave the switch in this position for a long time, unless the engine is running, otherwise the vehicle's battery will discharge.

3: (START) Turn the key to this position and release when the engine is running.

See *Ignition Positions* ⇨ *157*, *Manual Transmission* ⇨ *163* and *Automatic Transmission* ⇨ *160*.

Keys, Doors, and Windows

Keys and Locks
Keys 14
Remote Control 15
Manual Door Locks 16
Central Locking System 17
Safety Locks 17

Doors
Rear Doors 18
Tailgate 19

Vehicle Security
Anti-theft Alarm System 19
Immobiliser 20

Exterior Mirrors
Convex Mirrors 21
Power Mirrors 21
Folding Mirrors 21

Interior Mirrors
Manual Rear View Mirror 22

Windows
Manual Windows 23
Power Windows 23
Heated Rear Window 25
Sun Visors 25

Keys and Locks

Keys

The key operates all doors and the ignition.

- Press once to unlock the driver's door.
- Press twice to unlock all other doors.

  The hazard lamps flash twice.
- Press to lock the doors.

  The hazard lamps flash once.

See *Tailgate* ⇨ *19* and *Central Locking System* ⇨ *17*.

Foldaway key blade

1. Press button to extend the key blade.
2. To retract the key blade, press the button and fold the blade into the key.

About the keys

- The remote control has a range of up to 20 metres.
- The range depends on the charge of the key battery, on ambient conditions, the key's location and the area between them.
- Take care that no button is pressed unintentionally, especially when the vehicle is out of sight.
- Protect from moisture and high temperatures.

The key buttons may not work if:

- More than 20 metres from the vehicle.
- Battery voltage is too low.

See Battery replacement under *Remote control* ⇨ *15*.

- The key buttons are operated repeatedly while not in range of the vehicle.
- The central locking system is operated at frequent intervals.
- The power supply is interrupted for a short time.
- The vehicle is parked near strong radio activity.

Replacement keys

If a key is lost, a replacement can be ordered through any Holden Dealer by quoting the key code number. The number is printed on a detachable tag supplied with the key.

Remote Control

Battery Replacement

As soon as the range of the remote control reduces, replace the battery:

Replace battery in remote key is also displayed on the instrument panel when the battery requires replacing.

Use CR2032 (or equivalent) battery.

1. Open the cover.
2. Remove the used battery.
3. Install the new battery.

   Place the negative side (-) down towards the base.
4. Close the cover.
5. Check the key operation.

Note

- Batteries do not belong in household waste. Dispose of at an appropriate recycling collection point.
- Avoid dropping the transmitter.
- Do not place heavy objects on the transmitter.
- Keep the transmitter away from water and direct sunlight.
- If the transmitter gets wet, wipe it with a soft cloth.

Caution
Avoid touching the flat surfaces of the battery, the circuit board and other components inside the remote control with bare fingers. Handling will shorten battery life.

Manual Door Locks

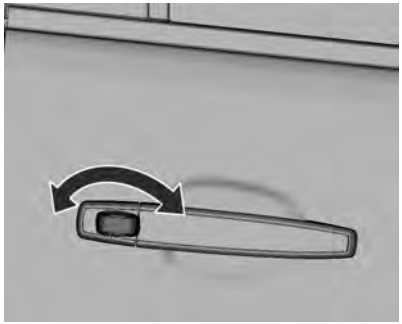

- Insert the key into the door lock.
- Turn the key clockwise to lock.
- Turn the key anticlockwise to unlock the driver's door.

Note

Tap the key slot or heat the key if the door does not open in cold weather.

Door Lock Snibs

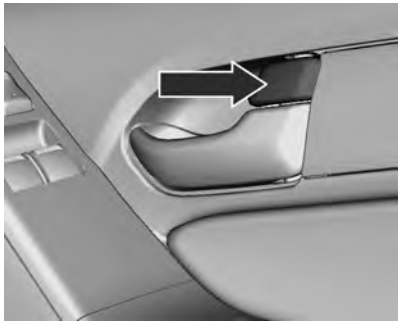

- To lock any door from the inside, push the door lock snib so it is flush with the door handle.
- To unlock any door from the inside, pull the door lock snib outwards.
- The driver's door lock snib does not operate when the door is open.

Note

Do not operate the switches constantly.

Central Locking System

Doors may be locked and unlocked by pressing buttons on:

- The driver's door
- The key from inside or outside the vehicle

Note

- The driver's door must be closed for the driver's door to lock.
- Pulling on an interior door handle will not unlock a door unless an unlock button has been pressed.

The vehicle may have features that can have customised settings. See *Vehicle Personalisation* ⇨ *73*.

Central locking button

Locks and unlocks all doors.

- To lock, press on the front section of the switch.
- To unlock, press on the rear section of the switch.

Safety Locks

The vehicle may have child security rear door locks.

⚠ Warning

Use the child security door locks whenever children are occupying the rear seats.

The child security rear door locks prevent the rear doors from being opened from the inside.

Rotate the switch using a key or suitable screwdriver.

To activate:

- Rotate the switch in a clockwise direction.

  To open a door when the child security rear door lock is activated:

- Open the door from the outside.

Doors

Rear Doors

Space cab

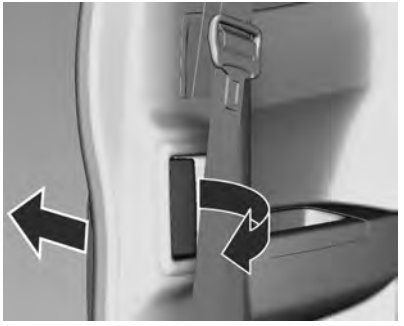

To open a rear door:

1. Open the front door.
2. Open the rear door by using the handle located on the front edge of the rear door panel.

Note

When closing doors, close the rear doors before closing the front doors.

Side steps

The vehicle may have side steps.

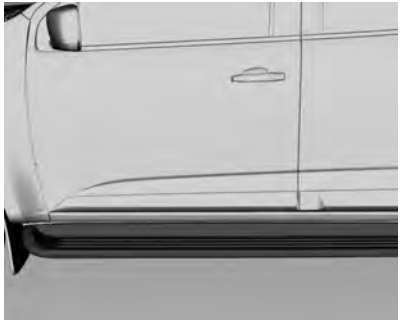

The side steps provide an extra foothold for accessing the front or rear doors.

Tailgate

Locking and unlocking

The vehicle may have a tailgate lock.

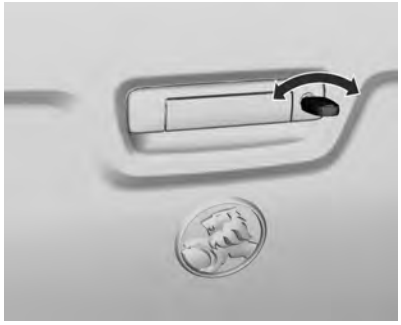

- To lock, turn the key anticlockwise until the key is in the vertical position.
- To unlock, turn the key clockwise until the key is in the horizontal position.

  Pull the handle upwards to open.
- The key can be removed from either the locked or unlocked positions.

Vehicle Security

Anti-theft Alarm System

The system monitors the doors, ignition and the bonnet.

The system is activated:

- Thirty seconds after locking the vehicle.
- Alternatively, by pressing on the key a second time.

The system is deactivated by:

- Pressing on the key.

Note

- If the driver's door is opened manually, while the alarm is activated, the key needs to be inserted into the ignition within 10 seconds to avoid triggering the alarm. During the 10 seconds, the horn sounds and the hazard warning flashers activate.
- When the alarm is triggered, the horn sounds and the hazard warning flashers activate for 30 seconds.

- If the alarm was triggered during alarm activation, the horn will sound three times and the hazard warning flashers will activate three times, while unlocking the vehicle.

Status LED

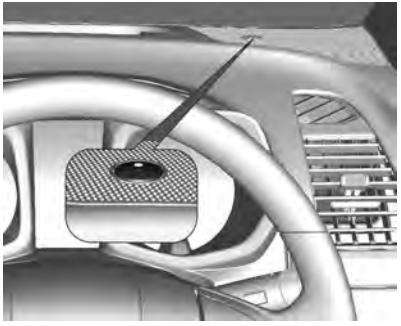

The status LED is located on top of the instrument panel.

During the first 30 seconds of system activation:

- LED illuminates (test, arming delay).
- LED flashes quickly (doors or bonnet are not completely closed, or there is a system fault).

When the system is armed:

- LED flashes slowly.

If a fault occurs, contact a Holden Dealer.

Immobiliser

The immobiliser prevents unauthorised engine starting.

- If an invalid key is inserted into the ignition switch/lock, an indicator on the instrument panel will flash.

  The vehicle will not start.
- The engine is automatically immobilised after the key is turned to LOCK and has been removed from the ignition switch/lock.
- Only valid ignition keys can be used to start the engine.
- If flashes or illuminates when the ignition is on, there is a fault in the system. The engine cannot be started. Turn the ignition off and on again.

  If the control indicator continues to flash or illuminate, try to start the engine using the spare key.

  Have the vehicle checked by a Holden Dealer.

Note

The immobiliser does not lock the doors.

See *Instrument Panel Overview* ⇨ *55*.

Exterior Mirrors

Convex Mirrors

The convex exterior mirrors provide a wider view of the road and traffic.

⚠ Warning

Objects seen in these mirrors are closer than they appear.

Manual mirrors

The vehicle may have manual mirrors.

- Press the edges to adjust the angle of the mirror.

Power Mirrors

The vehicle may have power mirrors.

Adjust the driver's or passenger's side mirror.

L: Left side mirror selected

R: Right side mirror selected

●: No mirrors selected

To adjust an exterior mirror:

1. Push the switch to L or R.
2. Press the directional switch to adjust the angle of the mirror.

Folding Mirrors

Manual Folding

The vehicle may have manual folding mirrors.

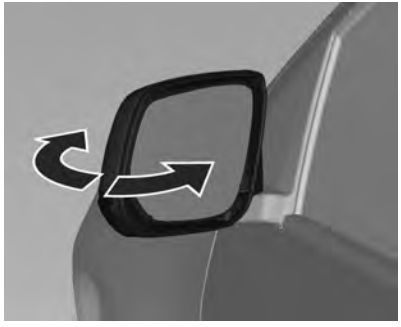

When the vehicle is parked, the mirrors may be folded flat against the side of the vehicle.

Electric Folding

The vehicle may have electric folding mirrors.

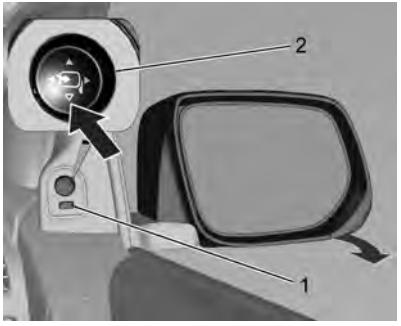

1. Push the switch (1) to the central position ●.
2. Push the directional switch (2) downwards.

   Both exterior mirrors fold inwards.
3. Push the directional switch (2) down again.

   Both exterior mirrors return to their original position.

Note

If one mirror is manually extended or folded, by pressing the directional switch (2) down, the other mirror will be extended or folded.

⚠ Warning

Always extend mirrors outwards for driving to increase visibility.

Do not drive while either exterior mirror is folded against the vehicle.

Interior Mirrors

Manual Rear View Mirror

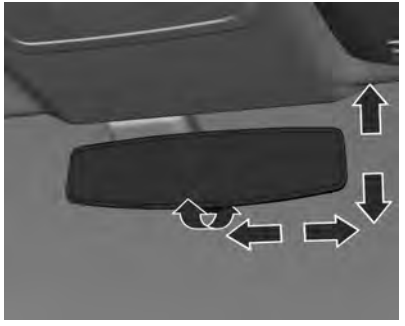

Adjust the rear view mirror to provide a clear view behind the vehicle.

To reduce headlamp glare from following vehicles, push the lever towards the front of the vehicle.

Note

The rear view clarity is reduced when the mirror is set to the anti-glare position.

Return the lever back to its original position as soon as the glare has disappeared.

Windows

Manual Windows

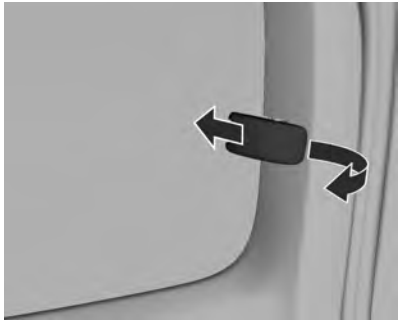

- The vehicle may have a lever to open the rear side windows.
- Push the lever towards the front of the vehicle, then outwards.

Power Windows

⚠ Warning

Before operating the power windows, check they are free of obstructions and that passengers and pets are not in the proximity of the moving window.

- The power windows can be operated when the ignition is turned on.
- The switches can be operated for up to 10 minutes, after turning the ignition off.
- After turning the ignition off, window operation is disabled when either the driver's or passenger's door is opened.

Note

If the windows are operated repeatedly, window operation is disabled for some time.

Operation

- To open a window, press the switch down.
- To close a window, pull the switch up.
- The window stops moving up as soon as the button is released.

Auto up/down

The driver's window has an auto up/down function:

- To open the window automatically, press the switch fully down.
- To close the window automatically, pull the switch fully up.
- The window will open or close fully when the switch is released.
- Press or pull the switch to interrupt automatic operation.

Anti-pinch function

If the driver's window encounters any resistance during auto closing, it will stop immediately and open again.

Safety override function

If a window becomes difficult to close, possibly due to frost:

1. Pull the switch upwards and hold.

   The window moves up without the anti-pinch function.
2. Release the switch to stop window movement.
3. Operate the switch once more in the same direction, to continue closing.

Initialising the power windows

If the driver's window cannot be closed automatically, e.g. after disconnecting the battery, operate the window as follows:

1. Turn the ignition on.
2. Press the switch down for 2 seconds to move the window down.
3. Pull the switch up to move the window up and close it completely, holding the switch up for an additional 2 seconds after the window stops.

Child safety switch

Press to activate/deactivate the front passenger and rear door power window switches.

Heated Rear Window

The vehicle may have a heated rear window. See *Air Conditioning System* ⇨ *147* or *Electronic Climate Control System* ⇨ *149*.

Sun Visors

- The sun visors can be folded down or folded outwards over the side window, to prevent glare.
- If the sun visor has a mirror, close the cover when driving.

⚠ Warning

Do not place the sun visor in such a position that it reduces visibility of the roadway, traffic or other objects.

Assist grips

The vehicle may have assist grips.

- Assist grips are located above the doors to assist passengers getting in and out of the vehicle.
- The assist grips above each rear door may include a coat hook.

Seats and Restraints

Head Restraints
Head Restraints 26

Front Seats
Seat Position 27
Seat Adjustment 27
Power Seat Adjustment 28
Heated Front Seats 29

Rear Seats
Rear Seats 30

Seat Belts
Seat Belts 31
Three-Point Seat Belt 32
Seat Belt Use During Pregnancy 34
Lap Belt 34
Seat Belt Care 34
Replacing Seat Belt System Parts after a Crash 34

Airbag System
Airbag System 35
Front Airbag System 36
Side Airbag System 37
Curtain Airbag System 38
Replacing Airbag System Parts after a Crash 38

Child Restraints
Child Restraint Systems 39
Where to Put the Restraint 41
ISOFIX Child Restraint Systems 43
Top-Tether Child Restraint Systems 43

Head Restraints

⚠ Warning

This safety feature is not intended to rest the head upon. It is solely for the reduction of whiplash neck movement in an accident involving your vehicle.

The centre of the head restraint should be at eye level, never at neck level.

Height Adjustment

- Pull the head restraint up.
- Press the locking button and push the head restraint down.

Front Seats

Seat Position

⚠ Warning

To avoid reducing the effectiveness of seat belts, seatbacks should only be upright or at most semi-reclined when the vehicle is moving.

- Sit centrally in the seat.
- Use the backrest and cushion for support.
- Adjust the seat so that your legs are slightly angled when against the pedals.
- Adjust the backrest angle to easily reach the steering wheel with arms slightly bent. See *Steering Wheel Adjustment* ⇨ *56*.
- Maintain contact between shoulders and the backrest when turning the steering wheel.
- Adjust the head restraint. See *Head Restraints* ⇨ *26*.
- Slide the passenger seat as far back as possible.

Seat Adjustment

⚠ Danger

Do not sit nearer than 25 cm from the steering wheel, to allow safe airbag deployment.

⚠ Warning

Do not adjust the driver's seat when the vehicle is moving as the seat could move suddenly causing the driver to lose control.

Seat Positioning

1. Move the seat forwards or backwards by lifting the handle at the front and sliding the seat.
2. Release the handle to engage the latch.

Seat Backrests

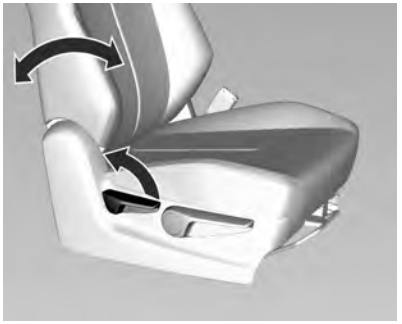

1. Recline the seatback by pulling the lever.
2. Adjust the angle and release the lever.
3. Allow the seat to engage.

Note

Do not lean on the seat when adjusting.

Seat Height

The vehicle may have seat height adjustment.

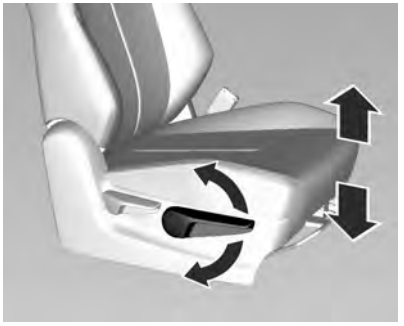

- To lower the seat cushion, push the lever down several times.
- To raise the seat cushion, pull the lever up several times.

Power Seat Adjustment

Seat Positioning

The vehicle may have power seat adjustment.

- Move the seat forwards or backwards by sliding the switch.

Seat Backrests

- Recline the seatback by sliding the switch forwards or rearwards.

Seat Height

- To lower the seat cushion, push the switch downwards.
- To raise the seat cushion, pull the switch upwards.

Heated Front Seats

The vehicle may have heated front seats.

To warm the seat:

1. Start the engine.
2. Press the switch .

   Low heat setting - 1 LED illuminates

   High heat setting - 2 LEDs illuminate

To turn the heater off:

1. Return the switch to the centre position.

   LEDs extinguish

⚠ Warning

If you cannot feel temperature change or pain to the skin, the seat heater may cause burns. To reduce the risk of burns, people with such a condition should use care when using the seat heater, especially for long periods of time. Do not place anything on the seat that insulates against heat, such as a blanket, cushion, cover, or similar item. This may cause the seat heater to overheat. An overheated seat heater may cause a burn or may damage the seat.

Do not fit any seat cover (including genuine Holden accessory covers) to heated seats.

Rear Seats

Folding down rear seatbacks

The vehicle may have rear seats.

⚠ Danger

Ensure the rear seatbacks are securely in place.

Do not adjust the rear seatback while the vehicle is moving. This could cause damage or injuries to the occupants.

Do not allow passengers to sit on the folded seatbacks while the vehicle is in motion. Unrestrained luggage or passengers on a folded seatback could be thrown within or ejected from the vehicle in a sudden stop or accident.

Caution

Do not trap the seat belt when returning the seatback to the upright position.

To fold the rear seatbacks down:

1. Unbuckle the centre seat belt by inserting the ignition key tip into the slot.
2. Allow the belt to retract slowly.

Caution

Do not let go of the unbuckled seat belt until it is fully retracted.

3. Crew cab: pull up on either the single centre, or both outboard seatback release straps.
4. Fold the seatback forwards.

To return the seatback to the upright position:

1. Lift the seatback upwards and push firmly back into place to secure.
2. Reconnect and secure the centre seat belt, making sure it is not twisted.

Armrest

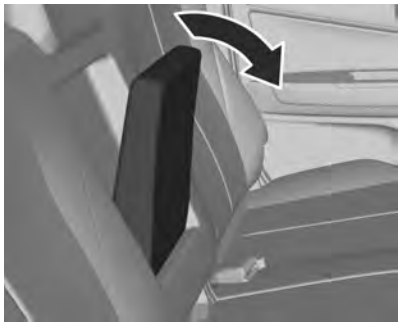

Unfold the armrest by pulling downwards from the top.

Seat Belts

⚠ Warning

Seat belts are designed to bear upon the bony structure of the body, and should be worn low across the front of the pelvis or the pelvis, chest and shoulders, as applicable; wearing the lap section of the belt across the abdominal area must be avoided.

(Continued)

Warning (Continued)

Seat belts should be adjusted as firmly as possible, consistent with comfort, to provide the protection for which they have been designed. A slack belt will greatly reduce the protection afforded to the wearer.

Care should be taken to avoid contamination of the webbing with polishes, oils and chemicals, and particularly battery acid.

Belts should not be worn with straps twisted.

Each belt assembly must only be used by one occupant. It is dangerous to put a belt around a child being carried on the occupant's lap.

No modifications or additions should be made by the user which will either prevent the seat belt adjusting devices from operating to remove slack,

(Continued)

Warning (Continued)

or prevent the seat belt assembly from being adjusted to remove slack.

The belts lock during heavy acceleration or deceleration for the safety of the occupants.

Belt Force Limiters

On front seat three point belts, stress on the body is reduced by the gradual release of the belt during a collision.

Belt Tensioners

In the event of a front, side or rear collision of a certain severity, the driver's and/or front passenger's three point seat belts are tightened.

⚠ Warning

Incorrect handling (e.g. removal or fitting of belts or belt buckles) can deploy the belt tensioners with risk of injury.

- When the belt tensioners have been deployed, illuminates on the instrument panel. See *Seat Belt Reminders* ⇨ *61*.
- Deployed belt tensioners must be replaced.
- Belt tensioners are only triggered once.

⚠ Warning

Do not attach or install objects that may interfere with the operation of the belt tensioners.

Do not make any modifications to belt tensioner components.

Three-Point Seat Belt

Fitting

The belt should not be twisted. It should lie flat and fit firmly across your hips.

1. Withdraw the belt from the reel.
2. Pull the metal tongue across your body into the buckle, until it clicks into place.
3. Tension the lap belt regularly while driving by tugging the shoulder belt.

Do not place objects such as handbags or mobile phones between the belt and your body.

⚠ Warning

The belt must not rest against hard or fragile objects in the pockets of your clothing.

Note

If the shoulder portion of a passenger's seat belt is pulled out all the way, a locking feature may be engaged. If this happens, let the belt go back all the way and start again.

Height Adjustment

1. Pull the belt out slightly.
2. Pull the button outwards.
3. Move up and down as required.
4. Ensure that the anchor clicks into position.

⚠ Warning

Do not adjust the belt while driving.

The belt must lie across the shoulder. It must not lie across the throat or upper arm.

Removing

1. Press the red button on the buckle.
2. Allow the belt to retract.
3. Check that it fully retracts without twisting or turning.

Seat Belt Use During Pregnancy

⚠ Warning

The lap belt must be positioned as low as possible across the pelvis to prevent pressure on the abdomen.

Seat belts work for everyone, including pregnant women. Like all occupants, they are more likely to be seriously injured if they do not wear a seat belt.

A pregnant woman should wear a three point belt with the lap portion of the belt worn as low as possible below the rounding of their stomach, throughout the pregnancy.

Lap Belt

The vehicle may have a lap belt on the centre front seat.

The belt should not be twisted. It should lie flat and fit firmly across your hips.

1. If necessary, loosen the belt by pulling through the loop on the metal tongue.
2. Pull the metal tongue across your body into the buckle, until it clicks into place.
3. Tension the belt by tugging on the free end.

Seat Belt Care

⚠ Warning

Care should be taken to avoid contamination of the webbing with polishes, oils and chemicals, and particularly battery acid.

Cleaning may safely be carried out using mild soap and water.

The belt should be replaced if webbing becomes frayed, contaminated or damaged.

Replacing Seat Belt System Parts after a Crash

⚠ Warning

It is essential to replace the entire assembly after it has been worn in a severe impact even if damage to the assembly is not obvious.

Airbag System

When deployed, airbags inflate within milliseconds. They also deflate so quickly that it is often unnoticeable during the collision.

⚠ Danger

Do not make any modifications to the airbag system.

The driver should sit back as far as possible while still maintaining control of the vehicle. Sitting too close to the airbag can cause death or serious injury when it inflates.

Always wear a seat belt.

⚠ Warning

WARNING – EXTREME HAZARD!

Do not use a rearward facing child restraint on a seat protected by an airbag in front of it!

The child could be seriously injured if the airbag inflates, as the child's head would be very close to the inflating airbag.

Remember that it is safest for children to be seated in the rear seats. See *Child Restraint Systems ⇨ 39*.

⚠ Warning

Airbags are part of the supplemental restraint system (SRS) as they assist, but do not replace seat belts. Airbags do not deploy in every accident. Various factors dictate whether they

(Continued)

Warning (Continued)

deploy including speed, angle of collision and object hit. Airbags are not designed to inflate if the vehicle is hit from the rear or is involved in a rollover. Seat belts must be worn by all passengers whenever the vehicle is moving.

Airbags inflate with great force. If you are too close to an inflating airbag it may cause injury.

Seat belts help keep you in position for airbag inflation in the event of a collision.

See *Airbag and Seat Belt Tensioner Light ⇨ 61*.

Front Airbag System

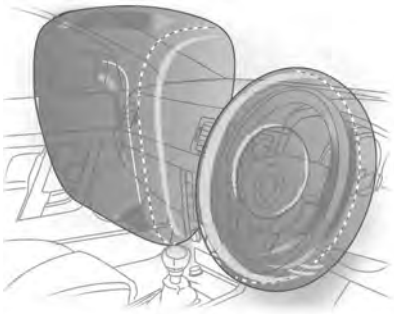

The front airbag system consists of one airbag in the steering wheel and one in the instrument panel on the passenger's side. These can be identified by the word **AIRBAG**.

⚠ Warning

The horn pad must not be covered with adhesive or any other material.

(Continued)

Warning (Continued)

The driver should adjust the seat as far rearward as possible while still maintaining control of the vehicle.

⚠ Warning

Do not place any objects on or over the instrument panel or between an airbag and yourself.

Do not hang anything from the sun visor or mirror.

Passengers must not rest their feet on the instrument panel.

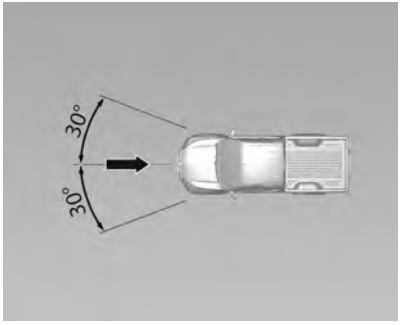

Front airbags will inflate in certain severe frontal or near frontal impacts. Front airbags are not designed to inflate if the vehicle is struck from the side, rear or in rollovers. Always wear a seat belt.

Side Airbag System

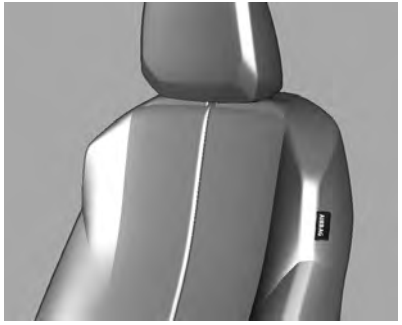

The vehicle may have Side Impact Airbags (SIAB) that are stored in the sides of the front seats, the side closest to the door.

SIAB are identified by the labels with the words **SRS AIRBAG** on the seatback.

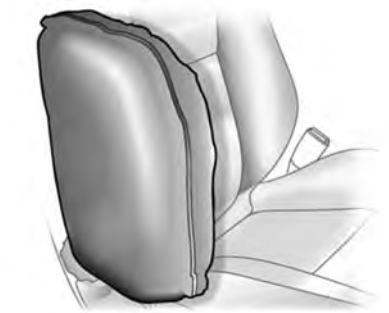

SIAB deploy in most, but not all, severe side impacts.

Because there is limited time available to detect some side impacts, it is not possible to deploy the SIAB in all serious accidents.

A SIAB will deploy in certain severe side impacts. SIAB are not designed to inflate if the vehicle is struck from the front, rear, or in rollovers. Always wear a seat belt.

⚠ Warning

Do not fit unauthorised seat covers as they may impair the deployment of the Side Impact Airbags (SIAB).

Do not position your body or any object (including pillows) between front seats and doors.

Do not lean on, or sleep against, the door. Always sit centrally in the seat.

Always wear a seat belt.

Curtain Airbag System

- Curtain airbags are stored in the roof on each side of the vehicle.
- They can be identified by the word **AIRBAG** on the roof pillars.

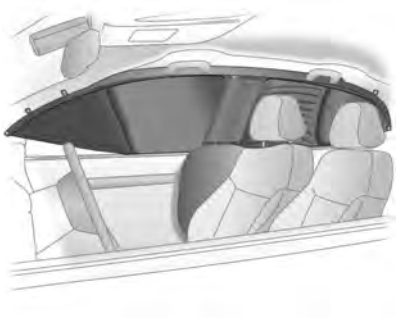

- The curtain airbags deploy in most, but not all severe side impacts.
- The risk of injury to the head in the event of a side impact is considerably reduced.

⚠ Warning

Do not position your body or any object (including pillows) in the area in which the airbag inflates.

There must be no objects in the area in which the airbag inflates.

Refer to the illustration.

(Continued)

Warning (Continued)

Use the hooks above the doors only to hang up light articles of clothing.

Do not place any objects in the pockets of the hanging items.

Do not hold onto the assist grips (above the doors) while seated in the vehicle.

Do not lean on, or sleep against the front or rear doors. Always sit centrally in the seat.

Always wear a seat belt.

Replacing Airbag System Parts after a Crash

Note

After an accident where airbags have deployed, the systems, associated parts and hardware must be checked and replaced as required.

Seats, associated parts and hardware must also be checked and replaced as required.

The airbag system should also be inspected after an accident if:

- The instrument panel area or steering wheel is scratched, cracked or damaged.
- The front seats and upholstery are damaged.
- The headliner or trim panels are damaged.

It is recommended that this work be carried out by a Holden Dealer or approved repairer.

Child Restraints

Child Restraint Systems

⚠ Warning

WARNING – EXTREME HAZARD!

Do not use a rearward facing child restraint on a seat protected by an airbag in front of it!

The child could be seriously injured if the airbag inflates, as the child's head would be very close to the inflating airbag.

Remember that it is safest for children to be seated in the rear seats.

⚠ Warning

SPACE CAB

Do not use child restraints on the front and/or rear seats. These vehicles are NOT fitted with child restraint anchorage points.

SINGLE CAB

Do not use a child restraint on the front passenger's seat. These vehicles are NOT fitted with child restraint anchorage points.

⚠ Warning

This manual provides you with general information concerning child restraints only.

The driver is required by law to ensure that passengers are suitably restrained. In most States and Territories of Australia and New Zealand, specific laws may exist which require children to be seated in approved child restraints and/or in certain locations within the vehicle.

Holden strongly recommends that you refer to your specific State or Territory regulations to determine which child restraint and seat location is suitable for your child.

⚠ Warning

Always ensure that the seat belt fits firmly around the child restraint, as applicable to the type of restraint used.

If a child cannot see out of the window, do not raise him/her by means of an ordinary cushion. It will not stay in place in a collision and the child can slip out of the straps and become entangled.

Child restraint seat belt locking feature

(Crew cab)

The rear seat belts have a child restraint locking feature.

When engaged, this feature prevents the seat belt from being loosened without releasing the buckle.

To engage:

1. Clip the metal tongue into the buckle.
2. Pull the shoulder belt all the way out of the retractor to set the lock. When the retractor lock is set, the belt can be tightened but not pulled out of the retractor.
3. To tighten the belt around the installed child seat, push down on the child restraint, pull the shoulder portion of the belt to tighten the lap portion of the belt and feed the shoulder belt back into the retractor.
4. Try to pull the belt out of the retractor to make sure the retractor is locked. If the retractor is not locked, repeat Steps 2 to 4.
5. To remove, press the release button on the buckle and allow the belt to fully retract.

Selecting the right system

Infants

Rearward facing infant capsules are designed so that in the event of a collision, impact forces will be

evenly spread over the baby's back, with minimal jarring to the vulnerable head and neck area.

Young children

Forward facing child seats are for use when the child is able to sit and easily hold their head upright.

Booster seats

Booster seats are for when children outgrow a typical forward facing child seat, but are still too small for three point seat belts.

⚠ Warning

Always move the passenger's seat as far back as it will go before installing a booster seat. This locates the child as far from the passenger's airbag as possible.

Remember that it is safest for children to be seated in the rear seats.

Older children

A child should use a normal three point seat belt only when:

- They can sit against the back of the rear seat with knees bent comfortably at the edge of the seat.
- The lap belt rests low and snug across the hips, not across the stomach.
- The sash belt is centred on the shoulder and chest.
- They are able to stay seated like this for the entire trip.

Where to Put the Restraint

The vehicle may have child restraint anchorage points.

⚠ Warning

It is safest for children to be seated in the rear seat.

(Continued)

Warning (Continued)

Only child restraints that have clips to attach to the vehicle's anchorage fittings are to be used. Earlier types of child restraints may not attach securely to this type of anchor.

Use only Standards Australia and New Zealand approved child restraints and harnesses. Only purchase a child restraint which carries the appropriate Standards Australia sticker of approval.

Australian States and Territories and New Zealand have laws restricting the seating of children in the front passenger's seat. In most jurisdictions, children under 4 years should not be seated in the front passenger's seat. Check your local road safety regulations before seating a child in the front seat.

(Continued)

Warning (Continued)

Where legally allowable, you may install a forward-facing child restraint in the front seat, but always move the passenger's seat as far back as it will go.

Child restraint anchorages are designed to withstand only those loads imposed by correctly fitted child restraints. Under no circumstances are they to be used for adult seat belts, harnesses, or for attaching other items or equipment to the vehicle.

⚠ Warning

SPACE CAB

Do not use child restraints on the front and/or rear seats. These vehicles are NOT fitted with child restraint anchorage points.

(Continued)

Warning (Continued)

SINGLE CAB

Do not use a child restraint on the front passenger's seat. These vehicles are NOT fitted with child restraint anchorage points.

⚠ Warning

Do not fit a child restraint to a rear folding jump seat or a seat without a child restraint anchorage point.

Note

If unsure about installing a child restraint, contact an approved restraint fitting station or a Holden Dealer.

ISOFIX Child Restraint Systems

(Crew cab)

Fasten vehicle-approved ISOFIX child restraint systems to the ISOFIX mounting brackets.

Note

Ensure that seat belt buckles are placed out of the way of the child seat.

ISOFIX mounting brackets are indicated by a label on the seatback, as shown. In addition to the ISOFIX mounting, fasten the top-tether straps to the top-tether anchorage points. See *Top Tether Child Restraint Systems* ⇨ *43*.

Top-Tether Child Restraint Systems

(Crew cab)

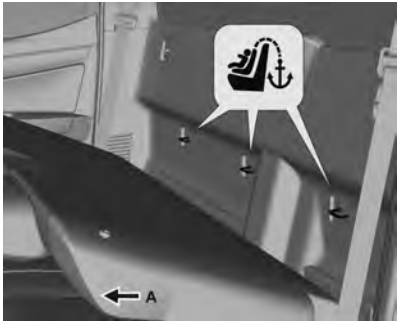

A. Front of vehicle

The child restraint tether anchors are located at the rear of the rear seats in line with the three rear seating positions.

Note

Use the child restraint anchors for their designed purpose only.

Child restraint installation

When using a child restraint, read the installation instructions supplied with the child restraint and follow the directions for fitment carefully.

The child restraint system should be secured in conjunction with the vehicle's seat belt.

Secure the child in the restraint in accordance with the manufacturer's instructions.

If unsure about installing a child restraint anchor fitting, contact an approved restraint fitting station or a Holden Dealer.

Storage

Storage Compartments
Instrument Panel Storage 44
Glovebox 46
Cupholders 46
Underseat Storage 47
Armrest Storage 48

Luggage/Load Locations
Load compartment 48

Additional Storage Features
Tonneau Cover 49

Roof Rack System
Roof Rack System 53

Information on Loading the Vehicle
Information on Loading the Vehicle 53

Storage Compartments

Instrument Panel Storage

The vehicle may have a storage compartment located in the centre of the instrument panel.

- To open, press the button.
- To close, push the lid down until it latches into position.

Caution

Do not leave glasses or flammable items, such as a cigarette lighter, in the compartment when parked in direct sunlight or in hot weather, as they may become very hot.

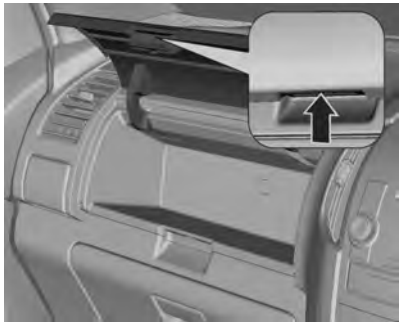

A storage compartment is located on top of the glovebox.

- To open, press the button on the lower front of the lid.
- To close, push the lid down until it latches into position.

A storage compartment is located under the light switch, on the driver's side.

- To open, pull the lid rearwards.
- To close, push the lid until it latches into position.

Front Storage

A storage compartment is located within each door.

The compartment has a bottle holder.

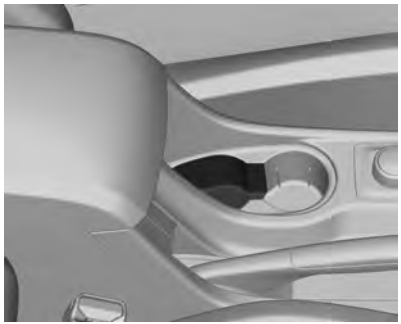

The vehicle may have a storage compartment located between the front seats.

Glovebox

The glovebox is located in the instrument panel, in front of the passenger's seat.

- To open, pull the handle rearwards.
- To close, push the lid firmly back into place.

⚠ Warning

To reduce the risk of injury, always keep the glovebox door closed when driving.

Cupholders

⚠ Warning

To avoid scalding, never place hot drinks in the cupholders.

Do not place uncovered containers of liquid in the cupholder while the vehicle is in motion.

A cupholder is located under each side air vent.

- Pull to open.
- Push to close.

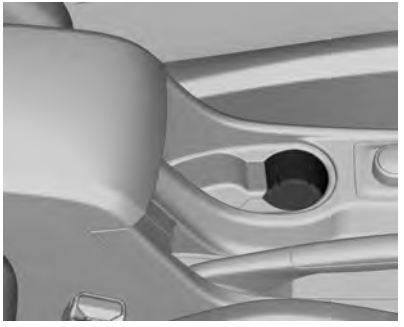

The vehicle may have cupholders located in the centre console, between the front seats.

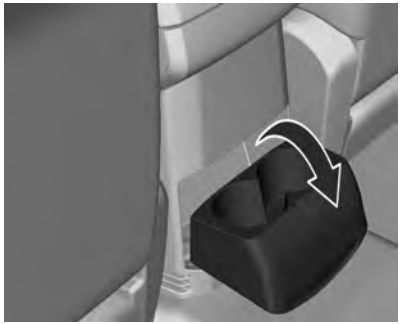

The vehicle may have cupholders located at the rear of the centre console.

- To open, pull the cover downwards.
- To close, push the lid firmly back into place.

Underseat Storage

The vehicle may have rear seat storage compartments.

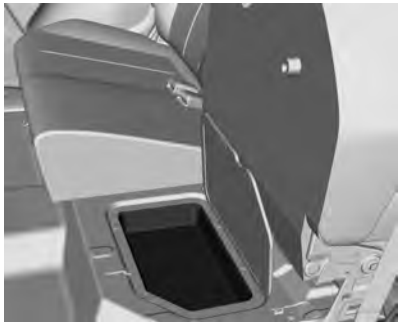

1. To access, lift the seat cushion.
2. To open the storage box, lift the lid.

Sunglasses Holder

The vehicle may have a sunglasses holder.

- To open, push the rear part of the cover.
- To close, pull the cover up and push until it latches into place.

Note

Do not use to store heavy objects.

Armrest Storage

The vehicle may have a storage compartment located within the armrest.

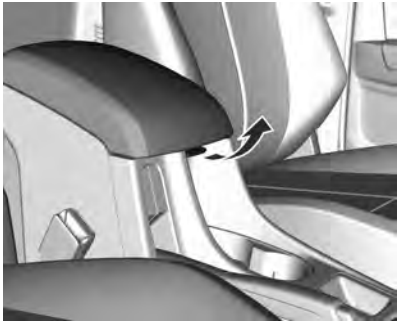

1. To open, lift the latch.
2. Lift the armrest lid upwards.

The USB/AUX socket for the Type 2 infotainment system is located inside the storage compartment.

Luggage/Load Locations

Load compartment

Tailgate

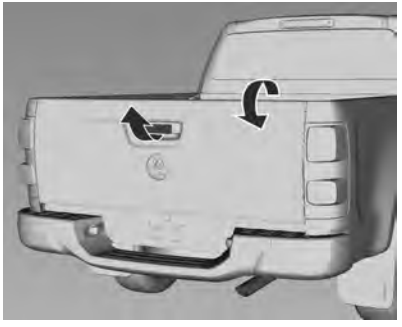

- To open, pull the centre handle and lower the tailgate.
- To close, raise the tailgate and press the upper sides until it engages.

Load Limit on the Tailgate

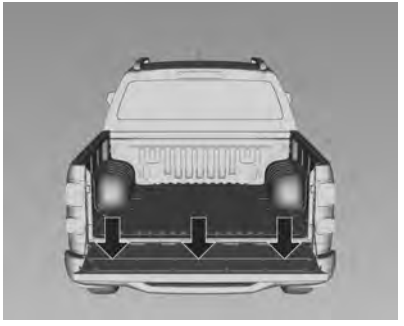

To avoid damage to the tailgate, limit the load placed on it:

- Load placed in a single concentrated area: 100 kg
- Load which is evenly distributed: 150 kg

Load Limit on the Rear Bumper

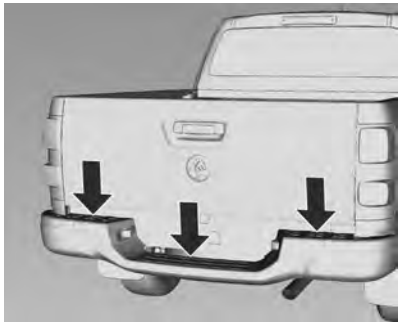

The maximum load on the rear bumper is 100 kg.

Additional Storage Features

Tonneau Cover

Soft Tonneau Cover

The vehicle may have a soft tonneau cover.

The tonneau cover is used to PARTIALLY protect the load compartment and the items inside of it from rain or dirt.

The cover is made of flexible material to facilitate handling, opening and closing.

For cleaning, use only water, mild soap, and a sponge or flannel. Avoid using self-shine products (silicone etc.).

Caution
Never use chemical or abrasive products for cleaning the tonneau cover.

After assembling the tonneau cover set, follow the procedure below for installing:

There are two different types of soft tonneau cover with different installation procedures.

Installation (Tonneau cover 1):

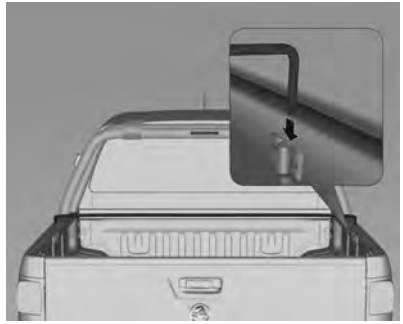

1. Slide the bow through the tonneau bow support bracket.
2. Place the tonneau cover roughly in position with the tags positioned at the sides and rear of the vehicle.

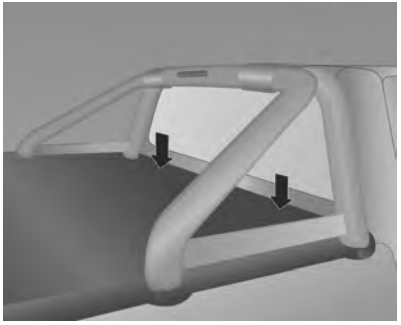

3. Push down along the front edge of the cover until it is secure.

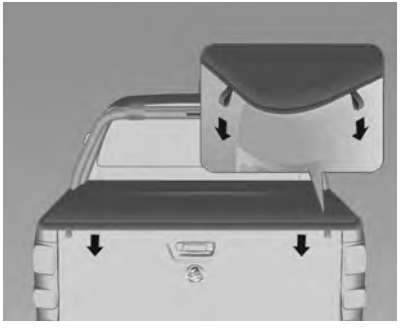

4. Starting from the rear, use the finger loops to pull the cover's plastic strip over the slot provided around the top edge of the load area.
5. Push down with your hands to smooth the rear strip into place along the slot.
6. After the cover is attached at the rear, fit along both sides beginning at the front of the vehicle.
7. Where a sports bar is fitted, wrap the velcro strips around the sports bar on each side and attach.

Note

The cover may be tight to fit when new.

Removal:

1. Using the finger loops provided, remove the cover by pulling the loops out and up.
2. From underneath the cover, remove the bar on one side, by pushing it towards the front of the vehicle and tilting down. The other end of the bar will follow.
3. For storage, fold the cover, ensuring the plastic sides are not bent.
4. Place in a secure location to prevent damage to the cover.

Fitting the Tonneau Cover with High Loads

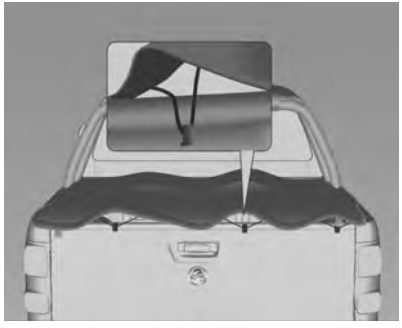

1. Remove the bow if required.
2. Attach the front of the cover. See Soft Tonneau Cover.
3. Lay the remainder of the cover roughly in position.

4. Underneath the cover there is a cord with attaching clips.

   Working around the vehicle, place the clips in the slot provided.

5. To remove the cover, pull the clips out and up.

Installation (Tonneau cover 2):

1. Place one side of the rear cross member into the inner side of the rail.

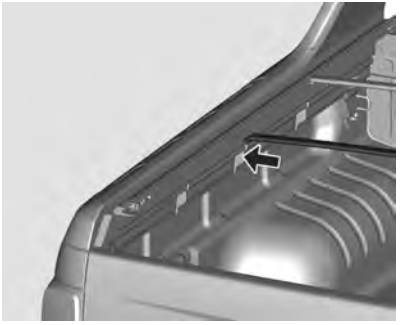

2. Place the other end of the rear cross member into the rail. Align the cross member ends with the existing labels at the top of the rail.
3. Repeat the procedure above for installing the front cross member.

Caution
Never install the tonneau cover without the cross members. They provide support and help water drain more easily.

Caution
Never put weight on the cross members or on any point of the tonneau cover.

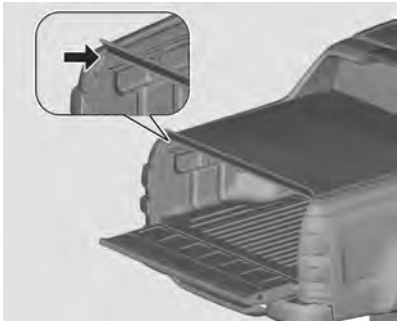

4. Stretch the tonneau cover over the load compartment, fitting the rear beam into the side rail support without locking it.
5. Attach the flexible sides of the tonneau cover rear beam to the side rail support.
6. Lock the tonneau cover bearings to the rail bearings.

Caution
Make sure that both sides of the tonneau cover are fastened to the bearings and rail before locking, in order to avoid damage.

Caution

Before closing the load compartment, make sure the vehicle keys are not inside the load compartment.

To open the tonneau cover, lower the tailgate and pull the release lever down.

Caution

When opening the cover, do not move the lever to the side, only down.

Caution

Lubricate the tonneau cover locking pin monthly.

Caution

When locking or unlocking the tonneau cover, operate the lever gently.

Caution

Do not use the roll bar as a support for bracing the load (if equipped).

Caution

The tonneau cover warranty does not apply in the following cases:

- Damage from collision.
- Damage from carrying sharp, pointed objects or objects exceeding the vehicle bucket height.
- Misuse of the cover fastening system.
- Use of the cover when it is not fully closed.
- Improper cleaning.
- Improper installation.
- Modification of the original product design or removal of the manufacturing series number.

Roof Rack System

- Distribute the load evenly and secure tightly with straps.
- When carrying loads on the roof rack/ladder rack (elevated load), avoid hard braking, abrupt swerving or sharp steering.

  Roof rack/ladder rack elevated loads alter the handling of a vehicle.

⚠ Warning

The total elevated load, including the weight of the cross bars, must not exceed 75 kg. Distribute the load evenly.

Note

The weight of the cross bars/ladder racks and the load must be included when calculating the total vehicle load.

Information on Loading the Vehicle

⚠ Danger

Do not stack objects higher than the front seats.

Do not allow passengers to sit on the folded seatbacks while the vehicle is in motion. Serious injuries or death can result.

- Place all heavy objects in the load compartment as far forward as possible.
- Secure objects to prevent from sliding or being thrown out.

  Movement of heavy objects in the load compartment may change the handling of the vehicle.
- Distribute load weight evenly.
- Adjust the tyre pressures and vehicle speed according to the load conditions. Check and retighten the straps frequently.

  See *Tyre Pressure* ⇨ *233*.
- Place heavier objects at the bottom.
- Do not drive with the tailgate open.
- Under no circumstances should people or animals be on the load compartment while the vehicle is moving.
- Do not exceed the maximum load weights.

  See *Vehicle Weight* ⇨ *230*.
- Do not place any objects on the instrument panel.
- Ensure the backrests are securely engaged.
- Do not place unsecured objects in the passenger compartment.

Instruments and Controls

Instrument Panel Overview
Instrument Panel Overview 55

Controls
Steering Wheel Adjustment 56
Steering Wheel Controls 56
Horn 57
Windscreen Wiper/Washer 57
Power Outlets 58

Warning Lights, Gauges, and Indicators
Warning Lights, Gauges, and Indicators 59
Speedometer 59
Odometer 59
Tachometer 59
Fuel Gauge 60
Engine Coolant Temperature Gauge 60
Turn Signal 61
Seat Belt Reminders 61
Airbag and Seat Belt Tensioner Light 61
Charging System Light 62
Malfunction Indicator Lamp 62
Brake System Warning Light ... 62
Antilock Brake System (ABS) Warning Light 63
Upshift light 63
Four-Wheel-Drive Light 63
Descent Control System 63
Electronic Stability Control (ESC) Indicator Light 63
Electronic Stability Control (ESC) Off Light 64
Pre-Heat Light 64
Engine Oil Pressure Light 64
Low Fuel Warning Light 64
Immobiliser Light 64
High-Beam On Light 65
Front Fog Lamp Light 65
Tail Lamp Indicator Light 65
Cruise Control Light 65

Information Displays
Driver Information Centre (DIC) 65

Vehicle Messages
Vehicle Messages 66
Warning Chimes 66
Battery Voltage and Charging Messages 66
Brake System Messages 67
Cruise Control Messages 67
Door open messages 67
Engine Cooling System Messages 67
Engine Oil Messages 67
Engine Power Messages 68
Fuel System Messages 68
Key and Lock Messages 68
Lamp Messages 68
Ride Control System Messages 69
Airbag System Messages 69
Anti-theft Alarm System Messages 69
Transmission Messages 69
Vehicle Reminder Messages ... 70
Vehicle Speed Messages 71

Trip Computer
Trip Computer 71

Vehicle Personalisation
Vehicle Personalisation 73

Instrument Panel Overview

1. *Electronic Stability Control* ⇨ *63*
2. *Tail Lamp Indicator Light* ⇨ *65*
3. *Tachometer* ⇨ *59*
4. *Immobiliser* ⇨ *64*
5. *Turn Signal* ⇨ *61*
6. *High Beam* ⇨ *65*
7. *Turn Signal* ⇨ *61*
8. *Airbag and Seat Belt Tensioner Light* ⇨ *61*
9. *Seat Belt Reminders* ⇨ *61*
10. *Speedometer* ⇨ *59*
11. *Malfunction Indicator Lamp* ⇨ *62*
12. *Charging System Light* ⇨ *62*
13. *Four-Wheel-Drive Light* ⇨ *63*
14. *Engine Coolant Temperature Gauge* ⇨ *60*
15. *Antilock Brake System (ABS)* ⇨ *63*
16. *Brake System Warning Light* ⇨ *62*
17. *Engine oil pressure* ⇨ *64*
18. *Driver Information Centre (DIC)* ⇨ *65*
19. *Cruise control* ⇨ *65*
20. *Low fuel* ⇨ *64*
21. *Fuel Gauge* ⇨ *60*
22. *Descent Control System (DCS)* ⇨ *171*
23. *Electronic Stability Control (ESC) Off Light* ⇨ *64*
24. *Front Fog Light* ⇨ *65*
25. *Pre-Heat Light* ⇨ *64*

Controls

Steering Wheel Adjustment

⚠ Warning

Do not attempt to adjust the steering wheel while driving.

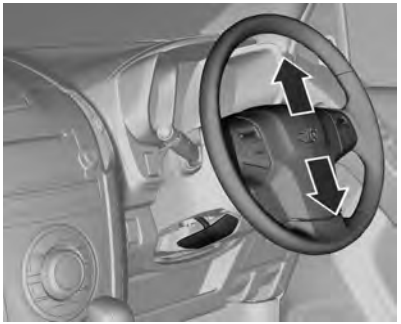

The vehicle may have steering wheel adjustment.

1. To unlock, move the lever down.
2. Adjust the steering wheel.
3. To lock, move the lever up.
4. Ensure the steering wheel is locked in position before driving.

Steering Wheel Controls

The vehicle may have steering wheel controls which can be used to operate the infotainment system.

See Steering Wheel Remote Controls under *Overview* ⇨ *83*.

The vehicle may have cruise control which can be operated by using the controls on the steering wheel.

See *Cruise Control* ⇨ *172*.

Horn

Press .

Windscreen Wiper/ Washer

Windscreen Wiper

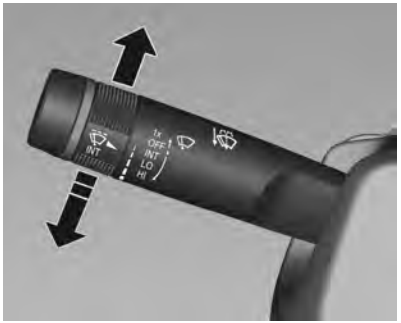

Caution
Do not operate the windscreen wipers on dry glass or when covered with snow or ice, as this will damage the rubber and scratch the glass.

1x : Single wipe

OFF : Off

INT : Intermittent operation

LO : Continuous wipe, slow speed

HI : Continuous wipe, fast speed

For a single wipe of the windscreen when the windscreen wipers are off, push the lever upwards.

Adjustable Wiper Interval

During intermittent operation, adjust the wiper interval:

- For frequent intervals, rotate the wheel downwards.
- For longer intervals, rotate the wheel upwards.

Windscreen Washer

Pull the lever rearwards to wash the windscreen.

Washer fluid is sprayed onto the windscreen and the wipers operate.

Caution

Do not operate the windscreen washer for more than a few seconds or when the washer fluid reservoir is empty.

Do not spray washer fluid on the windscreen in freezing weather.

(Continued)

Caution (Continued)

Switch the wipers off when in a car wash.

Power Outlets

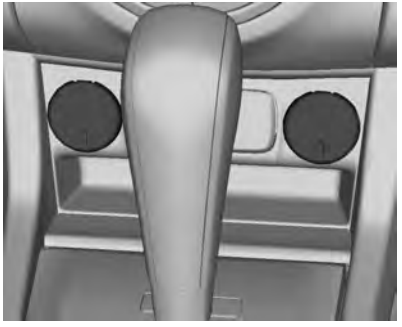

The vehicle may have one or two 12V power outlets located in front of the shift lever and may have one power outlet located at the rear of the centre console.

⚠ Warning

It is dangerous for the driver of a vehicle to attach or remove accessories from the power socket while driving. It may distract the driver's attention, putting the occupants of the vehicle and other road users at risk.

- Do not exceed the maximum power consumption of 120 watts.
- The power outlet is deactivated 10 minutes after the ignition is turned off or a door is opened.
- The power outlet does not operate if the battery voltage is low.
- Do not connect electrical charging devices or batteries.

Warning Lights, Gauges, and Indicators

The following warning lights and reminders may appear on the instrument panel.

A chime sounds with most warning lights and indicators.

Speedometer

Shows vehicle speed in kilometres per hour (km/h).

Odometer

Shows distance travelled in kilometres.

Tachometer

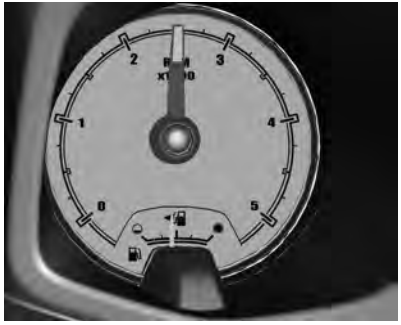

Shows engine speed in thousands of revolutions per minute (RPM).

Drive at a low engine speed/range for each gear, as much as possible.

⚠ Warning

Do not allow the needle to remain in the warning/red zone.

Fuel Gauge

Shows the level of fuel in the tank.

If the fuel level is low:

- illuminates.
- A chime sounds.
- A message is displayed. Refuel immediately.

⚠ Danger

Before refuelling, stop the vehicle and switch the engine off.

Note

- The arrow on the fuel gauge symbol indicates the side of the vehicle the fuel door is on.
- Never run the tank dry.
- If you operate the ignition switch while refuelling, the fuel gauge may not indicate the correct fuel level.
- On inclines, the fuel gauge may not indicate the correct fuel level due to movement of the fuel in the tank.

Engine Coolant Temperature Gauge

Shows the engine coolant temperature.

(**C** = cold, **H** = hot)

If the gauge reading moves towards **H**, the engine is too hot:

- The chime sounds.
- A message is displayed in the Driver Information Centre (DIC). Contact a Holden Dealer.

See *Driver Information Centre (DIC)* ⇨ *65*.

⚠ Warning

Do not continue driving with the temperature gauge needle in the red area. The engine is too hot.

Continued operation of an overheated engine will result in severe engine damage. See *Engine Coolant ⇨ 193*.

Turn Signal

- Push the lever in the same direction the steering wheel is turned.
- ⇦⇨ flashes.

  ⇦⇨ also flashes when the hazard warning is activated.
- If ⇦⇨ flashes quickly, see *Bulb Replacement ⇨ 198*.

See *Fuses ⇨ 204* and *Turn and Lane-Change Signals ⇨ 78*.

Seat Belt Reminders

Driver's Seat Belt Reminder

Driver's seat belt reminder.

When the ignition is turned to the ON position:

- illuminates until the seat belt is fastened.

When the engine is running:

- flashes until the seat belt is fastened.
- If the vehicle reaches a specific distance or speed and the seat belt is unfastened, will flash and the chime will sound for a few seconds, or until the seat belt is fastened.

Front Passenger's Seat Belt Reminder (Crew Cab)

Front passenger's seat belt reminder.

If the front passenger's seat is occupied when the ignition is turned on:

- illuminates until the front passenger's seat belt is fastened.

  See *Three-point seat belt ⇨ 32*.

Airbag and Seat Belt Tensioner Light

- The warning light illuminates for a short time when the ignition is turned on to show that the light is working.
- If the warning light does not illuminate, does not extinguish after few seconds or illuminates while driving, there is a problem with the airbag or belt tensioner system.

⚠ Warning

Have any fault in the airbag or belt tensioner system repaired immediately by a Holden Dealer.

See *Seat Belts* ⇨ *31* and *Airbag System* ⇨ *35*.

Charging System Light

- The warning light illuminates for a short time when the ignition is turned on to show that the light is working.
- If the warning light illuminates while the engine is running, there is a problem with the charging system:

1. Stop the vehicle and switch off the engine.
2. Contact a Holden Dealer.

Malfunction Indicator Lamp

- The warning light illuminates when the ignition is turned on to show that the light is working.
- If the warning light illuminates or flashes while driving, there is a problem with the emission monitoring system. Contact a Holden Dealer.

Brake System Warning Light

- The warning light illuminates for a short time when the ignition is turned on to show that the light is working.
- The warning light illuminates when the park brake is applied. See *Parking Brake* ⇨ *168*.

⚠ Warning

Do not drive while the brake system warning light is on.

If the warning light does not extinguish or illuminates while driving and the park brake is released, there is a problem with the brakes:

- Stop the vehicle as soon as it is safe to do so.
- Check the brake fluid level. See *Brake Fluid* ⇨ *195*.
- Do not proceed until satisfied that braking is possible or that the cause of the problem has been repaired.
- If necessary contact a Holden Dealer.
- If the parking brake is not fully released when the vehicle is moving, after reaching a certain speed, the chime sounds and a message is displayed in the Driver Information Centre (DIC).

Antilock Brake System (ABS) Warning Light

- The (ABS) warning light illuminates for a short time when the ignition is turned on to show that the light is working.

If the light:

- Does not flash or stays on when the ignition key is turned on.
- Remains on while driving.

  Carefully stop the vehicle and turn off the engine.
- If both the (ABS) and the (!) warning lights illuminate, there is a problem with both the ABS and the regular brakes.

  Contact a Holden Dealer immediately.

Note

- The vehicle's brakes will still operate but without the assistance of the ABS.
- See *Antilock Brake System* ⇨ *167*.

Upshift light

(Manual transmission)

The vehicle may have a shift up indicator.

- ▲ SHIFT is displayed on the DIC when an upshift for better fuel economy/performance is recommended.

Four-Wheel-Drive Light

- The indicator light illuminates when the vehicle is operating in four-wheel drive mode (low or high).
- See *Four-Wheel Drive* ⇨ *163*.

Descent Control System

illuminates or flashes green.

Flashes to indicate that the Descent Control (DCS) is activated, reducing the vehicle's speed. This will happen in speeds between 7 km/h and 30 km/h.

Illuminates after pressing the button to indicate that the system is enabled if vehicle speed is below than 50 km/h.

Electronic Stability Control (ESC) Indicator Light

- The warning light illuminates for a short time when the ignition is turned on to show that the light is working.
- The light flashes while driving, to show that the ESC is actively helping the vehicle with road grip and stability.
- If the light illuminates or does not extinguish while driving, contact a Holden Dealer immediately.

- See *Driver Information Centre (DIC)* ⇨ *65* and *Electronic Stability Control (ESC)* ⇨ *170*.

Electronic Stability Control (ESC) Off Light

- The OFF warning light illuminates for a short time when the ignition is turned on to show that the light is working.
- If the light does not illuminate, contact a Holden Dealer.
- OFF illuminates when the ESC is deactivated.
- See *Driver Information Centre (DIC)* ⇨ *65* and *Electronic Stability Control (ESC)* ⇨ *170*.

Pre-Heat Light

- When the ignition key is turned ON, illuminates and will stay illuminated until the engine is sufficiently warmed.
- The preheating system switches on only if the outside temperature is low.
- See *Starting the Engine* ⇨ *158*.

Engine Oil Pressure Light

- The warning light illuminates for a short time when the ignition is turned on to show that the light is working.

If the light illuminates while driving:

- The oil pressure is dangerously low.

  Stop the vehicle as soon as possible and check the engine oil level.
- See *Engine Oil* ⇨ *192*.
- Do not drive the vehicle with the light illuminated. Contact a Holden Dealer.

Caution
Engine damage may result if you keep driving. Do not run the engine. If the oil level is normal, have the system checked by the nearest Holden Dealer.

Low Fuel Warning Light

- The warning light illuminates for a short time when the ignition is turned on to show that the light is working.
- The light illuminates when the fuel tank is approaching empty.

  Add fuel as soon as possible.
- If the engine is run to empty, the fuel system must be bled. See *Diesel Fuel System Bleeding* ⇨ *198*.
- See Fuel types under *Fuel* ⇨ *177* and *Fuel System Messages* ⇨ *68*.

Immobiliser Light

- The warning light illuminates for a short time when the ignition is turned on to show that the light is working.
- If the light remains on, contact a Holden Dealer.
- See *Immobiliser* ⇨ *20*.

High-Beam On Light

The indicator light illuminates when headlamp high beam is on.

See *Headlamp High/Low-Beam Changer* ⇨ *76*.

Front Fog Lamp Light

The vehicle may have front fog lamps.

- illuminates on the instrument panel when the lamps are in use.
- See *Front Fog Lamps* ⇨ *78*.

Tail Lamp Indicator Light

The indicator light illuminates when the tail lamps are on.

See *Exterior Lamp Controls* ⇨ *76*.

Cruise Control Light

The vehicle may have cruise control.

- illuminates on the instrument panel when the cruise control has been set.
- The light extinguishes when cruise control is turned off.
- See *Cruise Control* ⇨ *172*.

Information Displays

Driver Information Centre (DIC)

The DIC is located on the instrument cluster. It displays information about your vehicle. It also displays warning messages if a system problem is detected.

See *Vehicle Messages* ⇨ *66*.

Selecting Functions

The menus and functions can be selected by using the switches on the turn signal lever.

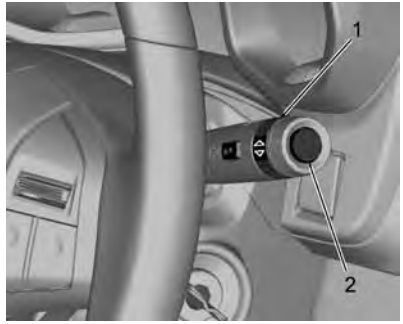

Press the **MENU** button to switch between the following menus.

- Vehicle Information Menu
- Trip/Fuel Information Menu
- ECO Fuel Economy Menu

Use the adjuster wheel (1) to scroll through the items in each menu or to set a numeric value.

Press the **SET/CLR** button (2) to select a function, to change a setting, or to confirm a message.

See *Vehicle Personalisation* ⇨ *73* and *Trip Computer* ⇨ *71*.

Vehicle Messages

Messages are displayed on the DIC or may be audible as a warning chime.

- Not all messages are displayed on all vehicles.
- Some settings can be changed in the personalisation menu.

See *Vehicle Personalisation* ⇨ *73*.

Note

Some of the following messages require immediate action to prevent vehicle or engine damage.

Warning Chimes

Warning chimes may sound.

When Starting the Engine or while Driving

- If a seat belt is not fastened
- If a certain speed is exceeded with the parking brake applied
- If a warning message appears in the DIC
- If the parking assist detects an object
- If parking assist is activated
- If the vehicle speed exceeds the adjusted speed value

When the Vehicle is Parked and/or a Door is Opened

- Until the engine starts, with the key in the ignition switch
- When exterior lights are on with the engine off

Battery Voltage and Charging Messages

Battery Saver Active

This message displays when the vehicle detects that the battery voltage is low. The battery saver system may disable some vehicle features for battery saving and a message is displayed. Turn off unnecessary accessories to allow the battery to recharge.

Low Battery

This message displays when the battery voltage is low.

Service Battery Charging System

This message displays when there is a fault in the battery charging system. Contact a Holden Dealer.

Brake System Messages

Brake Fluid Low

- The message is displayed when the brake fluid level is low.
- See *Brake Fluid* ⇨ *195*.

Release Parking Brake

- The message is displayed when the parking brake is on.
- Release the parking brake while driving the vehicle.

Hill Start Assist is Active

- The message is displayed when Hill Start Assist (HSA) is active and is preventing rollback when driving off, while on an incline.
- See *Hill Start Assist (HSA)* ⇨ *169*.

Reduce Speed for Hill Descent Control

- The message is displayed when Descent Control System (DCS) is active and vehicle speed exceeds 30 km/h.
- See *Descent Control System (DCS)* ⇨ *171*.

Cruise Control Messages

Cruise Set to (...) Km/h

This message displays when the cruise control is set and shows the speed it was set to, see *Cruise Control* ⇨ *172*.

Door open messages

Door Open

The message is displayed when one or more doors are open.

Close the doors completely.

Bonnet Open

The message will display when the bonnet is open.

Close the bonnet completely.

Engine Cooling System Messages

Engine Overheated – Idle Engine

- The message displays and a continuous chime sounds if the engine cooling system reaches unsafe temperatures for operation.
- Stop the vehicle as soon as it is safe to do so and turn the engine off, to avoid severe damage.
- The message clears when the engine has cooled to a safe operating temperature.

Engine Oil Messages

Change Engine Oil Soon

- The message displays when the engine oil needs to be changed.

Oil Pressure Low – Stop Engine

- The message displays if the oil pressure is low.
- Stop the vehicle as soon as it safe to do so and turn the engine off.
- Check the oil as soon as possible. See *Engine Oil* ⇨ *192*.

Caution
Engine damage may result if you keep driving. Do not run the engine. If the oil level is normal, have the system checked by the nearest Holden Dealer.

Engine Power Messages

Engine Power is Reduced

- The message displays when the vehicle's engine power is reduced.

Note

- Although the vehicle may still be drivable, the accelerator input available may be limited, resulting in reduced power.
- Have the problem repaired by a Holden Dealer as soon as possible.

Fuel System Messages

Fuel Level Low

The message displays when the fuel level is low and remains displayed until the fuel tank is filled above the low fuel level.

Water in Fuel – Contact Service

This message displays when the fuel sensor detects water in the diesel fuel. See *Fuel Filter* ⇨ *197* or contact a Holden Dealer.

Key and Lock Messages

Replace Battery in Remote Key

This message displays when the battery in the Remote Keyless Entry (RKE) transmitter needs to be replaced.

Lamp Messages

Check Brake Lamps

This message displays if a brake lamp bulb needs to be replaced.

Check Left Front Indicator Lamp

This message displays if the left front turn signal bulb needs to be replaced.

Check Right Front Indicator Lamp

This message displays if the right front turn signal bulb needs to be replaced.

Check Left Rear Indicator Lamp

This message displays if the left rear turn signal bulb needs to be replaced.

Check Right Rear Indicator Lamp

This message displays if the right rear turn signal bulb needs to be replaced.

Ride Control System Messages

Service ESP

This message displays if there is a problem with the Electronic Stability Control and/or Traction Control system. Contact a Holden Dealer.

ESP OFF

This message displays when the Electronic Stability Control system has been switched off manually by pressing OFF on the instrument panel.

Traction Control ON

This message displays when the Traction Control (TC) system has been switched on manually by pressing OFF on the instrument panel.

Traction Control OFF

This message displays when the Traction Control (TC) system has been switched off manually by pressing OFF on the instrument panel.

Airbag System Messages

Service Airbag

This message displays if there is a problem with the airbag system. Contact a Holden Dealer.

Anti-theft Alarm System Messages

Theft Attempted

This message displays if a theft has been attempted.

While the ignition is on, press **MENU** to clear the message. See *Vehicle Personalisation* ⇨ *73* and *Anti-theft Alarm System* ⇨ *19*.

Service Theft Deterrent System

This message displays if there is a problem with the vehicle security system. Contact a Holden Dealer.

Transmission Messages

Press Clutch to Start Engine

This message displays when someone attempts to start a manual transmission vehicle without pressing on the clutch pedal.

Service Transmission

This message displays if there is a problem with the automatic transmission. Contact a Holden Dealer.

Shift Denied

For automatic transmission, this message displays when the transmission has not shifted to the selected gear, as the current vehicle speed will result in an engine speed outside the suitable range. See *Manual Mode* ⇨ *161*.

Grade Braking Active

For automatic transmission, this message displays when the grade braking feature has been activated while driving on downhill gradients.

The message will only appear the first time the feature activates in an ignition cycle. See Grade Braking under *Automatic Transmission* ⇨ *160*.

Transmission Hot – Idle Engine

This message displays when immediate action by the driver is necessary to prevent transmission failure.

Stop the vehicle as soon as it is safe to do so and turn the engine off.

R

R displays when reverse gear is engaged.

Service 4WD

This message displays when there is a problem with the four-wheel drive system. Contact a Holden Dealer.

4WD Shift in Progress

This message displays while the four-wheel drive system is shifting.

For 4WD Low Shift to Neutral

This message displays if a four-wheel drive shift into Four-Wheel Drive Low is requested and the vehicle speed is correct, but the transmission is not in N (Neutral).

To Exit 4WD Low Shift To Neutral

This message displays if a four-wheel drive shift out of Four-Wheel Drive Low is requested and the vehicle speed is correct, but the transmission is not in N (Neutral).

For 4WD Low Slow to 5 km/h

This message displays if a four-wheel drive shift into Four-Wheel Drive Low is requested but the vehicle speed is too high.

To Exit 4WD Low Slow to 5 km/h

This message displays if a four-wheel drive shift out of Four-Wheel Drive Low is requested but the vehicle speed is too high.

Vehicle In 4WD Low

This message displays if the vehicle is driven in Four-Wheel Drive Low for about 10 minutes above 72 km/h.

4WD OFF

This message displays when the four-wheel drive system is temporarily disabled due to overheating. The vehicle will run in two-wheel drive when this message is present. Once the four-wheel drive system cools down, the message turns off and the four-wheel drive system returns to normal operation.

Vehicle Reminder Messages

Ice Possible. Drive with Care

This message displays when icy conditions are possible.

Vehicle Speed Messages

Selected Speed Limit Exceeded

This message displays when the vehicle speed is greater than the adjusted set speed.

Vehicle Reverse Gear Message

R displays when reverse gear is engaged.

Trip Computer

The trip computer:

- Is located in the Driver Information Centre (DIC).
- Provides information on range, average fuel consumption, driving time, fuel economy trends and top energy consumers.
- Some settings can be reset by pressing **SET/CLR.**

- Press **MENU** to select the Trip/ Fuel menu or the ECO fuel economy menu.

Trip/Fuel Menu

Rotate the adjuster wheel to scroll through the following menu items:

- Digital Speedometer
- Trip
- Fuel Range
- Average Fuel Consumption
- Instantaneous Fuel Consumption
- Average Vehicle Speed
- Outside Air Temperature

Digital Speedometer

- The digital speedometer indicates the vehicle speed.

Trip

- The display shows the current distance travelled since the trip odometer was last reset.
- Reset by pressing and holding **SET/CLR** while the trip odometer is displayed.

- When the maximum value is reached (99999.9), the trip odometer will automatically set to zero.

Fuel Range

The fuel range:

- Displays the approximate distance the vehicle can be driven without refuelling.
- Estimate is based on an average of the vehicle's fuel economy over the recent driving history and the amount of fuel remaining in the fuel tank.

When the fuel range estimate is less than 64 km:

- **Low Fuel Range** is displayed instead of the fuel range estimate
- illuminates
- A chime sounds
- A message is displayed

Note

The range is an estimate only and may vary based on driving style and variation in the fuel gauge reading.

See *Low fuel* ⇨ *64* and *Driver Information Centre (DIC)* ⇨ *65*.

Average Fuel Consumption

- The average fuel consumption is calculated on average fuel consumption, recorded since the last time the menu was reset.
- To reset, press and hold **SET/CLR**.

Instantaneous Fuel Consumption

- The instantaneous fuel consumption display shows the current fuel economy in litres per 100 kilometres (L/100 km).
- This number reflects only the fuel economy that the vehicle has right now and changes frequently as driving conditions change.

Average Vehicle Speed

- The average vehicle speed is calculated on the various vehicle speeds recorded since the last time the menu was reset.
- To reset, press and hold **SET/CLR**.

Outside Air Temperature

The vehicle may have an outside air temperature display in the DIC.

- Displays the outside temperature, measured in degrees Celsius (°C).

ECO Fuel Economy Menu

Rotate the adjuster wheel to scroll through the following menu items:

- ECO index
- Fuel economy
- Economy trend

ECO Index

- The ECO index displays the current fuel economy.
- Keep the bars within the box for best fuel economy.
- Selecting an alternative gear may be necessary.

Fuel Economy

- The average fuel economy can be displayed over the past 100, 500 and 1,000 km.
- Press **SET/CLR** to select the distance.
- The best fuel economy score is displayed.

Economy Trend

- The economy trend statistic display shows the fuel economy for the last 50 km.
- Each bar in the graph represents 5 km.

Vehicle Personalisation

The settings can be personalised in the Driver Information Centre (DIC) and in the Vehicle settings menu in the Infotainment system.

Note

Depending on the vehicle variant, some of the following functions may not be available.

Settings in the DIC

1. Press **MENU** until **Vehicle Information Menu** is displayed.
2. Rotate the adjuster wheel to scroll through the following menu items:

   Speed warning

   Remaining oil life

   Battery voltage
3. To close or to return to the previous page, press **MENU**.

Speed Warning

The speed warning allows a warning signal to be set, at a chosen speed.

To set the speed warning:

1. Press **SET/CLR**.
2. Rotate the adjuster wheel to select **On**.
3. Press **SET/CLR**.
4. Rotate the adjuster wheel to select a speed.
5. Press **SET/CLR** to confirm.

Remaining Oil Life

- Displays the estimate of the oil's remaining useful life.

- If Remaining Oil Life 99% is displayed, that means 99% of the current oil life remains.
- When the remaining oil life is low, the Change Engine Oil Soon message will appear on the display. The oil should be changed as soon as possible.

  See Engine Oil Life System under *Service Information* ⇨ *225*.
- The oil life display must be reset after each oil change. Be careful not to reset the oil life display at any other time. It cannot be reset accurately until the next oil change.

Battery Voltage

- Displays the current battery voltage.

Settings in the Infotainment System

When the infotainment system is on:

- Press ⌂.
- Touch **settings**.

  The settings menu is displayed.
- Touch **vehicle settings**.

  The vehicle settings menu is displayed.
- To scroll through the list, touch ▼ or ▲.
- To make a selection, touch a setting.
- To return to the previous screen, touch ⮌.

The following menus may be displayed:

- **Comfort & convenience**

  Chime volume: Change the volume of the warning chime.

  Personalisation by driver: This allows the selection of the personalisation settings that are specific to each key or otherwise will remain the same, no matter which key was used to enter and start the vehicle.

- **Lighting**

  Exit lighting: Activate or deactivate the exit lighting and change the lighting duration.

- **Power door locks**

  Auto door lock: Activate or deactivate the auto door locking function, to occur after shifting out of P (park) (automatic transmission), or vehicle speed is above approximately 12 km/h (manual transmission).

- **Lock, unlock settings**

  Remote unlock light feedback: Activate or deactivate the light feedback while unlocking.

  Remote lock light & horn feedback: Activate or deactivate the lights and/or horn feedback while locking.

  Remote door unlock: Change the configuration to unlock only the driver's door or all doors while unlocking.

  Relock remotely unlocked doors: Activate or deactivate door locking, when a door is unopened after unlocking.

- **Rear camera option Guidelines**: Select if guidelines to assist reversing are displayed.

- **Vehicle factory settings**: All settings are restored to initial settings.

Lighting

Exterior Lighting
Exterior Lamp Controls 76
Headlamp High/Low-Beam Changer 76
Headlamp Flash 77
Headlight Range Adjustment 77
Hazard Warning Flashers 77
Turn and Lane-Change Signals 78
Front Fog Lamps 78
Reverse Lamps 78
Misted Light Covers 78

Interior Lighting
Instrument Panel Illumination Control 79
Courtesy Lamps 79
Reading Lamps 80

Lighting Features
Entry Lighting 81
Exit Lighting 81
Battery Power Protection 81

Exterior Lighting

Exterior Lamp Controls

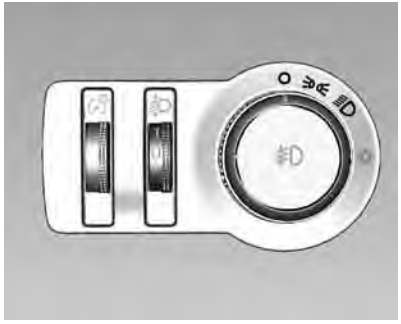

(Off) : Rotate to turn all lamps off.

(Park lamps) : Turns on the park lamps, number plate lamps and instrument panel lamps.

(Headlamps) : Turns on the headlamps and all park lamps.

Note
A chime sounds when the ignition is turned off without removing the key, the driver's door is opened, and the exterior lamps are left on.

Headlamp High/ Low-Beam Changer

To activate high beam, turn the headlamps on then push the lever forwards.

The high beam indicator light illuminates on the instrument panel.

To return to low beam, pull the lever rearwards.

⚠ Warning

Always switch the high beam headlights to low beam when you approach oncoming vehicles or other vehicles ahead. High beam headlights can temporarily dazzle other drivers, which could result in a collision.

Headlamp Flash

To flash the high beam lights, pull the lever rearwards and release.

The lights stay on for as long as the lever is held.

Headlight Range Adjustment

The vehicle may have headlamp range adjustment.

Adjust the headlamp range according to the vehicle load, to ensure illumination of the road ahead.

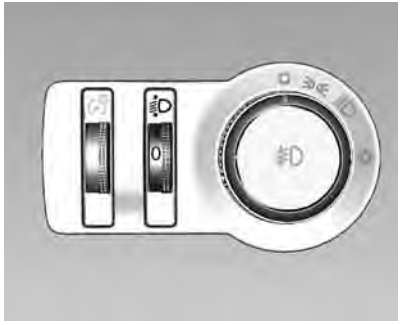

Rotate to the required position:

0 : Front seats occupied

0 or 1 : All seats occupied

2 or 3 : All seats occupied and load compartment laden

Hazard Warning Flashers

Press ⚠ to turn the hazard warning flasher on or off, when the ignition is in any position.

All turn signals flash continuously.

Use the hazard warning flasher if the vehicle becomes a traffic hazard, day or night.

Note

Using hazard warning flashers while the vehicle is moving, is illegal in some States and Countries.

Turn and Lane-Change Signals

Push the lever in the direction the steering wheel is turned.

To signal a lane change, push the lever part way in the direction of the turn. The turn signals will flash three times (six times when a trailer is connected).

To cancel a lane change function, push the lever in either direction.

A green arrow on the instrument panel flashes when the lamps are in operation.

Front Fog Lamps

The vehicle may have front fog lamps.

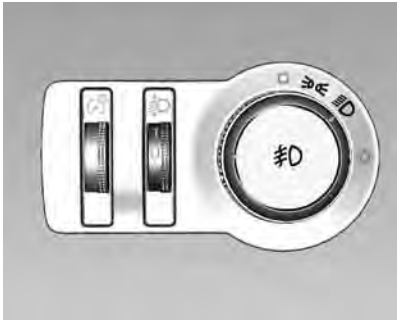

The front fog lamps provide extra illumination to the sides of the road and improve visibility in fog or snow.

To switch the front fog lamps on:

1. Rotate the lamp control to or .
2. Press .

   illuminates on the instrument panel.

Reverse Lamps

The reverse lamps illuminate when the ignition is on and reverse gear is engaged.

R is displayed on the DIC.

Misted Light Covers

Caution
Condensation may temporarily appear on the inside of exterior lamp lenses after rain or washing the vehicle. Condensation occurs when there is a temperature difference between the inside and outside of the lamp allowing a fine mist on the inside surface of the lamp lens. This condensation will disappear when the vehicle is in a dry environment or the lamp is on. If water does collect in the lamp contact a Holden Dealer.

Interior Lighting

Instrument Panel Illumination Control

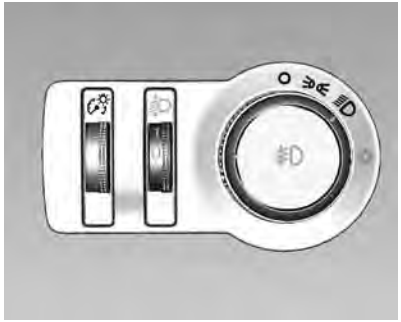

To adjust the instrument lighting brightness:

1. Rotate .
2. Hold until the required brightness is reached.

Courtesy Lamps

Press .

The light automatically switches on when a door is opened and turns off after doors are closed.

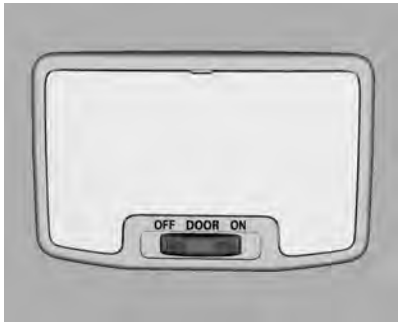

Slide the switch:

OFF : Remains off when doors are opened or closed.

DOOR : Automatically switches on when a door is opened and turns off after doors are closed.

ON : Remains on when doors are opened or closed.

Note

To prevent the battery from discharging, turn the lamp off when the engine is not running.

⚠ Warning

Do not leave the courtesy lamp on while driving in the dark.

Reading Lamps

The vehicle may have reading lamps.

The reading lamps are located between the sun visors.

Type 1

1. Press the light area to turn a lamp on.

   The passenger's or driver's front lamp illuminates.
2. Press again to turn the lamp off.

Type 2

1. Press the button to turn the lamp on.

   The passenger's or driver's front lamp illuminates.
2. Press again to turn the lamp off.

Note

The reading lamps do not illuminate when a door is opened.

Ticket Holder

The vehicle may have a parking ticket holder located between the reading lamps.

Pull downwards slightly to insert a ticket.

Caution

Do not force the holder trying to fit thick amounts of paper or hanging objects, as this may cause the holder to break.

Lighting Features

Entry Lighting

Entry lighting provides additional security when returning to the vehicle at night.

Press on the key. Interior lights illuminate for a short time.

The lighting switches off when the ignition is turned to the ACC position.

Additionally, some interior lights and switches will switch on when the driver's door is opened.

See *Ignition Positions* ⇨ *157*.

Exit Lighting

Headlamps illuminate the way after leaving the vehicle.

1. Switch the ignition off.
2. Remove the ignition key.
3. Open the driver's door.
4. Pull the turn signal lever rearwards.
5. Close the driver's door.

Note

To set the duration of the exit lighting, see *Vehicle Personalisation* ⇨ *73*.

The exit lighting is activated for the set time after the driver's door is closed.

Battery Power Protection

Switching Off Electric Lights

To prevent discharge of the battery when the ignition is switched off, some interior lights are switched off automatically after some time.

If you turn off the ignition with the exterior lights on, they will immediately turn off, but the exterior lights will turn on continuously if you turn them on when the ignition is off.

Infotainment System

Introduction
Infotainment 82
Overview 83
Operation (Type 1) 85

Radio
AM-FM Radio (Type 1) 88

Audio Players
CD Player (Type 1) 91
USB (Type 1) 96
Auxiliary Devices (Type 1) 98

Phone
Bluetooth (Type 1) 102
Hands-Free Phone (Type 1) 104

Introduction
Infotainment 106
Operation (Type 2) 106

Radio
AM-FM Radio (Type 2) 111

Audio Players
Auxiliary Devices (Type 2) 115

Personalisation
Personalisation (Type 2) 128

Phone
Bluetooth (Type 2) 132
Hands-Free Phone (Type 2) 138

Introduction

Infotainment

General Information

Do the following before driving:

- Read the infotainment system section to become familiar with the functions.
- Set up the audio by presetting favourite stations, setting tone and adjusting the speaker settings.

About the System

⚠ Warning

When driving the vehicle, be sure to keep the volume of the unit set low enough to hear sounds from outside the vehicle (e.g. road and traffic conditions).

Caution
Do not place beverages close to the audio system. Do not strike or allow anything to impact the audio system. Damage to the system mechanisms could occur.

Overview

The vehicle may have a Type 1 or a Type 2 infotainment system.

Become familiar with the hard keys on the faceplate and touchsensitive screen buttons.

- Press refers to hard keys.
- Touch, refers to screen buttons.

Display (Type 1)

1. Volume/power button
2. CD eject button
3. CD slot
4. Information display
5. Scan button
6. Auto programming button
7. TUNE FILE/PUSH MODE button
8. Set for menu
9. Menu button
10. USB/AUX button
11. USB/AUX port
12. Text button
13. Seek button (radio)

    Next/previous track button (CD, AUX)

14. Bluetooth® phone button
15. Function buttons
16. Disc button (CD, MP3)
17. FM/AM selection button (radio)

Display (Type 2)

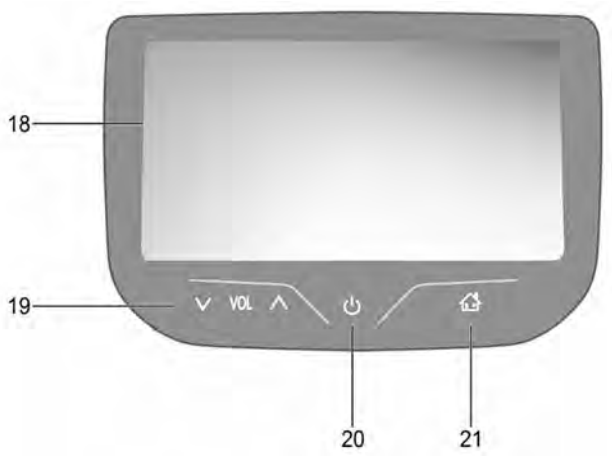

18. Information display
19. Volume buttons
20. Power button
21. Home button

Steering Wheel Remote Controls

The vehicle may have steering wheel remote controls.

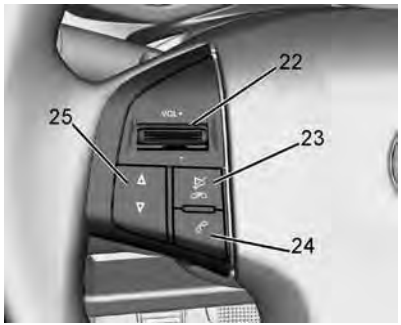

22. Volume switch: Press upwards to increase the volume. Press downwards to decrease the volume.
23. Call end button: Press to end a call.

    Mute: Press to mute the vehicle speakers. Press again to turn the sound on.
24. Call button: Press to answer a call or enter phone mode.
25. Selection button: Change between radio presets. Change between next or previous tracks.

Operation (Type 1)

Power On/Off



1. Press **VOL/PWR** (1) to turn the power on.

   The previous radio station, track or audio source will play.
2. Press **VOL/PWR** (1) to turn the power off.

Volume Control



- Rotate **VOL/PWR** (1) to adjust the volume.

Tone Settings





From the tone settings menu, sound features can be adjusted separately for the FM/AM selection and the other audio player functions.

1. Press **TUNE FILE/PUSH MODE** (7).
2. Rotate **TUNE FILE/PUSH MODE** (7) to select a value.
3. Press a function button (15) to select other features to adjust.











Tone Setup Menu

- Bass: Adjust the bass level from −5 to +5.
- Treble: Adjust the treble level from -5 to +5.
- Balance: Adjust the left/right side speaker balance from left 7 to right 7.

The vehicle may have rear speakers.

- Fader: Adjust the front/rear speaker fader from front 7 to rear 7.
- SE (Sound Effect control): Turn the sound effect on or off to improve the bass and focus.

  (●) is displayed when active.

Select Function

FM/AM Radio





To select between FM and AM stations:

1. Press **FM AM** (17).
2. Press a function button (15) to select a stored station.

   To save a radio station to a preset, see *AM-FM Radio (Type 1)* ⇨ *88*.

CD/MP3/USB or (AUX) input

- Press **DISC** (16) to select CD or MP3.
- Press **USB AUX** (10) to select an auxiliary or USB device.
- Press **MENU** (9).

  Menu options are displayed, when available.

Bluetooth® Hands-Free Phone Device



- To select Bluetooth® phone mode, press **PHONE** (14).
- To exit Bluetooth® phone mode, press **PHONE** (14) again.



- To display Bluetooth® options for the relevant function, press **MENU** (9).

  See *Bluetooth (Type 1)* ⇨ *102*.

⚠ Warning

Do not use a mobile phone when driving.

(Continued)

Warning (Continued)

Make sure that Bluetooth® is activated before driving. If not, stop at a safe place to use a mobile phone.

Setting the Clock

1. Press **SET** (MENU) (9) for more than 2 seconds.

   Setup Menu is displayed.

2. Press the function button (15) below **CLK**.



3. Press the function button (15) below **H** to adjust hours.

   The hour is underlined.
4. Rotate **TUNE FILE/PUSH MODE** (7) to adjust the hours.
5. Press the function button (15) below **M** to adjust minutes.

   The minutes are underlined.
6. Rotate **TUNE FILE/PUSH MODE** (7) to adjust the minutes.
7. Press the function button (15) below **BACK** to store, then press **SET** (MENU) (9) to exit.

   Alternatively, wait approximately 7 seconds to exit.

Radio

AM-FM Radio (Type 1)

Automatic Programming

- Press and hold **SCAN** (5) to store all available radio stations.
- Press to find the next available radio station.
- Press **SCAN** (5) again to cancel search.

Tune/File Button

- Rotate **TUNE FILE/PUSH MODE** (7) to manually search for a radio frequency.

Seek Buttons

- Press **SEEK TRACK** (13) to search for the next radio station.

Preset Buttons

- Press and hold any function button (15) to save the current radio station.

  A beep sounds when the radio station is stored.

- Press a button to select the radio station linked to the preset.

Radio Band Button

- Press **FM AM** (17) to toggle between FM or AM radio.

Listening to a Radio Station

Searching for Radio Stations

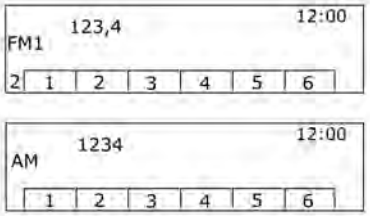

To toggle between FM or AM radio:

- Press **FM AM** (17).

Automatic Station Search



To automatically search for available radio stations with clear reception:

1. Press **SCAN** (5).
2. Press **SCAN** (5) again to cancel.

Seeking

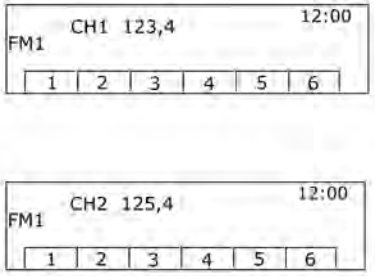

To search for the next radio station:

1. Press **SEEK TRACK** (13).
2. Press **SEEK TRACK** (13) again to find the next radio station, if required.

Searching for a Radio Station Manually





To manually search for a radio frequency:

- Rotate **TUNE FILE/PUSH MODE** (7).

Using the Preset Buttons





To store a radio station to a preset:

- Press and hold a function button (15).

  Six radio stations can be saved in AM mode, six in FM1 mode and six in FM2 mode.

  If adding a new radio station to a function button (15) that already has a radio station linked to it, the previous radio station will be deleted and replaced with the new radio station.

Listening Using a Preset





To listen to a radio station saved to a preset:

- Press a function button (15).

Radio Band Selection

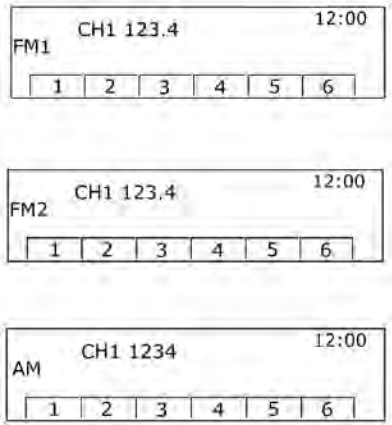

To toggle between FM1, FM2 and AM radio:

- Press **FM AM** (17).

Antenna

The roof antenna can be angled towards the front or the rear of the vehicle.

Caution
Remove the antenna mast by rotating anticlockwise before entering an area with a low ceiling or an automatic car wash. Damage may occur to the antenna or the roof panel.

Audio Players

CD Player (Type 1)

General Information

Caution
If a label is added to a CD, or more than one CD is inserted into the slot at a time or an attempt is made to play scratched or damaged CDs, the CD player could be damaged. Use only CDs in good condition without any labels, load one CD only and keep the CD player and the loading slot free of foreign materials, liquids and debris.

If a description label is required, write on the top of the CD with a CD marking pen.

Caution
Avoid inserting any foreign objects into the slot of the player. Failure to observe this may cause malfunction.

CD-R Format

Sound quality may be reduced due to:

- Method of recording
- Recording quality
- CD handling

Handling CDs

- Avoid leaving fingerprints on the CD when removing it.
- Store any CDs in their protective covers.
- Ensure that CDs are clean and dry before inserting.
- Protect CDs from heat and direct sunlight.
- Insert the disc with the printed side facing up.

Audio System Care

Do not clean using cleaning fluid, alcohol or other solvents. Use only a damp cloth.

CD/MP3

Eject Button

- Press ⏏ (2) to eject a disc.

Tune/File Button

1. Rotate **TUNE FILE/PUSH MODE** (7) to scroll through the track list, menu or MP3/WMA track information.
2. Press **MENU** (9) to display the current selection or current mode.

Information Button

- Press **TEXT** (12) to view available file information for the track being played.

Seek Buttons

- Press **SEEK TRACK** (13) to play the previous or next track.
- Press and hold to fast rewind/ fast forward through the currently playing tracks. Release the button to stop seeking.

Preset Buttons

- Press a function button (15) to select the function shown in the display.

Disc Selection Button

- Press **DISC** (16) to select the CD/MP3 player.

Scan Button

- Press **SCAN** (5) to start scanning through the first 10 seconds of all the tracks/files.

See *Overview* ⇨ *83*.

Inserting a Disc

- Insert the disc with the printed surface facing upwards.



Track 1 will play automatically.

Note

- A non-readable disc will display a disc error message.

Press ⏏ (2) to eject the disc and switch to the previously used mode.

- To play a CD when in a different mode, press **DISC** (16).

Ejecting a Disc

1. Press ⏏ (2) to eject a disc.
2. Remove the disc.

   The audio system will switch to the previously used mode.

Using the CD Menu

Previous/Next Track





To play the previous or next track:

- Press **SEEK TRACK** (13) during play.

Fast Rewind/Reverse





1. Press and hold **SEEK TRACK** (13) during play to rewind or fast-forward through a track.
2. Release the button to resume playing at normal speed.

   The elapsed time is displayed.

File Information











To view information on the current audio CD track:

1. Press **TEXT** (12).
2. Press the function button (15) below PAGE to view more information on the current track.

Note

If no information is available, the previous information will remain displayed.

To view more information on the current MP3/WMA track:

- Press **TEXT** (12) while the track information is displayed.

Note

The information displayed includes the file name, folder name and ID3 Tag information saved with the track.

If incorrect ID3 Tag information (e.g. artist, song title) was added to the MP3/WMA file before burning to disc, this information will be displayed.

Incorrect ID3 Tag information cannot be modified or corrected on the audio system.

- Information for tracks shown in symbols or in unavailable languages may be displayed as —— or not displayed at all.

Changing the Playback Mode



- During play, press **MENU** (9) to display the CD menu.

Repeat



- Press the function button (15) below RPT to turn repeat mode on or off.
- RPT is displayed.
- The current song is repeated.

Random



- Press the function button (15) below RDM to turn random mode on or off.
- When F.RDM is displayed, all tracks in the current folder are played randomly.
- When RDM is displayed, all tracks are played randomly.

Search



- Press the function buttons (15) below < FLD > to move to the required folder.

Root Directory



- Press the function button (15) below ROOT to move to the first track in the root directory or folder 1.
- ROOT is displayed.

USB (Type 1)

General Information

A USB stick can be connected to the USB port.

The USB AUX port (11) is located on the infotainment system.

Tune/File Button with Control

- Rotate **TUNE FILE/PUSH MODE** (7) to scroll through the track list, menu or MP3/WMA track information.

USB AUX Button

- Press **USB AUX** (10) when a USB device is connected to select USB play mode.

USB AUX Port

- Open the cover (11) to access the port.

Information Button

- Press **TEXT** (12) to view available file information for the track being played.

Seek Buttons

- Press **SEEK TRACK** (13) to play the previous or next track.
- Press and hold to fast rewind/ fast forward through the currently playing tracks. Release the button to resume playing at normal speed.

Preset Buttons

- Press a function button (15) to select the function shown in the display.

Connecting a USB Device

1. Open the cover (11) to access the port.
2. Connect the USB device, containing music files, to the USB port using a Micro-USB adapter lead.

Note

- Once reading of the USB device is complete, it will play automatically.
- If a non-readable USB device is connected, an error message will be displayed and the previously used mode will play.
- If the USB device to be played is already connected, press USB **AUX** (10) to select USB. Play will begin from where it previously finished.

Using the USB Menu

The USB menu operation is similar to the CD/MP3 menu operation.

See Using the CD Menu under *CD Player (Type 1)* ⇨ *91*.

Disconnecting a USB Device

- Press the **FM AM** (17) or **DISC** (16) to select another mode.

Note

Disconnect the USB device when the vehicle is turned off. If the ignition is turned on while the USB device is connected, the device may become damaged or may not operate normally in some cases.

AUX Input

1. Open the cover (11) to access the USB/AUX port.
2. Connect an auxiliary device using a 3.5 mm audio jack cable.

USB AUX Button

- Press **USB AUX** (10) when an AUX device is connected to select AUX input mode.

Volume/Power Button

- Rotate **VOL/PWR** (1) to adjust the volume.

Tune/File Button

- Press **TUNE FILE/PUSH MODE** (7) to adjust or select the sound setup mode.

See Tone Settings under *Operation (Type 1)* ⇨ *85*.

Auxiliary Devices (Type 1)

General Information

- Devices able to be connected to the infotainment system are iPod® devices, USB sticks and MP3 players.
- Connect using either the USB port or the 3.5 mm socket.

USB Player

Cautions when using USB Devices

- Operation cannot be guaranteed if a HDD USB mass storage device or a CF or SD memory card is connected using a USB adaptor. Use a USB flash memory type storage device.
- Avoid static electricity when connecting or disconnecting the USB device. Avoid connecting and disconnecting over a short period of time.
- Avoid touching the USB connecting terminal with any objects or fingers.
- The USB device can only be recognised when it is formatted in FAT16/32 file format.
- Recognisable file name extensions include MP3/WMA files with mp3, .wma, .MP3 or .WMA.
- Only devices with an allocated unit size of 512 Byte/Sector or 2,048 Byte/Sector can be used.
- ID3 tag (version 1.0, 1.1, 2.2, 2.3, 2.4) information for MP3 files can be displayed.
- MP3 files which use VBR can be played.
- A maximum of 64 characters can be recognised for folder or file names.
- Music files to which DRM (Digital Right Management) is applied cannot be played.
- Depending on the type and capacity of the USB device and the type of stored files, the time it takes to recognise the files may vary.
- Do not disconnect the USB device while it is being played.

  This may damage the product or affect the performance of the USB device.
- Disconnect the USB device when the vehicle is turned off. If the ignition is turned on while the USB device is connected, the device may become damaged or may not operate normally in some cases.

Caution
USB storage devices can only be connected to this product for the purpose of playing music files.
(Continued)

Caution (Continued)

The product's USB terminal should not be used to charge USB accessory equipment since the heat generation using the USB terminal may cause performance issues or damage to the product.

- Damaged music files may be cut off during playback or might not play at all.

iPod®

All audio media types that are supported by the iPod® can be played.

Note

Connecting an iPod® when the infotainment system is off turns the system on in iPod® mode and plays the track last played on the iPod®.

Tune/File Button

- Rotate **TUNE FILE/PUSH MODE** (7) to scroll through the track list, menu or track information.

Information Button

- Press **TEXT** (12) to view available file information for the track being played.

Seek Buttons

- Press **SEEK TRACK** (13) to play the previous or next track.
- Press and hold to fast rewind/ fast forward through the currently playing tracks. Release the button to stop seeking.

Preset Buttons

- Press a function button (15) to select the function shown in the display.

Connecting an iPod®

1. Open the cover (11) to access the USB/AUX port.
2. Connect the iPod® to the USB port using the USB cable supplied with the iPod® and a Micro-USB adaptor cable.



- The iPod® is automatically detected by the system.

  Reading is displayed.



- During playback, repeat, random, play, pause and browse functions are displayed.

Previous/Next Track





To play the previous or next track:

- Press **SEEK TRACK** (13) during play.

Fast Rewind/Reverse





1. Press and hold **SEEK TRACK** (13) during play to rewind or fast-forward through a track.
2. Release the button to resume playing at normal speed.

   The elapsed time is displayed.

File Information



1. Press **TEXT** (12) to view available file information for the track being played.
2. Press again to display available information for the track.

Note

If ▶ displays at the end of the information, press the function button (15) below PAGE to view additional text.

Repeat



- Press the function button (15) below RPT to turn repeat mode on or off.
- RPT is displayed.
- The current track is repeated.

Random



- Press the function button (15) below RDM to turn random mode on or off.
- When A.RDM is displayed, all tracks in the current selection are played.
- When RDM is displayed, all tracks are played randomly.

Pause



1. Press the function button (15) below ► ‖.

   PAUSE is displayed.
2. To resume playback, press the button again.

Search

1. Press a function button (15) below BROWSE.



2. Rotate **TUNE FILE/PUSH MODE** (7) to scroll through the menu.

   Select from Playlists, Artists, Albums, Songs, Podcasts, Genres, Composers and Audiobooks.
3. Press **TUNE FILE/PUSH MODE** (7) to make selections.
4. Press the function button (15) below BACK to return to the previous screen.

Phone

Bluetooth (Type 1)

General Information

Bluetooth® allows users with a Bluetooth® enabled mobile phone to make and receive hands-free calls using the vehicle's infotainment system and controls.

It is not possible to listen to music through Bluetooth® audio. Devices must be connected through the USB AUX port (11).

The Bluetooth® enabled mobile phone must be paired to the vehicle's infotainment system before it can be used in the vehicle.

Not all phones will support all functions. For more information visit: www.holden.com.au.

The following symbols may be displayed at the top of the infotainment screen:

: Bluetooth® device connected

: Mobile phone signal strength

⚠ Warning

Do not use a mobile phone when driving.

Make sure that Bluetooth® is activated before driving. If not stop at a safe place to use a mobile phone.

Phone Button

- Press **PHONE** (14) to select Bluetooth® phone mode.
- Press **PHONE** (14) again to exit phone mode.

Menu Button

- Press **MENU** (9) to switch between Dialling and Bluetooth® menus.

See *Overview* ⇨ *83*.

Phone Menu



- Press the function button (15) below the required function:

  PAIR: See Pairing a Bluetooth® device later in this chapter.

  BOOK: This feature is not supported.

  CELL: Displays information on the connected device.

  INFO: Displays Bluetooth® phone system information.

Pairing a Bluetooth® Device

1. Press **PHONE** (14) to select Bluetooth® phone.

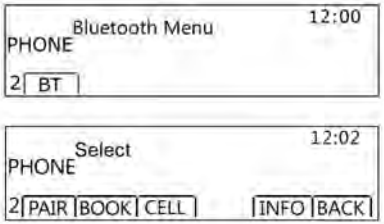

2. Press **MENU** (9) to select Bluetooth Menu.
3. Press the function button (15) below **BT** to view available functions.
4. Press the function button (15) below **PAIR** to register the phone to the system.
5. Set up the Bluetooth® device to connect from the Bluetooth® Menu to enable other devices to search for the Bluetooth® device.
6. Search for Holden on the Bluetooth® device to be connected and initiate the pairing process on the device.

Note

Only one Bluetooth® device can be paired to the infotainment system at one time.

7. Enter the Passkey code displayed on the infotainment screen into the device, if prompted.

   Completed! is displayed when pairing is successfully completed.

8. Press **PHONE** (14) to exit.

Note

If connection is unsuccessful, try again. If it still does not work, reinstall the phone battery and reconnect.

To delete a device:

1. Press **PHONE** (14).
2. Press the function button (15) below **BT**.
3. Press the function button (15) below **CELL**.
4. Press the function button (15) below **DEL**.

5. Press the function button (15) below **YES**.

To change the code (passkey):

1. Press **PHONE** (14).
2. Press **MENU** (9) to view **BT** on the display.
3. Press the function button (15) below **BT** to view Select Menu.
4. Press the function button (15) below **INFO** to view device information.
5. Press the function button (15) below **EDIT** to view the Passkey edit screen.
6. Rotate **TUNE FILE/PUSH MODE** (7) to change the number.
7. Press the function button (15) below <**CURSOR** >.
8. Press the function button (15) below **SAVE**.

Hands-Free Phone (Type 1)

Receiving Calls



1. Connect the Bluetooth® device. See *Bluetooth (Type 1)* ⇨ *102*.



When receiving a call, the phone will ring and information may be displayed.

Note

The ringtone may be transferred to the vehicle speakers, depending on the model of mobile phone.

The ringtone volume is adjustable by rotating **VOL/PWR** (1) while ringing.

2. Press the function button (15) below CALL to answer the call.

Ending Calls



- To hang up, press **PHONE** (14) or press the function button (15) below END.

Transferring Calls

- To transfer to private mode, use the functions on the phone.
- To transfer back to hands-free mode, press **PHONE** (14).

Making Calls

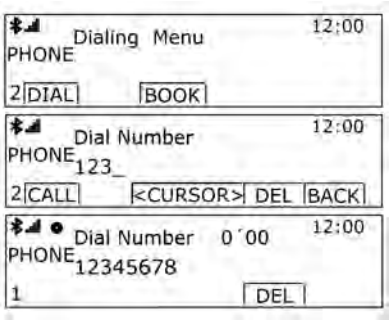

1. Press **PHONE** (14).
2. Press the function button (15) below DIAL.
3. Rotate **TUNE FILE/PUSH MODE** (7) to select a number.
4. Press **TUNE FILE/PUSH MODE** (7) to make a selection.
5. Repeat Steps 3 and 4 to enter the entire number.
6. Press the function button (15) below CALL to dial the number.

Editing Numbers



1. Press the function button (15) below <CURSOR> to select the number to be changed.
2. Press the function button (15) below DEL or select and delete by rotating then pressing **TUNE FILE/PUSH MODE** (7).

Microphone Adjustment



- To adjust the microphone level during a call, press the function button (15) below ∨ MIC ∧ .
- Press ∨ or ∧ to adjust the level between -5 and +5.

Introduction

Infotainment

General Information

Do the following before driving:

- Read the infotainment system section to become familiar with the functions.
- Set up the audio by presetting favourite stations, setting tone and adjusting the speaker settings.

About the System

⚠ Warning

When driving the vehicle, be sure to keep the volume of the unit set low enough to hear sounds from outside the vehicle (e.g. road and traffic conditions).

Caution

Do not place beverages close to the audio system.

Do not strike or allow anything to impact the audio system.

Damage to the system mechanisms could occur.

Operation (Type 2)

Power On/Off

- To turn the infotainment system on, press and hold ⏻ (20).

  The previous mode will be displayed.
- To turn the infotainment system off, press and hold ⏻ (20).

Time, date and temperature are displayed.

Note

The temperature is only displayed when the ignition is switched on.

Automatic On/Off

When the ignition key is in the ACC or ON position, the infotainment system turns on automatically.

When the ignition key is in the OFF position when a door is opened, the infotainment system switches off automatically.

Note

While the ignition is off, if the infotainment system is turned on by pressing and holding ⏻ (20), it will automatically turn off 10 minutes from the last operation.

Volume Control

- To adjust the volume, press ∨ or ∧ (19).

The sound volume is indicated on the display.

- Alternatively, press **+** or **-** on the steering wheel remote controls.
- When turning the infotainment system on, the volume level will be set to its previous selection (when it is less than the maximum starting volume). Refer to Max Startup Volume under *Personalisation (Type 2)* ⇨ *128*.
- If the volume level is louder than maximum starting volume level when the infotainment system is turned on, the level is adjusted automatically to the maximum starting volume level.

Mute

- To mute the sound, press ∨ or ∧ (19) then touch 🔇.
- To turn mute off, touch ∨ or ∧ (19).

- Alternatively, press on the steering wheel remote controls to turn mute on or off.

Auto Volume Control

The volume of the infotainment system adjusts depending on the vehicle's speed.

As the vehicle's speed increases, the volume of the infotainment system also increases to compensate for the driving noise.

1. Press (21).
2. Touch **settings**.
3. Touch **radio settings**.
   auto volume is displayed.

4. Touch < or > to select Off, Low, Medium or High.

Using the HOME Menu

1. Press (21).

2. Select from the following menu.

- Touch **audio** to select FM/AM, USB storage device, iPod®, Bluetooth® music or auxiliary sound.
- Touch **picture & movie** to view a picture, movie or auxiliary video.
- Touch **phone** to activate phone features (if connected).
- Touch **smartphone link** to activate an application through a connected smartphone.
- Touch **settings** to enter the system setup menu.

Selecting Function

Audio

1. Press ⌂ (21).
2. Touch **audio**.

3. Touch **Source** ▼.

   Touch **AM** to select AM radio.

   Touch **FM** to select FM radio.

   Touch **USB** to select USB.

   Touch **AUX** to select an auxiliary source.

   Touch **Bluetooth** to play Bluetooth® music.

   Touch **iPod** to select iPod® or iPhone®.

4. Touch ⮌ to return to the HOME menu.

Note

If a USB, iPod®, Bluetooth® or other auxiliary device is not connected to the infotainment system, the function is greyed-out/not listed and is not available.

See *AM-FM Radio (Type 2)* ⇨ *111* and *Auxiliary Devices (Type 2)* ⇨ *115*.

Picture and Movie

1. Press ⌂ (21).
2. Touch **picture & movie**.

3. Touch **Source** ▼.

   Touch **USB (picture)** to view picture files from a USB storage device.

   Touch **USB (movie)** to view movie files from a USB storage device.

   Touch **AUX (movie)** to view movie files from an auxiliary video (AUX) device.

4. Touch ⮌ to return to the HOME menu.

Note

- If a USB storage device containing picture or movie files, or an AUX device, is not connected to the infotainment system, the function is greyed-out and is not available.
- Movies are not available while the vehicle is in motion.

See Picture System under *Auxiliary Devices (Type 2)* ⇨ *115*.

Phone

1. Connect a Bluetooth® phone to the infotainment system.
2. Press ⌂ (21).
3. Touch **phone**.

4. Touch ⮌ to return to the HOME menu.

Note

See Pairing and connecting a Bluetooth® device under *Bluetooth (Type 2)* ⇨ *132*.

Smartphone Link

1. Install the smartphone application on the smartphone.
2. Connect the smartphone through the USB port or Bluetooth®.

   iPhone®: USB connection.

   Android phone: Bluetooth® wireless technology.
3. Press ⌂ (21).
4. Touch **smartphone link**.

5. Touch ⮌ to return to the HOME menu.

See Smartphone Link under *Bluetooth (Type 2)* ⇨ *132*.

Settings

1. Press ⌂ (21).
2. Touch **settings**.

See *Personalisation (Type 2)* ⇨ *128*.

Radio

AM-FM Radio (Type 2)

1. Press ⌂ (21).
2. Touch **audio**.

3. Touch **Source** ▼.
4. Touch **AM** or **FM**.
   The last station is displayed.
5. Touch ⮌ to return to the HOME menu.

Automatic Station Search

To automatically search for available radio stations with clear reception:

- Touch ⏮ or ⏭.
- Touch and drag left or right of the radio station.
- Press and hold △ or ▽ on the steering wheel remote controls.

Manual Station Search

1. Touch ◀ or ▶ repeatedly.

Note

The radio tune bar must be turned off.

Using the Preset Buttons

Saving a Preset

1. Select **FM** or **AM**.
2. Tune to a radio station.

3. Touch < or > to select a favourite preset page.
4. Touch and hold any of the preset buttons to save.

Note

- Up to seven favourite pages can be saved and each page can store up to five radio stations.
- To change a preset, tune to another radio station and touch and hold the button to save.

Listening Using a Preset

To select a favourite preset page:

1. Touch < or > repeatedly.
2. Touch a preset button.

Autostore

Radio stations with the best reception quality can be stored automatically:

1. Select **FM** or **AM**.
2. Touch **AS**.
3. Touch and hold **AS** to update the FM/AM autostore stations.

To listen to an AS station:

1. Select **FM** or **AM**.
2. Touch **AS**.
3. Touch < or > to select an autostore page.
4. Touch a preset button.

Note

If AS is pressed when there are no stored radio stations, the FM/AM autostore will be updated.

Viewing Station Information

1. Touch the radio station.

The available radio station information, including frequency, is displayed.

Using the FM/AM Radio Menu

1. Select **FM** or **AM**.
2. Touch **MENU**.

3. Touch a menu item to make a selection or to view more details.
4. Touch ⮌ to return to the previous menu.

Favourite List

1. Select **FM** or **AM**.
2. Touch **MENU**.
3. Touch **favourite list**.

4. Touch ▲ or ▼ to scroll through the list.
5. Touch a radio station to make a selection.

FM/AM Station List

1. Select **FM** or **AM**.
2. Touch **MENU**.
3. Touch **FM station list** or **AM station list**.

4. Touch ▲ or ▼ to scroll through the list.
5. Touch a radio station to make a selection.

Update the FM/AM Station List

1. Select **FM** or **AM**.
2. Touch **MENU**.
3. Touch **update FM station list** or **update AM station list**.

The station list is updated.

4. Press **Cancel** to stop saving changes.

Tone Settings

1. Select **FM** or **AM**.
2. Touch **MENU**.
3. Touch **tone settings**.

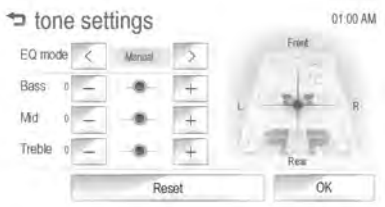

EQ (equaliser): Touch < or > to select or turn off the sound style.

Touch **-** /**+** to adjust the sound style manually.

Bass: Adjust the bass level from −12 to +12.

Mid (mid-range): Adjust the mid-range level from -12 to +12.

Treble: Adjust the treble level from −12 to +12.

Fader: Adjust the front/rear speaker balance by touching and dragging the dot in the vehicle interior image.

Balance: Adjust the left/right speaker balance by touching and dragging the dot in the vehicle interior image.

Reset: Restore the settings back to the default settings.

4. Press **OK** to store.

Antenna

Caution
Remove the antenna mast by rotating anticlockwise before entering an area with a low ceiling or an automatic car wash. Damage may occur to the antenna or the roof panel.

Audio Players

Auxiliary Devices (Type 2)

Audio/Picture/Movie/Auxiliary Device System

The system can play the music files contained in the USB storage device or iPod/iPhone products.

Cautions when Using MP3/WMA/OGG/WAV Files

- This product can play music files with .mp3, .wma, .ogg, .wav file name extensions.
- While this product can play files with 8kbps ~ 320kbps bit rate, files with a bit rate above 128kbps will result in higher quality sound.
- ID3 Tag information (version 1.0, 1.1, 2.2, 2.3 or 2.4) for MP3 files such as the album name and the artist.

Cautions when using a USB storage device, iPod® or iPhone®

- Operation cannot be guaranteed if the HDD, USB mass storage device, CF or SD memory card is connected using a USB adaptor.
- Avoid static electricity when connecting or disconnecting the USB. Avoid connecting and disconnecting repeatedly over a short period of time.
- Operation is not guaranteed if the connecting terminal of the USB device is not metal.

Caution
In rare cases, a USB stick (thumb drive) may not be recognised by the system or may cause a malfunction.

- Avoid touching the USB connecting terminals with any objects or fingers.
- The USB storage device can only be recognised when it is formatted in FAT16/32, exFAT file system.
- Depending on the type and capacity of the USB device and the type of stored files, the time it takes to recognise the files may vary.
- Do not disconnect the USB storage device while it is being played. This may damage the product or affect the performance of the USB device.
- Disconnect the USB device when the vehicle is turned off. If the ignition is turned on while the USB storage device is connected, the device may become damaged or may not operate normally in some cases.
- A USB device can only be connected for the purpose of playing music, movies, viewing photo files or upgrading.

Caution
The USB port should not be used to charge USB accessory equipment as the heat generation using the USB terminal may cause performance issues or damage to the product.

- Music files to which DRM (Digital Right Management) is applied cannot be played.
- This product can support USB storage devices that contain 2,500 music files, 2,500 photo files, 250 movie files, 2,500 folders and 10 stages of folder structure.

  Normal usage cannot be guaranteed for storage devices that exceed this limit.
- Some iPod® or iPhone® models may not support all the functionality of the infotainment system.

- An iPod® or an iPhone® can play all music files supported. Music file lists display up to 2,500 files on the screen in alphabetical order.
- Only connect an iPod® or iPhone® to the USB port with connection cables supported by iPod® and iPhone® products.
- When an iPod® or iPhone® is connected to the USB port using an iPod®/iPhone® cable, Bluetooth® music is not supported.
- To play a movie file, connect an iPod® or iPhone® to the AUX input by using an AUX cable for an iPod®/iPhone®.

  When an iPod® or iPhone® is connected to the USB port, movie files will not play.
- Playing order, method and information, displayed on the infotainment system may differ from information displayed on the iPod® or iPhone®.

Connecting a USB Device

The USB/AUX socket is located inside the storage compartment.

1. Open the cover.
2. Connect the USB to the USB port.

Audio System

Music files contained on a USB storage device, iPod® or iPhone® can be played on the infotainment system.

USB Port

Connect a USB storage device containing music files to the USB port. See Connecting a USB Device previously in this chapter.

Note

- Once reading of the USB storage device is complete, it will play automatically.
- If a non-readable USB storage device is connected, an error message will be displayed and the previously used mode or FM radio will play.

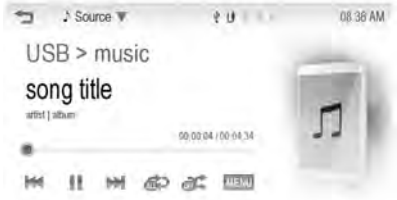

If the USB storage device is already connected to the infotainment system:

1. Press ⌂ (21).
2. Touch **audio**.
3. Touch **Source** ▼.
4. Touch **USB**.

Ending USB Music Playback

1. Touch **Source** ▼.
2. Select another mode by touching AM, FM, AUX or Bluetooth®.
3. Remove the USB storage device.

Pause

- Touch ❚❚ during play.
- Touch ▶ to resume play.

Playing the Next Track

- Touch ⏭ to play the next track.

Playing the Previous Track

- Touch ⏮ within 5 seconds of play.

Returning to the Beginning of the Current Track

- Touch ⏮ after 5 seconds of play.

Scanning Forwards or Backwards

- Touch ⏭ or ⏮ during play.
- Release the button to resume play at normal speed.

Playing Tracks Repeatedly

- Touch OFF during play:

  1: Plays the current track repeatedly.

  ALL: Plays all tracks repeatedly.

  OFF: Returns to normal play.

Playing Tracks Randomly

- Touch OFF during play:

  ON: Plays all tracks randomly.

  OFF: Returns to normal play.

Viewing Information on a Playing Track

- Touch the title during play.

- Available information displayed may include the title, artist, album, file name and folder name.
- Incorrect information cannot be modified or corrected.
- Some symbols or unavailable languages may be displayed as □.

Using the USB Music Menu

1. Touch **MENU** during play.

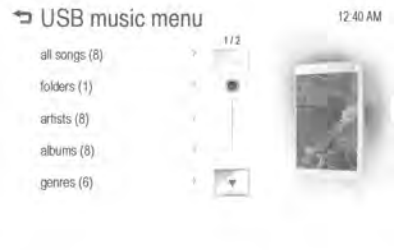

   The number of songs in each play mode is displayed.
2. Touch the desired play mode.

Tone Settings

1. Touch **MENU** during play.
2. Touch ▲ or ▼ to scroll through the list.
3. Touch **tone settings**.

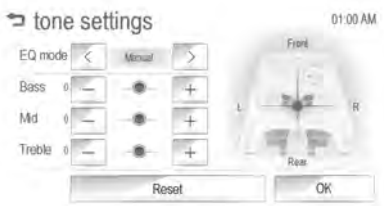

For further information, see Tone Settings under *Operation* ⇨ *106*.

iPod®/iPhone® Player

Connect an iPod® or iPhone® containing music files to the USB port.

Note

- Once reading of the iPod® or iPhone® is complete, it will play automatically.
- If a non-readable iPod® or iPhone® is connected, an error message will be displayed and the previously used mode or FM radio will play.

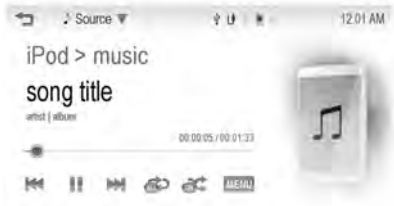

If the iPod® or iPhone® is already connected:

1. Press ⌂ (21).
2. Touch **audio**.
3. Touch **Source** ▼.
4. Touch **iPod** to play from the iPod® or iPhone®.

Ending iPod®/iPhone® Playback

1. Touch **Source** ▼.
2. Select another mode by touching AM, FM, AUX or Bluetooth®.
3. Remove the iPod®/iPhone® device.

Pause

- Touch ❙❙ during play.
- Touch ▶ to resume play.

Playing the Next Track

- Touch ⏭ to play the next track.

Playing the Previous Track

- Touch ⏮ within 2 seconds of the start of the track.

Returning to the Beginning of the Current Track

- Touch ⏮ after 2 seconds of the start of the track.

Scanning Forwards or Backwards

- Touch and hold ⏭ or ⏮ during play.
- Release the button to resume play at normal speed.

Playing Tracks Repeatedly

- Touch during play:

  1: Plays the current track repeatedly.

  ALL: Plays all tracks repeatedly.

  OFF: Returns to normal play.

Playing Tracks Randomly

- Touch during play:

  ON: Plays all tracks randomly.

  OFF: Returns to normal play.

Viewing Information on a Playing Track

- Touch the title during play.

- Available information displayed may include the title, artist and album.
- Incorrect information cannot be modified or corrected.
- Some symbols or unavailable languages may be displayed as □.

Using the iPod® Music Menu

1. Touch **MENU** during play.

   The number of songs in each play mode is displayed.
2. Touch the desired play mode.

Tone Settings

1. Touch **MENU** during play.
2. Touch ▲ or ▼ to scroll through the list.
3. Touch **tone settings**.

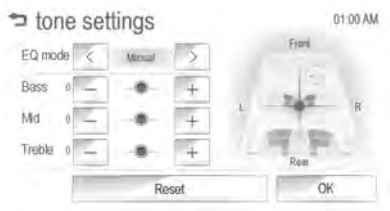

For further information, see Tone Settings under *Operation* ⇨ *106*.

Picture System

Picture files stored on a USB storage device can be viewed on the infotainment system screen.

Cautions when Using Picture Files

- File size:

  JPG: From 64 to 5,000 pixels (width), from 64 to 5,000 pixels (height).

  BMP, PNG, GIF: from 64 to 1,024 pixels (width), from 64 to 1,024 pixels (height).

- This product can view picture files with: .jpg, .bmp, .png, .gif file extensions (animated GIF not supported).
- It might not be possible to view some files due to the file format or condition of the file.

Viewing a Picture

Connect a USB storage device containing picture files to the USB port.

1. Press ⌂ (21).
2. Touch **picture & movie**.
3. Touch **Source ▼**.
4. Touch **USB (picture)**.

The picture is displayed.

5. Touch the screen to hide/show the control bar.
6. Touch the screen again to return to the previous screen.

An alert may be displayed.

Viewing Slide Show

1. Touch .

   The slide show begins.

2. Touch the screen to cancel the slide show.

Viewing a Previous or Next Picture

- Touch or .

Rotating a Picture

- Touch or .

Enlarging a Picture

- Touch .

Using the USB Picture Menu

1. Touch **MENU**.

   The USB picture menu is displayed.

2. Touch to select:

   picture file list: Displays the list of available picture files.

   sort by title: Displays pictures in alphabetical order.

   sort by date: Displays pictures in date order.

   slide show time: Select the slide show interval.

   clock/temp display: To display the clock and temperature on the full screen, select On or Off.

   display settings: Adjust the brightness and contrast.

3. When complete, touch .

Movie System

Movie files stored on a USB storage device can be viewed on the infotainment system screen.

Cautions when Using Movie Files

- Available resolution: range 720 x 576 (w x h) pixels.
- Frame rate: less than 30 fps.
- Playable movie file: .avi, .mpg, .mp4, .divx, .xvid, .wmv.

  A movie file might not always play, depending on the Codec format.

- Playable subtitle format: .smi.

- Playable Codec format: divx, xvid, mpeg-1, mpeg-4 (mpg4, mp42, mp43), wmv9 (wmv3).
- Playable audio format: MP3, AC3, AAC, WMA.
- Music files to which DRM (Digital Right Management) is applied cannot be played.

Playing a Movie File

Connect a USB storage device containing movie files to the USB port.

1. Press ⌂ (21).
2. Touch **picture & movie**.
3. Touch **Source ▼**.
4. Touch **USB (movie)**.

The movie begins to play.

5. Touch the screen to hide/show the control bar.
6. Touch the screen again to return to the previous screen.

Note

Movies are not available while the vehicle is in motion.

Pause

- Touch ❚❚ during play.
- Touch ▶ to resume play.

Playing the Next Movie

- Touch ▶| to play the next movie.

Playing the Previous Movie

- Touch |◀ within 5 seconds of the start of play.

Returning to the Beginning of the Current Movie

- Touch |◀ after 5 seconds of play.

Scanning Forwards or Backwards

- Touch and hold ▶| or |◀ during play.
- Release the button to resume play at normal speed.

Viewing to Full Screen

1. Touch ⛶.
2. Touch the screen to return to the previous screen.

Using the USB Movie Menu

1. Touch **MENU**.

   The USB movie menu is displayed.
2. Touch to select:

   movie file list: Displays the list of available movie files.

   clock/temp display: To display the clock and temperature on the full screen, select On or Off.

   display settings: Adjust the brightness and contrast.

   tone settings: Adjust the sound setup. See Tone Settings under *Operation* ⇨ *106*
3. When complete, touch ⮌.

Subtitle Language

The movie may have subtitles.

1. Touch ◀.

Note

Subtitle language is available only if supported by the movie file.

2. Touch < or >.
3. Touch ▶.

Note

- Select from the subtitle languages supported by the DivX® movie file.
- The subtitle language can be turned on or off.
- Subtitle format: .smi. The subtitle file name should be the same as the movie file name.

Audio Language

The movie may have selectable audio languages.

1. Touch ◀.

Note

Audio language is available only if supported by the movie file.

2. Touch < or >.
3. Touch ▶.

Note

- Select from the subtitle languages supported by the DivX® movie file.
- The subtitle language can be turned on or off.

Auxiliary Device System

Music and movie files stored on an auxiliary device can be played on the infotainment system.

Connecting an Auxiliary Device

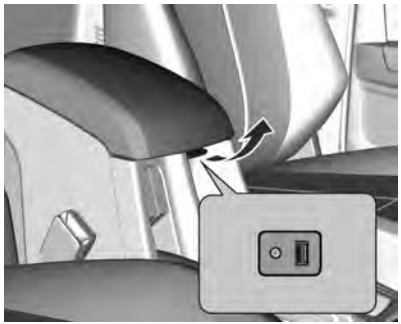

The USB/AUX socket is located inside the storage compartment.

1. Open the cover.
2. Connect to the AUX input using the appropriate cable.

Types of AUX Cables

- 3-pole cable: AUX cable for audio

- 4-pole cable: AUX cable for movies. AUX cable for iPod®/ iPhone®

Playing from an Auxiliary Device

Connect the auxiliary device containing music files to the AUX input. See Connecting an Auxiliary Device previously in this chapter.

- Once connected, it will play automatically.
- The auxiliary device is used to control the playback of the content stored or available.

If the auxiliary device is already connected:

1. Press ⌂ (21).
2. Touch **audio**.
3. Touch **Source ▼**.
4. Touch **AUX**.

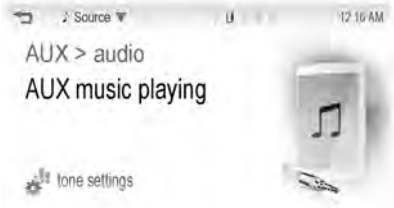

AUX music playing is displayed.

Tone Settings

1. Touch **tone settings** during play.

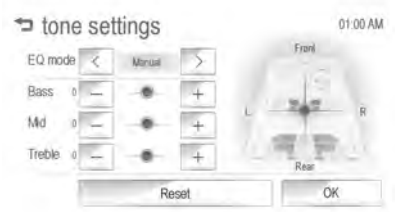

For further information, see Tone Settings under *Operation* ⇨ *106*

Playing a Movie from an Auxiliary Device

Connect the auxiliary device containing movie files to the AUX input. See Connecting an Auxiliary Device previously in this chapter.

1. Press ⌂ (21).
2. Touch **picture & movie**.
3. Touch **Source ▼**.
4. Touch **AUX (movie)**.

- The auxiliary device is used to control the content stored or available.

Note
When using an iPod® or iPhone®, connect to the AUX input using the AUX cable for an iPod®/iPhone® to play a movie file. See Types of AUX Cables previously in this chapter.

Note
Movies are not available while the vehicle is in motion.

Using the AUX Movie Menu

1. Touch **MENU**.

The AUX menu is displayed.

2. Touch to select:

   tone settings: Adjust the sound setup. See Tone Settings under *Operation* ⇨ *106*

   clock/temp display: To display the clock and temperature on the full screen, select On or Off.

   display settings: Adjust the brightness and contrast.

3. When complete, touch ⮌.

Personalisation

Personalisation (Type 2)

The infotainment system settings can be personalised.

1. Press ⌂ (21).
2. Touch **settings**.

The settings menu is displayed.

3. Touch to select.

Time and Date Settings

1. Press ⌂ (21).
2. Touch **settings**.
3. Touch **time & date settings**.

The time & date settings menu is displayed.

4. Touch to select.

   set time format: Select 12 hr or 24 hr time display.

   set date format: Set the date display format:

   - YYYY/MM/DD: 2014/12/31
   - DD/MM/YYYY: 31/12/2014
   - MM/DD/YYYY: 12/31/2014

set time and date: Manually set the current hours, minutes and year/month/date by touching ∧ or ∨.

5. Touch **OK**.
6. Touch ⮌ to return to the previous menu.

Radio Settings

1. Press ⌂ (21).
2. Touch **settings**.
3. Touch **radio settings**.

The radio settings menu is displayed.

4. Touch to select.

auto volume: The volume adjusts depending on the vehicle's speed. Select Off, Low, Medium or High.

radio favourites: Select the number of AM/FM favourites (FAV) pages to display.

radio tune bar: View the radio station tuning bar for selecting a radio station. Select On or Off.

radio text: Select On or Off to display radio station text when available.

radio factory settings: Restore the settings back to the default settings.

5. Touch ⮌ to return to the previous menu.

Connection Settings

1. Press ⌂ (21).
2. Touch **settings**.
3. Touch **connection settings**.

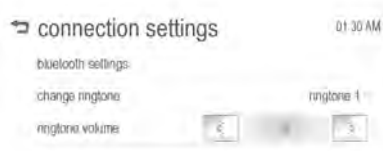

The connection settings menu is displayed.

4. Touch to select.

bluetooth settings: Select the bluetooth settings menu:

-**pair device**: Select a device and connect, separate or delete.

-**change PIN code**: Manually change or set a PIN.

-**discoverable**: To initiate the Bluetooth® connection from a Bluetooth® device, select On or Off.

-**device info**: Check the device information.

change ringtone: Select a ringtone.

ringtone volume: Change the ringtone volume.

5. Touch ⮌ to return to the previous menu.

Vehicle Settings

When the ignition is on and the vehicle is stationary, settings can be changed in the vehicle settings menu. See *Vehicle Personalisation* ⇨ *73*.

Language Settings

1. Press ⌂ (21).
2. Touch **settings**.
3. Touch **language**.

The language menu is displayed.

Note

English is the only supported language.

Text Scroll

1. Press ⌂ (21).
2. Touch **settings**.
3. Touch ▼.

The settings menu is displayed.

4. Touch **On** or **Off**.

On: The text displayed on the audio screen is scrolled.

Off: The text is scrolled once then displayed in a shortened form.

5. Touch ⮌ to return to the previous menu.

Touch Beep Volume

1. Press ⌂ (21).
2. Touch **settings**.
3. Touch ▼.

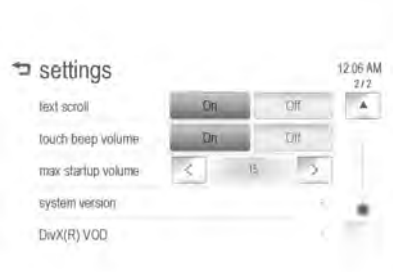

The settings menu is displayed.

4. Touch **On** or **Off**.

   On: A beep sounds when the screen is touched.

   Off: Cancels the beep sound.

5. Touch ⮌ to return to the previous menu.

Max Startup Volume

Adjust the maximum limit for the start-up volume.

1. Press ⌂ (21).
2. Touch **settings**.
3. Touch ▼.

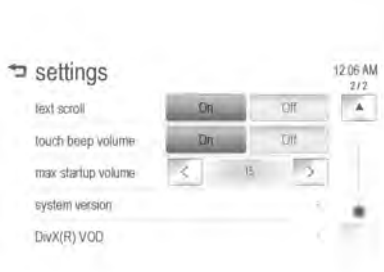

The settings menu is displayed.

4. Touch < or >.

   Select a volume between 9 and 21.

5. Touch ⮌ to return to the previous menu.

System Version

1. Press ⌂ (21).
2. Touch **settings**.
3. Touch ▼.
4. Touch **system version**.

The system version information is displayed.

5. Touch ⮌ to return to the previous menu.

DivX® VOD

1. Press ⌂ (21).
2. Touch **settings**.
3. Touch ▼.

4. Touch **DivX® VOD**.

   For more information, see Trademarks and Licence Agreements under *Owner Assistance* ⇨ *234*.

Phone

Bluetooth (Type 2)

General Information

Bluetooth® allows users with a Bluetooth® enabled mobile phone to make and receive hands-free calls using the vehicle's infotainment system and controls.

The Bluetooth® enabled mobile phone must be paired to the vehicle's infotainment system before it can be used in the vehicle.

Not all phones will support all functions. For more information visit: www.holden.com.au.

Bluetooth® also allows streaming of music files from a device, if files are available. See Bluetooth® Music later in this chapter.

⚠ Warning

Do not use a mobile phone when driving.

(Continued)

Warning (Continued)

Make sure that Bluetooth® is activated before driving. If not stop at a safe place to use a mobile phone.

Pairing and Connecting a Bluetooth® Device

1. Turn the Bluetooth® device on. Refer to the Bluetooth® device's user guide.
2. Press ⌂ (21).
3. Touch **phone**.

4. Touch **Yes**.

5. Touch **Search Bluetooth Device**.
6. Touch the device to pair.

If SSP (Secure Simple Pairing) is supported, confirm on the Bluetooth® device and touch **Yes** on the infotainment system screen.

If SSP is not supported, input the PIN shown on the screen into the Bluetooth® device.

7. When a Bluetooth® phone is successfully paired, the phone screen is displayed.

   If the connection fails, a failure message is displayed.

Note

- When a Bluetooth® phone is successfully paired to the infotainment system, the phone book is downloaded automatically.

  For best results, it is recommended to always accept the phone book download request when initially pairing a phone.

  If the phone book is not downloaded automatically, it might not be supported by the phone or may require manual initiation from the phone.
- If a Bluetooth® device is already paired to the infotainment system, auto connection begins.

Pairing an Additional Device when a Paired Device is Connected

1. Press ⌂ (21).
2. Touch **settings**.
3. Touch **connection settings**.
4. Touch **bluetooth settings**.
5. Touch **pair device**.
6. Touch the device to pair from the pair device screen, then go to Step 9.

7. Touch **Search Bluetooth Device**.
8. Touch the device to pair on the searched list screen.

If SSP (Secure Simple Pairing) is supported, confirm on the Bluetooth® device and touch **Yes** on the infotainment screen.

If SSP is not supported, input the PIN shown on the screen into the Bluetooth® device.

9. When pairing is successful, the device name is displayed on the pair device screen.

Checking the Connected Bluetooth® Device

1. Press ⌂ (21).
2. Touch **settings**.
3. Touch **connection settings**.
4. Touch **bluetooth settings**.
5. Touch **pair device**.

: Connected Bluetooth® device
BT : Bluetooth® music and hands-free enabled
: Hands-free enabled
BT : Bluetooth® music enabled

Note

The infotainment system can register up to five Bluetooth® devices.

Disconnecting the Bluetooth® Device

1. Press ⌂ (21).
2. Touch **settings**.
3. Touch **connection settings**.
4. Touch **bluetooth settings**.
5. Touch **pair device**.
6. Touch the name of the device to disconnect.

7. Touch **Yes**.

Connecting the Bluetooth® Device

1. Press ⌂ (21).
2. Touch **settings**.
3. Touch **connection settings**.
4. Touch **bluetooth settings**.
5. Touch **pair device**.
6. Touch the device to be connected.

The device is connected.

Deleting the Bluetooth® Device

1. Press ⌂ (21).
2. Touch **settings**.
3. Touch **connection settings**.
4. Touch **bluetooth settings**.
5. Touch **pair device**.
6. Touch **Del**.

7. Touch **Yes** to confirm.

Bluetooth® Music

General Information

Music may be played from a Bluetooth® device/Bluetooth® phone.

The Bluetooth® device must first be paired with the infotainment system. See *Bluetooth (Type 2)* ⇨ *132*.

- Bluetooth® music might not be supported depending on the mobile phone or Bluetooth® device.
- Supported profiles: HFP, A2DP, AVRCP, PBAP.

- The infotainment system should be connected to the Bluetooth® device via a stereo headset. Set the Bluetooth® device type on the phone.

  ♪ is displayed if successfully connected as a stereo headset.
- Music from the Bluetooth® device is delivered through the infotainment system.
- If the Bluetooth® device is disconnected while music is playing, playback is stopped.
- Bluetooth® streaming is not available when a Bluetooth® hands-free phone is in use.
- For Bluetooth® music to play, the music must be played at least once from the music player mode of the Bluetooth® device after connecting as a stereo headset.

  After being played at least once, the music player will automatically start upon entering play mode and will automatically stop when the music player mode ends.
- If the Bluetooth® device is not in the waiting screen mode, some devices may not automatically play in Bluetooth® music play mode.
- Do not change the track too quickly when playing Bluetooth® music. It takes some time to transmit data from the Bluetooth® device to the infotainment system.
- The Infotainment system transmits the order to play from the Bluetooth® device in the Bluetooth® music play mode. If this is done in a different mode, then the device transmits the order to stop. Depending on the Bluetooth® device's options, this order to play/stop may take some time to activate.
- Sometimes, sounds may be cut off during the Bluetooth® music playback.

Playing Bluetooth® Music

1. Press ⌂ (21).
2. Touch **audio**.
3. Touch **Source ▼**.
4. Touch **Bluetooth**.

Bluetooth music is displayed.

Pause

- Touch ▶ ‖ during play.
- Touch ▶ ‖ to resume play.

Playing the Next Track

- Touch ▶▶| to play the next track.

Playing the Previous Track

- Touch |◀◀ within 2 seconds of the start of the track.

Returning to the Beginning of the Current Track

- Touch ⏮ after 2 seconds of the start of the track.

Scanning Forwards or Backwards

- Touch and hold ⏮ or ⏭ during play.

Playing Tracks Repeatedly

- Touch during play:

  1: Plays the current track repeatedly.

  ALL: Plays all tracks repeatedly.

  OFF: Returns to normal play.

Playing Tracks Randomly

- Touch during play:

  ON: Plays all tracks randomly.

  OFF: Returns to normal play.

Note

Not all functions are supported by all Bluetooth® devices.

Tone Settings

1. Touch during play.

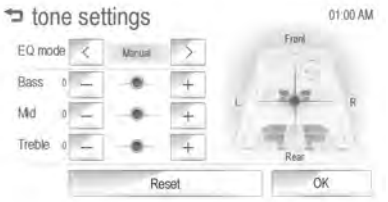

For further information, see Tone Settings under *Operation* ⇨ *106*.

Hands-Free Phone (Type 2)

Making a call by entering a phone number.

1. Enter the phone number using the keypad on the screen.
2. Touch .

   Alternatively, press on the steering wheel remote controls.

Note

To change a digit, touch [←]. To delete all digits, touch and hold [←].

Switching a Call to Mobile Phone (Private Mode)

1. Touch .
2. Touch **OK**.

To switch the call back to hands-free:

1. Touch again.

Switching the Microphone On/ Off (Mute)

1. Touch .

Redialling Last Number

1. Touch and hold .

Alternatively, press on the steering wheel remote controls.

Note

Redialling is not possible when there is no call history.

Receiving Calls

1. Touch **Accept**.

Alternatively, press on the steering wheel remote controls.

Note

Audio transmission will stop, the phone will ring and information will display on the screen.

To reject a call:

2. Touch **Reject**.

Alternatively, press on the steering wheel remote controls.

Using the Phone Book Menu

1. Touch **Phone Book**.

2. Touch ▲ or ▼ to scroll through the list.
3. Touch the entry to be dialled.

4. Touch the number to dial.

Searching for Phone Book Entries

1. Touch **Phone Book**.

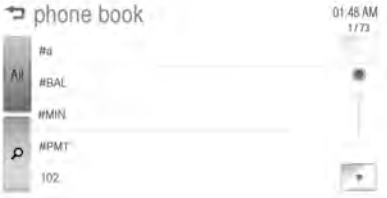

2. Touch .

3. Use the keypad to search by name.

   For further information, see Searching by Name further on in this chapter.

4. Touch the name to call.
5. Touch the number to dial.

Note

When the Bluetooth® phone is successfully paired to the infotainment system, the phone book is downloaded automatically.

For best results, it is recommended to always accept the phone book download request when initially pairing a phone.

If the phone book is not downloaded automatically, it might not be supported by the phone or may require manual initiation from the phone.

Searching by Name

Example: searching for the name Alex.

1. Touch **abc** to select the first character.

   Names which include a, b or c are displayed.

2. Touch **jkl** to select the second character.

   Names which also include j, k or l are displayed.

3. Touch **def** to select the third character.

   Names which also include d, e or f are displayed.

4. Touch **wxyz** to select the fourth character.

   Names which also include w, x, y or z are displayed.

Note

As more letters of the name are entered, the list of possible names reduces.

5. Touch **alex** to select.

Making a Call from the Call History

1. Touch **Call History**.

2. Touch , or .

   : Dialled call

   : Missed call

   : Received call

3. Touch the entry to be dialled.

Making a Call with Speed Dial

- Touch and hold the speed dial number using the keypad on the phone screen.
- Only speed dial numbers already stored on the mobile phone can be used for speed dial calls.
- Up to 2-digit speed dial numbers are supported.
- For 2-digit speed dial numbers, touch the 1st digit then touch and hold the 2nd digit to make a call.

Note

Not all phones support this feature.

Smartphone Link

Use smartphone link when a smartphone is connected to the infotainment system.

- When using an iPhone®, connect the iPhone® through the USB port to use applications.
- When using an Android phone, connect the Android phone to the infotainment system using Bluetooth® to use applications.

Connecting to Applications

1. Install the application on the smartphone.
2. Connect the smartphone and the infotainment system through the USB port or Bluetooth®.

   iPhone: USB connection

   Android phone: Bluetooth® connection
3. Activate the application on the smartphone.
4. Press ⌂ (21).
5. Touch **smartphone link**.
6. Touch the application icon.

   The application screen is displayed.

iPhone® Error Messages

If the infotainment system fails to activate the application on the iPhone®, an error message is displayed:

smartphone link
-17°C 01:17 AM
Application error
Unable to start application, possible reasons:
- Your iPhone is locked
- You have another active application open
- You haven't installed this application on your iPhone
OK

If required:

- Unlock the iPhone®.
- Close the other active application.
- Install the application on the iPhone®.

If the iOS version of the iPhone® is earlier than 4.0, an error message is displayed:

smartphone link
-17°C 01:17 AM
Info
Your iPhone does not allow this application to be opened on a USB connection. Please refer to owner's manual.
OK

- Activate the application on the iPhone®, then press the required application menu on the infotainment system.

Android Smartphone Error Messages

If the infotainment system fails to activate the application on a smartphone connected by Bluetooth®, an error message is displayed.

1. Reset all settings related to the phone, then press the required application menu on the infotainment system.
2. Reconnect the smartphone to the infotainment system with Bluetooth®, then press the required application menu on the infotainment system.
3. When stopping the application on the smartphone, it may take some time to return to normal operation.

   Activate the application after approximately 10 to 20 seconds.

Displaying/Hiding Application Icons

To display or hide application icons on the smartphone link menu:

1. Press ⌂ (21).
2. Touch **smartphone link**.

3. Touch **settings**.

   The app settings menu is displayed.

4. Press an application icon to hide the application icon shown on the smartphone link menu.
5. Press an application icon to display the application icon hidden on the smartphone link menu. A tick mark is shown.
6. Touch **OK**.

Note

If an application is activated on the smartphone link menu, 📱 is displayed on the HOME screen.

Stitcher™ Internet Radio

Some images and explanations may vary due to mobile phone operating systems, versions and/or application (app) versions.

Using Stitcher™

Listen to news, comedy, sports and radio talk shows in one app.

Choose from 5,000+ on demand podcasts and live AM/FM stations.

Note

Stitcher™ requires an active data connection to function.

1. Install the Stitcher™ application on the smartphone.
2. Connect the smartphone and the infotainment system through the USB port or Bluetooth®.

   iPhone: USB connection

   Android phone: Bluetooth® connection
3. Activate the Stitcher™ application on the smartphone.

   To use Stitcher™:
4. Press ⌂ (21).
5. Touch **smartphone link**.

6. Touch **Stitcher**.

   The Stitcher screen is displayed.

Note

If a smartphone is not connected to the infotainment system or the application is not installed on the smartphone, the Stitcher menu is not displayed.

Thumbs Up and Thumbs Down

Rate songs/content using thumbs up and thumbs down.

- Touch 👍 or 👎.

Saving a Favourite Station

- Press ★ to save the station as a favourite station.

Pause

1. Touch ⏸ during playback.
2. Touch ▶ to resume play.

Playing the Next Station

- Touch ⏭ to move to the next station.

Using the Stitcher™ Menu

1. Touch **MENU** during play.

2. Touch ▲ or ▼ to scroll through the list.
3. Touch to select.

Pandora® Internet Radio

Some images and explanations may vary due to mobile phone operating systems, versions and/or application (app) versions.

Using Pandora®

Pandora® is an Internet radio service that streams personalised radio stations based on artists, songs, genres and comedians.

Create stations using the Pandora® website or smartphone application, then use 👍 (thumbs up) or 👎 (thumbs down) to personalise stations. To set up an account or for more information, go to www.pandora.com.

Note

Pandora® requires an active data connection to function.

1. Install the Pandora® application on the smartphone.
2. Connect the smartphone and the infotainment system through the USB port or Bluetooth®.

   iPhone: USB connection

   Android phone: Bluetooth® connection
3. Activate the Pandora® application.

   To use Pandora®:
4. Press ⌂ (21).
5. Touch **smartphone link**.

6. Touch **Pandora**.

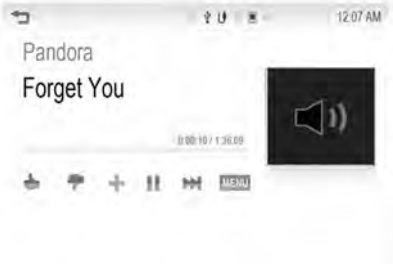

The Pandora screen is displayed.

Note

If a smartphone is not connected to the infotainment system or the application is not installed on the smartphone, the Pandora menu is not displayed.

Bookmarks

Touch **+** while playing a song to bookmark either the artist or the song. Bookmarks are viewable on www.pandora.com.

Thumbs Down

Touch 👎 to change to the next song and not play the song on this station again. This helps Pandora® choose which songs should not play on this station. This feature is only available on user created stations.

Thumbs Up

Touch 👍 to help Pandora® choose which songs should play on this station.

Pause

1. Touch ⏸ during playback.
2. Touch ▶ to resume play.

Playing the Next Station

- Touch ⏭ to move to the next song.

Pandora® Skip Limit

Pandora® limits the number of skips allowed on their service. When the skip limit is reached, 👎 will not skip the currently playing track, but 👎 feedback will be recorded.

Pandora® Advertisements

Pandora® may display advertisements. Artist name and track title will not be displayed and the skip track button is not available.

Climate Controls

Climate Control Systems
Air Conditioning System 147
Electronic Climate Control System 149

Air Vents
Adjustable Air Vents 152

Maintenance
Air Intake 153
Passenger Compartment Air Filter 153
Air Conditioning Regular Operation 153

Climate Control Systems

Air Conditioning System

⚠ Warning

Do not sleep in a vehicle with the air conditioning or heating system on. It may cause serious harm or death due to a drop in oxygen content and/or body temperature.

Controls

- Heated rear window
- Fan speed
- Cooling
- Air distribution
- Temperature
- Air recirculation

Heated Rear Window

The vehicle may have a heated rear window.

- Press .

  The heated rear window:

- Operates when the ignition is turned on.
- Switches off automatically after a few minutes or by pressing again.
- The LED illuminates.

Caution

Do not use sharp objects or abrasive window cleaners on the rear window.

Do not scratch or damage the wires.

Fan Speed

Rotate the fan speed switch to the required speed.

Air Distribution

Select an air outlet by rotating the switch.

Air is directed:

: To the instrument panel vents

: To the instrument panel vents and floor vents

: To the floor vents

: To the windscreen vents and floor vents

: To the windscreen vents

Temperature

Rotate the temperature switch:

Red: warm

Blue: cold

Cooling

The air-conditioning system cools and dehumidifies (dries) the air when the outside temperature is a little above freezing point, therefore condensation may form and drip from under the vehicle.

Note

If no cooling or drying is required, switch the cooling system off to save fuel.

1. Start the engine.
2. Rotate the temperature switch to cold air.
3. Rotate the fan speed switch to the required speed.
4. Press .

   The LED illuminates when the air-conditioning is on.
5. Rotate the air distribution switch to the required setting.

To turn the air-conditioning system off:

- Rotate the fan speed switch to **0** or press .

  The LED extinguishes when the air-conditioning is off.

Air Recirculation

Slide the switch to .

⚠ Warning

Driving in recirculation mode for a prolonged period of time can make you sleepy. Periodically turn to the outside air mode for fresh air.

The exchange of fresh air is reduced in air recirculation mode. In operation without cooling, the air humidity increases, so the windows may mist up. The quality of the passenger compartment air deteriorates and may cause the vehicle occupants to feel drowsy.

Maximum Cooling

Use maximum cooling for quick cooling of the passenger compartment.

1. Turn the ignition on.
2. Briefly open the windows so that hot air can disperse quickly.
3. Slide the air recirculation switch to position .
4. Rotate the air distribution switch to .
5. Rotate the temperature switch to cold air.
6. Rotate the fan speed switch to maximum speed.
7. Press .
8. Open the air vents.

Electronic Climate Control System

⚠ Danger

Do not sleep in a vehicle with the air conditioning or heating system on. Serious harm or death may result from a drop in the oxygen level and/or body temperature.

Controls

- The electronic climate control system operates in automatic mode when **AUTO** is pressed.

  All settings except temperature are chosen automatically by the system.
- Select a temperature while in automatic mode.

Automatic Mode

1. Press **AUTO**.
2. Open all air vents.

3. Select a temperature by rotating the central switch.

   Anticlockwise: cold

   Clockwise: warm

Note

If the minimum temperature is set, the electronic climate control system operates at maximum cooling.

Manual Mode

Pressing any of the following buttons deactivates automatic operation.

To return to automatic mode:

- Press **AUTO**.

Fan Speed

To increase or decrease the fan speed:

- Press **+** or **–**.

  The fan speed is shown on the display.

Air Distribution and Cooling

To select an air distribution outlet:

- Press △ or ▽.

  The setting is shown on the display.

  Air is directed:

  : To the instrument panel vents

  : To the instrument panel vents and floor vents

  : To the floor vents

  : To the windscreen vents and floor vents

To select cooling:

The air-conditioning system cools and dehumidifies (dries) the air when the outside temperature is a little above freezing point, therefore condensation may form and drip from under the vehicle.

If no cooling or drying is required, switch the cooling system off to save fuel.

- Press ❄ to turn on and off.

  The LED illuminates when the air-conditioning is on.

Demisting and Defrosting Windows

For windscreen demisting:

1. Press .

   Air distribution and fresh air are set automatically.

   The LED illuminates.

2. To return to the previous mode, press , or press **AUTO** to return to automatic mode.

For rear window demisting:

- Press .

The LED illuminates when the rear window demister is on.

Caution

Do not use sharp objects or abrasive window cleaners on the rear window.

Do not scratch or damage the wires.

Air Recirculation

- Press .

  The LED illuminates when air recirculation is on.

- To return to fresh air, press .

  The LED illuminates when the fresh air is on.

⚠ Warning

Driving with recirculation mode on for a prolonged period of time can make you sleepy. Periodically switch to outside air mode for fresh air.

The exchange of fresh air is reduced in air recirculation mode. In operation without cooling, the air humidity increases, so the windows may mist up. The quality of the passenger compartment air deteriorates, which may cause the vehicle occupants to feel drowsy.

Air Vents

Adjustable Air Vents

- Direct air flow by tilting the vents.
- To close the vent, push the slat down.

- Direct air flow by tilting the vents.

⚠ Warning

Do not attach any objects to the slats of the air vents. Risk of damage and injury in case of an accident.

Fixed Air Vents

Fixed air vents are located beneath the windscreen, front door windows and in the footwells.

Maintenance

Air Intake

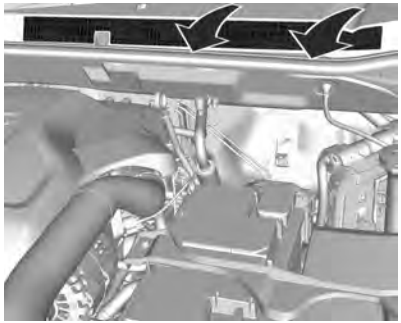

Outside air is drawn into the vehicle through the opening between the bonnet and the windscreen.

Keep the area clear of debris.

Passenger Compartment Air Filter

The filter removes contaminants such as pollen and dust from the air entering the vehicle.

Maintenance of the pollen filter is required. Refer to the Service/ Warranty Booklet.

Air Conditioning Regular Operation

To ensure efficient performance, switch the cooling on for a few minutes once a month, even in winter.

Driving and Operating

Driving Information
Driving Environment 155
Off-Road Driving 155
Hill and Mountain Roads 156

Starting and Operating
New vehicle running-in 157
Ignition Positions 157
Starting the Engine 158
Starting the Diesel Engine 158
Parking 159

Engine Exhaust
Engine Exhaust 159

Automatic Transmission
Automatic Transmission 160
Transmission Display 160
Shift Lever 160
Manual Mode 161
Electronic Driving Programs 161
Fault 161
Interruption of Power Supply 162

Manual Transmission
Manual Transmission 163

Drive Systems
Four-Wheel Drive 163

Brakes
Brakes 167
Antilock Brake System (ABS) 167
Parking Brake 168
Brake Assist 168
Hill Start Assist (HSA) 169

Ride Control Systems
Traction Control System (TCS) 169
Electronic Stability Control (ESC) 170
Descent Control System (DCS) 171

Cruise Control
Cruise Control 172

Object Detection Systems
Parking Assist 174
Rear Vision Camera (RVC) . . . 175

Fuel
Fuel 177
Filling the Tank 178

Trailer Towing
Trailer Towing 180
Trailer Sway Control (TSC) . . . 184

Conversions and Add-Ons
Add-On Electrical Equipment 184

Driving Information

Driving Environment

Before entering the vehicle

Check that windows, mirrors and lamps are clean.

Visually check tyre inflation. Check tyre pressures weekly.

Before driving off

1. Close and secure all doors.
2. Position the seat for comfortable driving.
3. Adjust rear view mirrors.
4. Fasten seat belts.
5. Check that warning indicators illuminate when turning the ignition on. See *Instrument Panel Overview* ⇨ *55*.

Brakes

- Do not let the vehicle run down hills or coast with the engine off, as the power assistance does not operate.
- Ensure that there are no obstructions that could limit brake pedal use.
- Continuous or heavy use of brakes will shorten the life of the brake pads.
- See *Antilock Brake System* ⇨ *167*.

Loose Articles

Do not leave loose articles or luggage in the passenger compartment. Secure in the rear load area.

⚠ Warning

Portable gas cylinders can leak, creating a risk of fire or explosion.

As a precaution, ensure adequate ventilation when carrying gas cylinders.

They must be restrained from rolling around and where possible, placed in the rear load compartment of the vehicle.

(Continued)

Warning (Continued)

It is recommended that if gas cylinders are frequently transported that a purpose-built carrying compartment be used.

Ensure any transportation of gas cylinders complies with the applicable regulations.

Off-Road Driving

Before driving off-road:

- Check the fuel level. *Fuel* ⇨ *177*.
- Check spare tyre pressure. See *Tyre Pressure* ⇨ *233*.
- Check fluids levels. See *Engine Compartment Overview* ⇨ *191*.

While driving off-road:

- Be alert to unexpected restrictions.
- Be aware of uncommon noises from the tyres and the engine.
- Always drive at a speed at which you are able to maintain control of the vehicle.

Caution
When driving off-road, sudden motion and manoeuvres can make you lose control of the steering. This could cause a collision. Therefore, when driving on-road and off-road, you and your passengers should wear seat belts.

After driving off-road:

- Remove any debris from under the vehicle or bonnet. It may become a fire hazard.
- After driving through mud or sand, clean and check the brake linings.
- Check the body frame, steering, suspension, wheels, tyres, exhaust system, fuel lines and cooling system.

Note
Regular off-road driving requires more frequent maintenance.

Water Crossing

Before crossing water:

- Switch off the air-conditioning.
- Do not attempt to drive through water more than 600 mm deep.
- Never drive into fast-running water. The force of the water can easily move the vehicle sideways, possibly into deeper water.
- Drive very slowly through deep water. Driving too fast may cause water to enter the engine and cause major damage.
- Immediately after driving through deep water, drive slowly and check the brake pedal force. If the brakes are wet, press firmly several times to dry them out quickly.
- If the vehicle is stationary in deep water for an extended time, water may have entered the engine, transmission, differentials and wheel bearings. Contact a Holden Dealer as soon as possible.

Hill and Mountain Roads

If the vehicle is driven frequently over hilly terrain, it must be maintained in good condition. The fluids, tyres and brake pads must be checked according to the maintenance schedule shown in the Service/Warranty Booklet.

On a downhill road, avoid unnecessary use of the brakes. The vehicle speed can be slowed by shifting down a gear.

When driving downhill, always keep the engine running and a gear engaged. Do not drive with the engine turned off or by shifting into neutral gear.

Starting and Operating

New vehicle running-in

Use the following precautions to improve performance:

- Do not make full throttle starts.
- Avoid downshifting to brake or slow the vehicle.
- Avoid hard stops except in emergencies. This will allow your brakes to bed in properly.
- Avoid hard stops except in emergencies to avoid premature wear and the need for early replacement of brakes.
- Avoid heavy acceleration and prolonged high-speed driving to avoid damage to the engine and to conserve fuel.
- Do not tow any other vehicle.

Ignition Positions

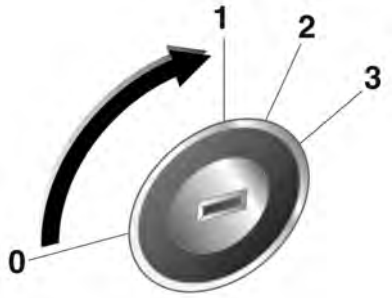

⚠ Warning

Do not turn the engine off while the vehicle is moving as there will not be any power assist for brakes or steering.

Never remove the key while the vehicle is moving, as this will lock the steering.

0: (LOCK) The key can only be inserted and removed from this position.

1: (ACC) When the key is in this position, the audio system operates.

2: (ON) Diesel engine preheating. When the key is in this position, the engine is ready to start and all electrical systems are active.

3: (START) Turn the key to this position until the engine starts.

Caution

Do not leave the key in positions 1 or 2 for a long time unless the engine is running. Otherwise the vehicle's battery will discharge.

Starting the Engine

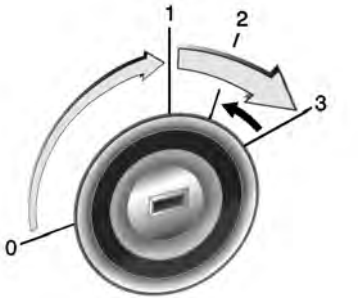

1. Apply the park brake.
2. Turn the key to position 1 while moving the steering wheel slightly to release the lock.

   Manual transmission: Push the clutch pedal to the floor and move the shift lever to the neutral position.

   Automatic transmission: Move the shift lever to **P** or **N**.

   Do not accelerate.
3. Turn the ignition key to position 2 until ⟅ extinguishes.
4. Turn the key to position 3 and release when the engine is running.

Retained Accessory Power (RAP)

The power outlets may be used after the engine is turned off.

Note
The power outlets will continue to operate for up to 10 minutes or until a door is opened.

See *Power Outlets* ⇨ *58*.

Starting the Diesel Engine

Observe the following precautions to ensure maximum turbocharger service life.

- After starting the engine, let it idle for approximately 1 to 2 minutes (avoid acceleration or driving the vehicle).
- Do not stop the engine immediately after high-load driving (such as high-speed driving or driving up steep gradients). Let the engine idle for approximately 1 to 2 minutes to cool it down.
- After changing the engine oil and oil filter, start the engine and let it idle for about 1 to 2 minutes (avoid acceleration or driving the vehicle).
- Operate the engine above idle speed only after normal engine oil pressure has been established. Forcing the turbocharger to operate before the bearings are adequately lubricated creates unnecessary friction.
- Use only the specified engine oil and observe the inspection and replacement intervals.
- At low outside temperatures or when the vehicle has not been used for a long period, normal engine oil pressure and flow is affected.
- Under these conditions, the engine should be started and allowed to idle for a few minutes before operating at higher rpms.

Parking

1. Apply the park brake.
2. Automatic transmission: Select position **P**.

   Manual transmission: If facing uphill or on flat ground, select 1st gear. If facing downhill, select reverse gear.

   On an uphill gradient turn the front wheels away from the kerb.

   On a downhill gradient turn the front wheels towards the kerb.
3. Shut all windows.
4. Turn the ignition off to lock the steering wheel.
5. Remove the key.
6. Press on the key to lock all doors. See *Keys* ⇨ *14*.

⚠ Warning

To avoid the possibility of injury, always apply the parking brake before exiting the vehicle.

Be careful where you park or drive. As with any vehicle, do not park or operate this vehicle in areas where combustible materials such as dry grass or leaves can come in contact with the hot exhaust system.

Never leave the engine running in an area such as a closed garage or underground car park.

Engine Exhaust

⚠ Danger

Engine exhaust gases contain poisonous carbon monoxide, which is colourless and odourless and could be fatal if inhaled.

If exhaust gases enter the interior of the vehicle, open the windows. Have the cause of the fault repaired by a Holden Dealer.

Automatic Transmission

The automatic transmission permits manual gear shifting (manual mode) or automatic gear shifting (automatic mode).

Transmission Display

The selected gear or transmission mode is displayed in the Driver Information Centre (DIC).

Shift Lever

P: (park) In park position, the wheels are locked. Select **P** only when the vehicle is stationary and the parking brake is applied.

R: (reverse) Place in reverse only when the vehicle is stationary.

N: (neutral)

D: (drive) Used for general driving. Allows the transmission to be shifted into any of the six forward gears.

+-: (manual) See *Manual Mode* ⇨ *161*.

Note

- The shift lever is locked in position **P**. To move, switch the ignition on, apply the brake pedal and push the release button.
- To engage **P** or **R**, push the release button.
- To start the engine, press the brake pedal while in either **P** or **N**.
- Do not accelerate while engaging a gear.
- Never press the accelerator pedal and brake pedal at the same time.
- When a gear is engaged, the vehicle slowly begins to creep when the brake is released.

Engine Braking

For engine braking, select a lower gear when driving downhill.

⚠ Warning

Do not shift down by two or more gear positions at one time.

Grade Braking

Grade braking assists in maintaining desired vehicle speeds when driving on downhill gradients by using the engine and transmission to slow the vehicle.

The first time the feature activates for each ignition cycle, a DIC message will be displayed. See *Transmission Messages* ⇨ *69*.

Parking

1. Press the brake pedal.
2. Select position **P**.
3. Pull the parking brake lever up firmly.
4. Remove the ignition key.

Note

The ignition key can only be removed when the shift lever is in position **P**.

Manual Mode

To enable manual mode, move the shift lever to position **D** then push the lever to the left.

+ : Upshift

- : Downshift

Note

- If a higher gear is selected when the vehicle speed is too low, or a lower gear when the vehicle speed is too high, the shift is not executed.

  Shift Denied is displayed on the DIC.

- If the engine speed is too low, the transmission automatically shifts to a lower gear.
- No automatic shifting to a higher gear takes place at high engine speed.

Electronic Driving Programs

Kickdown

If the accelerator pedal is pressed to the floor while in automatic mode, the transmission shifts to a lower gear, depending on the engine speed.

Fault

In the event of a fault, illuminates. The transmission no longer shifts automatically or manually because it is locked in a certain gear.

Contact a Holden Dealer.

Interruption of Power Supply

If the power supply is interrupted, the shift lever cannot be moved out of position **P** and the ignition key cannot be removed.

If the battery is discharged, start the vehicle using jump leads. See *Jump Starting* ⇨ *217*.

If the battery is not the cause of the fault, release the shift lever and remove the ignition key from the ignition switch/lock.

Release Shift Lever

To shift out of **P**:

1. Apply the brake pedal.

2. Open the cover.

Note

Use a small screwdriver to prise the cover off at both ends.

3. Insert a screwdriver into the slot until the shift lever is unlocked.
4. Move the shift lever to position **N**.
5. Remove the screwdriver.
6. Close the cover.
7. Have the vehicle repaired by a Holden Dealer as soon as possible.

Manual Transmission

- To engage reverse gear, press the shift lever and move towards the right side and rearwards.
- Do not engage reverse gear while the vehicle is moving.
- If the gear does not engage, move the shift lever to neutral, release the clutch pedal, press the clutch pedal again then repeat gear selection.
- Ensure the clutch pedal is pushed all the way to the floor.
- Do not use the pedal as a foot rest.

Caution
Do not drive with your hand resting on the shift lever.

Drive Systems

Four-Wheel Drive

The vehicle may have four-wheel drive.

- Four-wheel drive sends the engine's driving power to all four wheels for extra traction.
- Use **2** ↑ (Two-Wheel High) for normal driving on sealed roads.
- Do not use four-wheel drive for normal driving on dry paved roads.

Note

- Driving on clean, dry roads in four-wheel drive for an extended period of time can cause premature wear on the vehicle's powertrain.
- Never use four-wheel drive when a different spare tyre size is installed on the vehicle. The vehicle could be damaged and the repairs may not be covered by the New Vehicle Voluntary Warranty.

Indicator lights:

- All lights illuminate on the shift control switch when the ignition is turned on.

  If the lights do not come on, contact a Holden Dealer.
- Illuminate the shift control switch to indicate the current setting.
- Flash while shifting. The light will illuminate when the shift is completed.

  If the shift control switch does not shift, it will return to the last setting.

Transfer Case Shift Control Switch

The switch may be located in front of the shift lever or next to the parking brake on the centre console.

Rotate the switch to shift into and out of four-wheel drive.

- **2** ↑ (Two-Wheel High): Use for driving in most street and highway situations.

  The front axle is not engaged in Two-Wheel Drive.
- **N** (Neutral): Use only when the vehicle is being towed.
- **4** ↑ (Four-Wheel High): This setting engages the front axle to help drive the vehicle.

  Use Four-Wheel High when you need extra traction, such as on snowy or icy roads, or in most off-road situations.
- **4** ↓ (Four-Wheel Low): This setting engages the front axle to provide extra traction.

  It sends maximum power to all four wheels.

Use Four-Wheel Low if driving off-road in sand, mud or deep snow and while climbing or descending steep gradients

Shifting into Four-Wheel Low will turn Electronic Stability Control (ESC) off.

- See *Electronic Stability Control (ESC)* ⇨ *170*.

Note

- ESC Off is displayed on the DIC.
- OFF illuminates the instrument panel.

Shifting from Two-Wheel High to Four-Wheel High

- Rotate the shift control switch from **2** ↑ to **4** ↑.

  This can be done at any speed below 120 km/h.

  The front axle will lock automatically.

Shifting from Four-Wheel High to Two-Wheel High

- Rotate the shift control switch from **4** ↑ to **2** ↑.

  This can be done at any speed.

  The front axle will unlock automatically.

Note

It is normal to hear and feel the vehicle's transfer case shift out of **4** ↑.

Shifting from Two-Wheel High or Four-Wheel High to Four-Wheel Low

The vehicle must be stationary or moving less than 5 km/h and the transmission in **N** (automatic transmission) or the clutch pedal pressed (manual transmission).

The preferred method for shifting into **4** ↓ is to have the vehicle moving 1.6 to 3.2 km/h.

1. Rotate the shift control switch to **4** ↓.
2. Wait for the **4** ↓ indicator light to stop flashing and to illuminate before shifting the transmission into gear or releasing the clutch pedal.

   If **4** ↓ is selected when the vehicle is in gear and/or moving faster than 5 km/h, the **4** ↓ indicator light will flash for 30 seconds but will not complete the shift.

   The light will return to the original setting.

Shifting from Four-Wheel Low to Two-Wheel High or Four-Wheel High

The vehicle must be stationary or moving less than 5 km/h and the transmission in **N** (automatic transmission) or the clutch pedal pressed (manual transmission).

The preferred method for shifting out of **4** ↓ is to have the vehicle moving 1.6 to 3.2 km/h.

1. Rotate the shift control switch to **2** ↑ or **4** ↑.
2. Wait for the **2** ↑ or **4** ↑ indicator light to stop flashing and illuminate before shifting the transmission into gear or releasing the clutch pedal.

If **2** ↑ or **4** ↑ is selected when the vehicle is in gear and/or moving faster than 5 km/h, the **2** ↑ or **4** ↑ indicator light will flash for 30 seconds but will not complete the shift.

The light will return to the original setting.

Shifting to Neutral

Use **N** (neutral) when towing the vehicle. See *Towing the Vehicle* ⇨ *219*.

⚠ Warning

Shifting the shift control switch to **N** can cause the vehicle to roll even if the transmission is in position **P** (park). Serious injuries could occur. Make sure the parking brake is applied before turning the shift control switch to **N**. See *Parking Brake* ⇨ *168*.

1. Stop the vehicle.
2. Apply the park brake.
3. Start the vehicle.
4. Press the brake pedal.
5. Shift the transmission to **N** (automatic transmission) or press the clutch pedal (manual transmission).
6. Rotate the shift control switch to **2** ↑.
7. Rotate the shift control switch clockwise past **4** ↑ to **N**.

Note

N only displays when selected.

8. Hold the switch at N (approximately 20 seconds) until the red **N** indicator light illuminates, when the shift to **N** is complete.

Note

When releasing the shift control switch from **N**, the switch will rotate to the Four-Wheel Low **4** ↓ setting. The shift control switch will remain in **N** with the red indicator light illuminated until a new setting is selected.

9. Press and hold down the brake pedal.
10. Shift the transmission to **R** for 1 second.
11. Shift the transmission to **D** (automatic transmission) for 1 second or **1** (manual transmission).
12. Release the clutch to ensure the shift control switch is in N (manual transmission).

    If the shift control switch is not in **N**, repeat from Step 4.
13. Turn the ignition key to ACC (position 1).
14. Place the shift lever into **P** (automatic transmission) or **1** (manual transmission).
15. Turn the ignition key to LOCK/ OFF (position 0).

Note

This neutral setting is a Two-Wheel Drive neutral, so the front and rear outputs of the transfer case are disengaged as though in Two-Wheel High.

With a disengaged front axle, there is no power to the front wheels, thus allowing towing with the front wheels off the ground.

Shifting out of Neutral

After towing the vehicle, shift out of **N** (neutral) to drive.

1. Apply the park brake.
2. Press the brake pedal.
3. Start the engine or keep the engine off and turn the ignition key to ON (position 2).
4. Move the shift lever to **N**.
5. Press the clutch pedal (manual transmission).
6. Rotate the shift control switch from **4** ↓ to another setting.
7. Release the parking brake.

Brakes

The brake system comprises two independent brake circuits.

If one brake circuit fails, the vehicle can still brake using the other brake circuit. However, the braking effect is achieved only when the brake pedal is pressed firmly. Considerably more force is needed for this. The braking distance is extended. Contact a Holden Dealer.

When the engine is not running, such as when the vehicle is being towed and the brake pedal has been depressed once or twice, braking requires greater force.

Caution

Do not drive with your foot resting on the brake pedal. This will accelerate wear of the brake components and cause the brakes to become overheated.

Antilock Brake System (ABS)

ABS:

- Continuously monitors the vehicle's braking system, preventing the wheels from locking.
- Allows maximum braking effort while full steering control is retained, even in the event of panic braking.

⚠ Warning

Do not let this special safety feature tempt you into taking risks when driving. Traffic safety can only be achieved by adopting a responsible driving style. You should always adjust the vehicle's speed to suit road and traffic conditions. Always maintain an adequate distance to the vehicle in front of you.

Operation

ABS operation is noticeable by pulsing of the brake pedal and the noise of the regulation process.

The initial self-check may also be audible.

Keep the brake pedal fully pressed throughout the braking process, without pumping it. Pumping the brake pedal can reduce brake efficiency.

If the vehicle is travelling above 50 km/h and ABS braking occurs, the centrally mounted rear high-level brake lamp will flash.

Warning

When the ignition is turned on, the (ABS) warning light briefly illuminates. The self-check of the ABS may be audible.

(Continued)

Warning (Continued)

If the (ABS) warning light (ABS off) on the instrument panel display does not extinguish, or illuminates when driving, a malfunction has occurred.

Note: The vehicle's brake system remains operational, but without ABS assistance. Have a Holden Dealer check the system as soon as possible.

See *Brake System Warning Light* ⇨ *62*.

Parking Brake

Applying the parking brake:

1. Pull the lever straight up, without pressing the release button.

Releasing the parking brake:

1. Pull the lever slightly upwards.
2. Press the release button and lower the lever all the way down.

To reduce the operating forces of the parking brake, press the foot brake at the same time.

⚠ Warning

Never drive the vehicle with the parking brake applied.

See *Brake System Warning Light* ⇨ *62*.

Brake Assist

If the brake pedal is pressed quickly and forcefully, maximum brake force is automatically applied (full braking).

Maintain steady pressure on the brake pedal for as long as full braking is required. Maximum brake force is automatically reduced when the brake pedal is released.

Hill Start Assist (HSA)

The HSA system assists in preventing rollback when driving off, while on an incline.

1. Release the brake pedal.
2. Press the accelerator pedal.

   The brakes remain on for approximately 2 seconds.

Ride Control Systems

Traction Control System (TCS)

TCS improves driving stability when necessary, regardless of the type of road surface or tyre grip, by preventing the driving wheels from spinning.

As soon as the driving wheels start to spin, engine output is reduced and the wheels are braked individually. This considerably improves the driving stability of the vehicle on slippery road surfaces.

When four-wheel drive is active, TCS is operational on the rear wheels only.

⚠ Warning

Do not let this special safety feature tempt you into taking risks when driving. Traffic safety can only be achieved by adopting a responsible driving style. The

(Continued)

Warning (Continued)

vehicle's speed should always be adjusted to suit road and traffic conditions. Always maintain an adequate distance to the vehicle in front of you.

Operation

The TCS switch may be located in front of the shift lever or beneath the instrument panel, on the right side.

In certain circumstances, it may be helpful to deactivate the TCS.

- Deactivate by pressing OFF for approximately 2 seconds.

  Traction Control Off is displayed on the DIC.

- TCS is reactivated by pressing OFF again, for approximately 2 seconds.

  Traction Control On is displayed on the DIC.

- When active flashes.
- TCS is also reactivated the next time the ignition is turned on.
- See *Ride Control System Messages* ⇨ *69*.

Electronic Stability Control (ESC)

ESC:

- Improves driving stability in any driving situation.
- Assists in maintaining vehicle stability when the vehicle's grip level is exceeded such as a sudden lane change, slippery or unexpected road conditions.
- Alters engine power and/or braking on specific wheels, improving the vehicle's steering control and power delivery, on wet or slippery roads, particularly on snow and ice.

⚠ Warning

Do not let this special safety feature tempt you into taking risks when driving. Adapt speed to the road conditions.

Operation

The ESC switch may be located in front of the shift lever or beneath the instrument panel, on the right side.

In certain circumstances, it may be helpful to deactivate ESC.

- Deactivate by pressing OFF for approximately 7 seconds.

  OFF illuminates and ESC Off is displayed on the DIC.

- ESC is reactivated by pressing OFF again for approximately 2 seconds.

  Both TCS and ESC are reactivated and OFF extinguishes.

- When active illuminates.
- ESC is also reactivated the next time the ignition is turned on.

- See *Ride Control System Messages* ⇨ *69*.

Descent Control System (DCS)

- DCS allows the vehicle to travel on a steep downhill slope at speeds between approximately 7 km/h and 30 km/h without pressing the brake pedal.
- When the system is activated, while the vehicle is moving at speeds between approximately 7 km/h and 30 km/h it will maintain the desired descent speed when the vehicle is on a steep gradient.
- The desired descent speed within the active range can be varied by using the accelerator or brake pedals to set the speed.
- Noise or vibration from the brake system may be noticeable, when the system is in operation.

Caution
Use only when descending steep gradients while driving off-road. Do not use when driving on normal road surfaces. Unnecessary usage of the DCS, such as while driving on normal roads, may damage the brake system and the ESC function.

Activation

While travelling at speeds below 50 km/h:

- Press .

 illuminates green on the instrument panel.

During operation, flashes.

Note

- Pressing the accelerator or brake pedals while DCS is activated, will adjust the desired descent speed.

  If pressed, DCS operation will stop until the accelerator or brake pedals are released.

  stops flashing.
- If the DCS is activated and the vehicle speed exceeds 30 km/h, extinguishes and the system remains in standby mode.

  When the vehicle speed drops below approximately 30 km/h, illuminates and DCS is activated.
- When in standby mode and the vehicle speed exceeds 50 km/h, DCS deactivates.

Deactivation

While travelling at speeds below 50 km/h:

- Press
  extinguishes.

System Protection

When operated continuously for prolonged periods of time, temperatures may increase within the brake system:

- DCS may enter a protection mode, gradually releasing the brakes, and temporarily disabling DCS.
- will extinguish.
- Traction Control Off may display on the DIC.
- All other braking functions will continue to operate normally.
- Once the brakes are at normal temperatures, press at speeds below 50 km/h to reactivate the DCS.

Cruise Control

The vehicle may have cruise control.

The cruise control:

- Maintains the vehicle's speed without pressure on the accelerator pedal.
- Will only operate at speeds above approximately 20 km/h.
- Controls are located on the steering wheel.
- For safety reasons, cruise control cannot be activated until the foot brake has been operated once.

⚠ Warning

Do not use the cruise control when road or driving conditions require varying speeds.
A consistent speed isn't practical in heavy, varying traffic or on winding, slippery or rough roads.

The cruise control does not apply the vehicle's brakes. Therefore the vehicle may gain speed when going down steep hills.

When climbing steep hills, the vehicle may lose speed. You may need to switch off cruise control and use the accelerator pedal.

Setting Cruise Control

1. Press **ON OFF**.
   illuminates white.
2. Accelerate to the desired speed (above 20 km/h).

3. Push the switch down to **SET/-**.

   illuminates green.

4. Take your foot off the accelerator pedal.

Increasing Set Speed

- Push the switch up to **RES/+** and hold it or briefly push to **RES/+** repeatedly.

  The vehicle will accelerate.

- Alternatively accelerate to the desired speed and store by pushing the switch down to **SET/-**.

Note

Vehicle speed can be increased by depressing the accelerator pedal. When the accelerator pedal is released, the previously stored speed is resumed.

Decreasing Set Speed

1. Push the switch down to **SET/-** and hold it or briefly push to **SET/-** repeatedly.

   The vehicle will decelerate.

2. Release the switch at the desired speed.

Deactivation

- Press **CANCEL**.

  illuminates white.

Alternatively, do one of the following:

- Reduce vehicle speed below approximately 20 km/h.
- Press the brake pedal.
- Press the clutch pedal for more than a few seconds (manual transmission).
- The TCS or the ESC operates.

Resume Stored Speed

When the cruise control is on and speed is above 20 km/h:

- Push the lever up to **RES/+**.

  The most recently set speed will automatically resume.

  illuminates green.

Switching Off

- Press **ON OFF**.

  extinguishes.

  The stored speed is deleted.

Note

Switching the ignition off also deletes the stored speed.

Object Detection Systems

Parking Assist

The vehicle may have Parking Assist (PA).

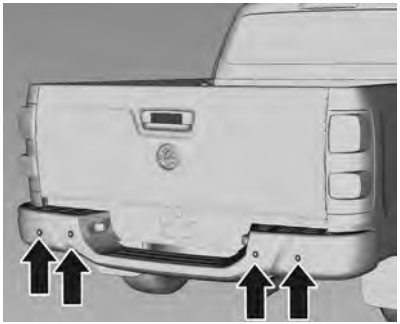

The PA system is able to detect and indicate objects at the rear of the vehicle when reversing.

PA consists of four sensors on the rear bumper, a control unit and a speaker in the vehicle's interior.

Warning

The driver is always responsible for taking care and attention while manoeuvring the vehicle. The PA is only an aid and is neither intended to, nor able to take over any responsibility.

The park sensors may not be able to detect all objects under every condition e.g. objects too close to the vehicle, objects above or below the sensors, or objects with a surface that absorbs ultrasonic waves. Additionally, some ambient conditions like ultrasonic waves or heavy rain can cause disruptive reflections from an object's surface. Such objects may not be detected.

Always manoeuvre the vehicle slowly to allow yourself sufficient time to react. The warning tones will sound only while the vehicle's speed is below 10 km/h.

Activation

PA is activated automatically when all of the following occur:

- The ignition is turned on.
- Reverse gear is selected.
- The vehicle speed is below 10 km/h.

Alarm Tones

- Alarm tones sound when an object is detected.
- The interval between the alarm tones gets shorter as the vehicle gets closer to an object.
- When the distance is less than 30 cm, the alarm tones sound continuously.

Deactivation

PA is deactivated automatically when any of the following occur:

- The vehicle speed is above 10 km/h.
- Reverse gear is deselected.
- A fault occurs in the system.

Fault

A fault in the system is indicated by:

- One alarm tone followed shortly after by an almost continuous alarm tone.
- One alarm tone followed by separate alarm tones similar to when the vehicle gets close to an object.
- Two alarm tones.
- Parking Assist Off may be displayed on the DIC.

1. Move the vehicle with care.
2. Check and clean the sensors.
3. If the problem persists, contact a Holden Dealer.

Notes on Operation

- If the sensors receive other ultrasonic signals such as metallic sounds or exhaust brake noise from heavy commercial vehicles, the system may not work properly.
- The system may not activate if the sensors are frozen or covered with dirt.
- Clean dirty sensors with a soft sponge and clean water.
- Do not push or scratch the surface of the sensors.
- Do not hit or direct high-pressure water jets directly at the sensors, as this may damage them.
- The system might not recognise sharp objects, thick winter clothes or other materials that absorb ultrasonic waves.

Rear Vision Camera (RVC)

The vehicle may have a RVC.

⚠ Warning

Never rely solely on the reverse camera when reversing the vehicle.

There is a blind spot that can not be sensed by the rear view camera.

(Continued)

Warning (Continued)

The reverse camera is not intended to replace the driver's judgement or attention toward the rear of the vehicle when reversing.

Before entering the vehicle, always check that the area around the vehicle is clear of obstacles and people.

Always perform head checks and use the vehicle's mirrors when reversing.

If the vehicle sustains any damage in the area of the reverse camera, the camera may become misaligned. Contact a Holden Dealer.

Always keep the camera lens free from dirt, snow or ice. Only use mild soap and water with a soft cloth to clean the lens.

The Camera

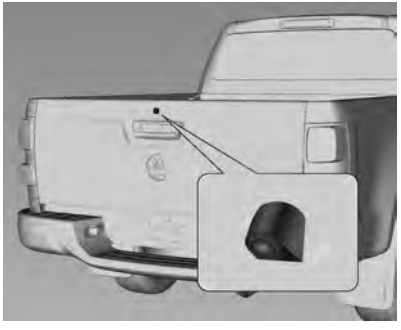

The camera is located on the rear tailgate.

The RVC cannot display objects:

- Close to the corners of the bumper
- Forward of the camera
- Higher than the camera

RVC Display

The camera display appears on the infotainment system display, when reverse gear is selected.

The area directly behind the vehicle is displayed in real time.

Note

- The distance of objects seen on the screen differs from the actual distance.
- The area displayed on the screen may vary according to vehicle orientation or road conditions.
- Objects of different heights will appear to be different distances from the vehicle.
- The display brightness automatically adjusts to suit ambient lighting conditions.
- Guidelines to assist reversing can be displayed on the display. See *Vehicle Personalisation* ⇨ *73*.

Operating the RVC

To activate:

1. Turn the ignition key to **ON**.
2. Select reverse gear.

   The camera and display automatically activates.

Note

When the shift lever is moved to another position, the RVC is deactivated.

Cleaning

The lens requires regular cleaning to ensure optimum performance.

Use only a soft cloth, mild soap and water.

⚠ Warning

Do not use abrasive cleaners or scouring pads as they could scratch the lens, impairing the systems performance.

Fuel

⚠ Danger

EXHAUST WARNING – CARBON MONOXIDE POISONING

Exhaust gases can contain carbon monoxide, a dangerous gas, which can cause unconsciousness and even death to both humans and animals.

Gases could be inhaled if the exhaust system on your vehicle is faulty.

To protect against exhaust gases entering the vehicle, the exhaust system and body should be inspected:

- Each time the vehicle is serviced.
- Whenever a change is noticed in the sound of the exhaust system.

(Continued)

Danger (Continued)

- Whenever the exhaust system, underbody or rear of the vehicle is damaged.

Take the vehicle to a Holden Dealer if you think the vehicle needs inspecting for any of the above reasons.

Do not sit (or leave children or pets) in a parked vehicle for any extended period of time with the engine running. Turn the fan on using any setting that brings outside air into the vehicle. Do not run the engine in an enclosed area (such as the garage) any longer than is needed to move the vehicle.

⚠ Danger

Always switch off the engine and any mobile phones when refuelling.

(Continued)

Danger (Continued)

Do not smoke or allow open flames or sparks near the vehicle when refuelling.

If fuel fumes are detected while driving, the cause should be identified and corrected without delay by a Holden Dealer.

Static electricity can ignite fuel vapour. Only use pumps, hoses and containers that are properly grounded when filling up with fuel.

To avoid injury to you and to others, read and follow all instructions at the petrol station pump.

⚠ Warning

USE OF FUEL CONTAINING ETHANOL

(Continued)

Warning (Continued)

Under no circumstances should you use diesel fuel containing ethanol.

Use of such fuels may result in engine malfunction, starting and operating difficulties and materials degradation.

These adverse effects could result in permanent damage to your vehicle and personal injury.

Fuel Types

Diesel engines must only be run using commercially available diesel fuel that meets the requirements of Euro standard EN590.

The use of biodiesel containing up to 5 % fatty acid methyl ester (“FAME”) also known as “B5” is also permitted provided that the FAME meets Euro Standard EN14214, and the resultant B5 blend meets Euro Standard EN590.

Do not use marine diesel oils or heating oils.

The flow and filterability of diesel fuel are temperature-dependent. When temperatures are low, use diesel fuel with guaranteed winter properties.

Caution

Use only biodiesel blends containing up to a maximum of 5 % FAME that meets Euro standard EN590.

Purchasing fuel from a reputable fuel retailer may reduce the risk of purchasing fuel with more than 5 % FAME or fuel that has abnormal fuel properties.

The use of any other biodiesel that does not have the certification referred to above, or has a FAME content exceeding 5 %, may cause serious damage to your vehicle (including engine failure).

Damage attributable to the use of non-certified biodiesel is not covered by your New Vehicle

(Continued)

Caution (Continued)

Voluntary Warranty. In no event will GM Holden be responsible or bear any liability for any damage or loss that may arise in connection with the use of any fuel that does not meet this specification.

Filling the Tank

Always fill the fuel tank at the intermediate or fast fill rate. Do not add any more fuel after the fuel filler first clicks off or fuel blows back. This allows room for the fuel to expand inside the tank.

Wipe off any overflowing fuel immediately from the vehicle. Replace the fuel cap and close the fuel opening then spray or splash with water.

Tank Capacity

See *Capacities and Specifications* ⇨ *232*.

Locking Fuel Cap (Cab Chassis)

The fuel filler is located at the rear of the vehicle on the left side.

1. To unlock, insert the key and rotate anticlockwise.
2. Slowly remove the cap.
3. After refuelling, replace the cap.
4. To lock, insert the key and rotate clockwise.

Fuel Filler Door (Pickup)

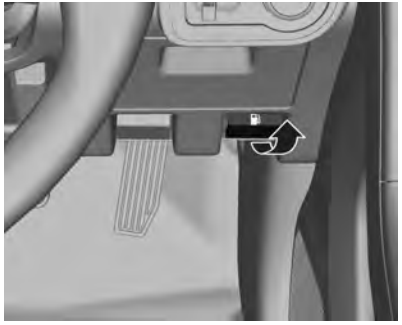

1. Pull the release lever.

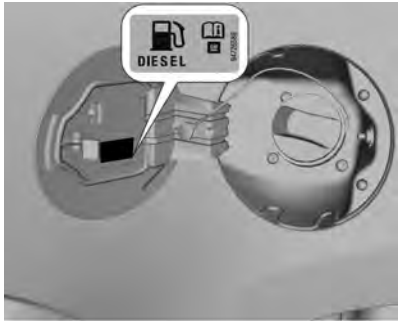

The fuel filler door is located at the rear side of the vehicle, on the left.

2. Slowly remove the cap.
3. Place the fuel filler cap in the fuel filler door.
4. After refuelling, replace the cap.
5. Wipe off any overflowing fuel immediately.
6. Close the fuel filler door.

Caution
Before entering a car wash, ensure the fuel filler door is closed to avoid damage.

Trailer Towing

The word trailer is used throughout this section and includes all types of towed vehicles, such as caravans, boat trailers or any other special purpose trailer.

Maximum Towing Capacities (kg) – Braked Trailer

	2.8L Diesel
Maximum ball load (kg)	350
Maximum towing capacity	3,500
Gross Combined Mass (GCM)	6,000

Note

- Exceeding these values could affect the New Vehicle Voluntary Warranty.
- The maximum unbraked towing capacity for all vehicles is 750 kg.
- The GCM is a maximum total for the vehicle, payload and braked trailer combined.
- The maximum towing capacity requires the payload to be reduced to ensure the GCM is not exceeded. See Carrying Capacity under *Vehicle Weight* ⇨ *230*.

Towing

Handling, durability and economy may be affected by towing a trailer.

For mandatory towing equipment, see Towing and Loading Equipment later in this section.

A Holden Dealer will assist with supply and installation of towing equipment.

Overloading

Never exceed the loads given for the towing equipment fitted to the vehicle.

All mandatory equipment must be fitted, otherwise you may affect the New Vehicle Voluntary Warranty, to the extent that Holden considers the overloading or missing equipment to have affected the specifications or

quality of the vehicle. See Towing and Loading Equipment later in this section.

⚠ Warning

Holden towing equipment is recommended where it is available. Where it is not available, no recommendation is made as to the make of equipment which should be used. Holden will not accept liability for defects occurring in towing equipment not marketed by Holden or for defects in the vehicle arising from the use of such equipment or for loss or injury caused by use of such equipment. The use of such equipment may void your New Vehicle Voluntary Warranty, to the extent that Holden considers the non-recommended equipment affects the specifications or quality of your Holden vehicle. It is inadvisable to mix and match different brands of towing

(Continued)

Warning (Continued)

equipment, as equipment is usually designed as an integrated package.

Trailer Recommendations

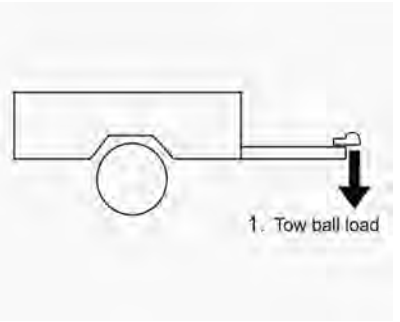

A trailer hitched to a vehicle places a weight on the tow bar. This weight is called the tow bar ball weight or tow ball load (1).

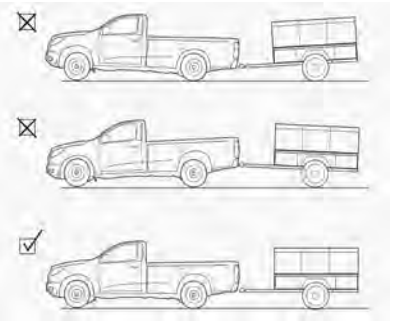

- For single-axle trailers, the tow ball load should be 10 % of the loaded trailer weight. For heavy trailers with more than one axle, the tow ball load should be 5 % - 10 % of the loaded trailer weight.
- Ensure the tow ball load does not exceed 10% of the loaded trailer weight. Refer to Towing and Loading Equipment later in this section.
- Adjust by moving items forwards or backwards within the trailer, to change the balance.
- Check the tow ball load before coupling the trailer to the towing vehicle.

- Axle loads must not be exceeded when the tow ball load is included. See Axle Loads under *Vehicle Weight* ⇨ *230*.
- If maximum axle loads are exceeded, weight should be removed from the rear of the vehicle.
- If the load balance cannot be corrected, use a load distribution hitch (only for tow bars that support load distribution hitches).

Towing and Loading Equipment

Tow Load	Mandatory Equipment	Recommended Equipment
Up to 750 kg	Holden tow bar	Load distribution hitch.
	Holden trailer wiring harness	
Between 750 kg and 3,500 kg	Holden tow bar	Load distribution hitch.
	Holden trailer wiring harness	
	Brakes on the trailer	

Load Distribution Hitch

- The vehicle may have a load distribution hitch.
- The load distribution hitch must be removed when not in use. Do not leave the hitch assembly in the receiver unless a trailer is attached.
- A load distribution hitch transfers load to the vehicle's front wheels aiding steering and brake performance.
- Do not exceed the maximum towing capacities specified. See Maximum Towing Capacities previously in this section.
- Do not exceed the total front or rear axle loads specified. See Axle Loads under *Vehicle Weight* ⇨ *230*.

Towing Precautions

- When heavily loading the vehicle or when towing, inflate tyres to the maximum recommended pressure. See *Tyre Pressure* ⇨ *209*.
- Tighten the tow ball retaining nut to 140 Nm (Newton metres) and check the torque frequently.
- Vehicles handle differently when towing. Take a couple of short distance trips with the trailer before taking a long trip.
- Have the vehicle and trailer correctly maintained and serviced, with particular attention given to the brakes, tyres, suspension, wheel bearings, towing coupling and lighting.
- Use an extended-arm mirror on both sides of the vehicle if necessary.
- If the vehicle has headlamp range adjustment, headlamps may need re-aiming after the loaded trailer has been hitched.
- Use a lower gear and the brakes when descending steep hills.
- Ensure that the tow bar does not obscure the rear number plate. Remove the tow bar tongue when not required for towing.
- The M10 anti-rattle bolt and nut should be removed when towing to prevent damage to the bolt or tow bar tongue.

Trailer Brakes

- Trailer brakes are mandatory on trailers with a trailer mass of more than 750 kg.
- Consult the appropriate regulatory body in your State or Territory for the legal requirements of trailer brakes.

Running-in when Towing

It is recommended that a new vehicle be driven for at least 1,500 km before towing.

If towing is necessary before this, do not exceed 80 km/h. This also applies if the vehicle is fitted with a new or reconditioned engine, transmission or rear axle.

Off-Road Loading and Towing

To reduce the risk of damage to the vehicle (and trailer) and to improve safety when operating the vehicle off-road, reduce its speed and minimise the load being carried or towed.

Vehicle Maintenance

More frequent vehicle maintenance is required when using the vehicle to tow. Refer to the Service/ Warranty Booklet in the vehicle's glovebox.

Trailer Sway Control (TSC)

If the system detects trailer sway movements, engine power is reduced and the vehicle/trailer combination is selectively braked until the trailer sway ceases. While the system is working, keep steering as still as possible.

TSC is a function of the Electronic Stability Control (ESC) system and may be disabled by turning the Traction Control System (TCS) or ESC off. See *Traction Control System (TCS)* ⇨ *169*. See *Electronic Stability Control (ESC)* ⇨ *170*.

Conversions and Add-Ons

Add-On Electrical Equipment

Fitting Driving Lamps

Do not fit any accessory over the upper or lower air intakes at the front of the vehicle, as this may affect engine cooling.

The Holden Genuine Accessories are an exception, however they should be removed in high load and high temperature conditions.

Caution

In high load and high temperature applications (e.g. towing) no objects should be fitted over the upper or lower air intake at the front of the vehicle, as this could affect cooling. This includes removing Holden Genuine Accessories in this area, in these conditions.

Fitting Roo/Nudge Bars

If a roo/nudge bar is to be fitted, it is critical that the Holden approved roo/nudge bar is used. Other types must not be fitted.

The Holden roo/nudge bar is available from a Holden Dealer and has been tested for compatibility with the vehicle's design, including the Holden airbag system.

⚠ Warning

Fitting other types of roo/nudge bars may affect crash performance, airbag performance and engine cooling.

Roo/nudge bars should not be fitted to vehicles operating in urban areas, as they increase the risk of injury to a pedestrian in the event of a collision.

Snorkel Intake

It is necessary to reverse the snorkel intake:

- When driving in snowy conditions.
- Where there are other heavy contaminants such as excessive dust or insect swarms.
- To prevent snow or other contaminants from entering the snorkel and engine air intake.

1. Loosen the two screws.
2. Remove the snorkel intake.
3. Rotate the snorkel intake 180º and refit, securing with the two screws.
4. Once conditions have stopped, return the snorkel intake to its original position.

Vehicle Care

General Information
General Information 187
Vehicle Storage 187
Emission Information 187
Emission Control System 187

Vehicle Checks
Doing Your Own Service Work 188
Bonnet 189
Engine Compartment Overview 191
Engine Oil 192
Automatic Transmission Fluid 193
Engine Air Cleaner/Filter 193
Engine Coolant 193
Power Steering Fluid 194
Washer Fluid 195
Brake Fluid 195
Battery 196
Fuel Filter 197
Diesel Fuel System Bleeding 198
Wiper Blade Replacement 198

Bulb Replacement
Bulb Replacement 198
Headlamps and Park Lamps 199
Front Turn Signal Lamps 201
Tail lamps 202
Centre High-Mounted Stoplamp (CHMSL) 203
Number Plate Lamp 204

Electrical System
Fuses 204
Engine Compartment Fuse Block 206
Instrument Panel Fuse Block 207

Vehicle Tools
Tools 209

Wheels and Tyres
Wheels and Tyres 209
Tyre Pressure 209
Tread Depth 210
Tyre Rotation 211
Buying New Tyres 212
Wheel Covers 212
Tyre Chains 212
Tyre Changing 213

Jump Starting
Jump Starting 217

Towing
Towing the Vehicle 219

Appearance Care
Exterior Care 221
Interior Care 223

General Information

Where specified, use only Holden genuine parts and accessories.

Vehicle Storage

If the vehicle is to be stored for several months:

- Wash and wax the vehicle.
- Clean and preserve rubber seals.
- Change engine oil.
- Drain the washer fluid reservoir.
- Check coolant and corrosion protection.
- Adjust the tyre pressure to the value specified for a full load.
- Park the vehicle in a dry, well ventilated place.
- Engage first or reverse gear to prevent the vehicle from moving.
- Open the bonnet, close all doors and lock the vehicle.

  Disconnect the clamp from the negative terminal of the vehicle battery.

  Close the bonnet.

Before returning the vehicle to the road:

- Connect the clamp to the negative terminal of the vehicle battery.

  Check the power windows operation.
- Check the tyre pressures.
- Fill the washer fluid reservoir.
- Check the engine oil level.
- Check the coolant level.

Emission Information

The emission control systems are designed to reduce the amount of hydrocarbons (HC), carbon monoxide (CO), and oxides of nitrogen (NOx) that are emitted from the engine and fuel system into the atmosphere. HC and NOx, when exposed to sunlight under certain conditions, contribute to photochemical smog. In addition, CO is toxic to inhale.

Emission Control System

Major emission control systems that the vehicle may have are:

- Evaporative emission control system. This system is designed to prevent the escape of fuel vapour from the fuel system and recycle the vapours through the normal combustion process.
- Crankcase emission control system. This system is designed to prevent blow-by gases from escaping into the atmosphere and recycle them through the combustion process.
- Exhaust emission control system. The various components of this system operate collectively to limit HC, CO and NOx emissions in the exhaust gas. The exhaust emission control system consists of components including electronic control of spark, fuel and idle speed. In addition vehicles have a catalytic converter and closed loop mixture control system.

It is recommended that service and repair to fuel or emission systems be carried out by an authorised Holden Dealer.

Owner responsibility

The engine, engine control system and exhaust system of the vehicle must NOT be modified in any way.

> **⚠ Warning**
>
> Any person who removes, modifies or hinders any part of the emission control system may be contravening Australian Design Rules. It is also illegal to drive a vehicle modified in this way.

Maintenance requirements

Have the vehicle serviced at the frequency shown in the Maintenance schedule, in the Service/Warranty Booklet.

It is recommended that servicing be carried out by an authorised Holden Dealer who will maintain the vehicle's emission control system as per the Service/Warranty Booklet.

Vehicle Checks

Doing Your Own Service Work

> **⚠ Warning**
>
> Do not touch engine compartment components when the ignition is on.

Bonnet

Opening

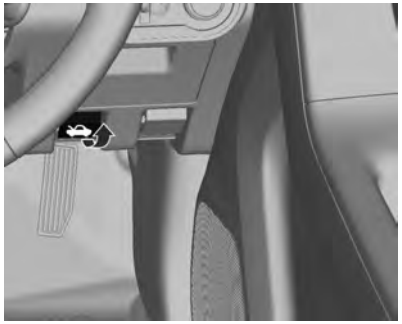

1. Pull the release lever rearwards and upwards.

Note

Do not step on the front Nudge Bar (if equipped) to access the engine compartment

3. Push the safety catch towards the driver's side and open the bonnet.

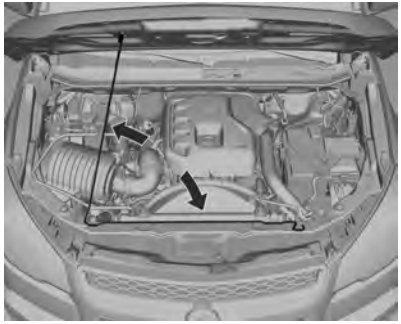

4. Pull the support rod up and away from the holder and secure.

Closing

⚠ Warning

To avoid injury and/or damage to the vehicle, check each time, before the bonnet is closed, that the contact area is unobstructed.

1. Place the support rod into the holder.
2. Lower the bonnet to approximately 30 cm and allow it to drop into the catch.
3. Check that the bonnet is engaged.
4. If it is not engaged, open the bonnet and repeat Steps 2 and 3.

Note
Do not push on the bonnet to close.

⚠ Warning

If while driving you notice that the bonnet has not been properly closed, pull the vehicle over to the side of the road at the earliest possible moment and close the bonnet correctly.

Engine Compartment Overview

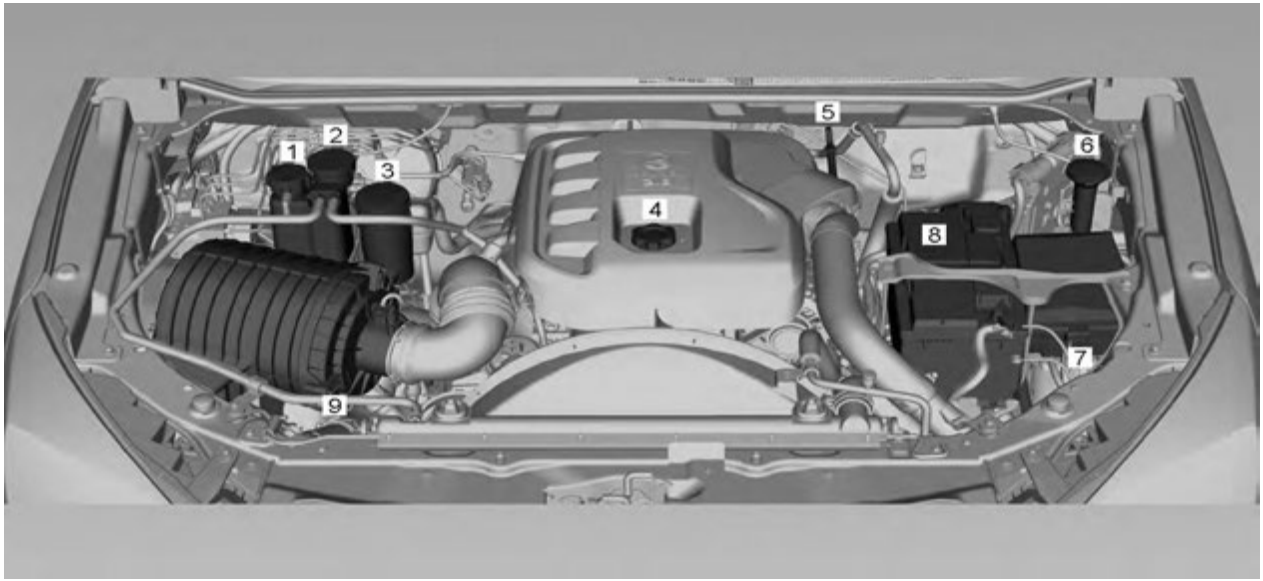

1. Coolant reservoir, see *Engine Coolant* ⇨ *193*
2. Brake fluid reservoir, see *Brake Fluid* ⇨ *195*
3. Power steering fluid reservoir, see *Power Steering Fluid* ⇨ *194*.
4. Engine oil filler cap, see *Engine Oil* ⇨ *192*
5. Engine oil dipstick. See *Engine Oil* ⇨ *192*
6. Washer fluid reservoir, see *Washer Fluid* ⇨ *195*
7. Engine compartment fuse box, see *Engine Compartment Fuse Block* ⇨ *206*
8. Battery, see *Battery* ⇨ *196*
9. Engine air filter, see *Engine Air Cleaner/Filter* ⇨ *193*

Engine Oil

Checking Oil Level

- Check the engine oil level regularly and before a long journey.
- Maintain the correct level.
- The engine must be at operating temperature and the ignition turned off for at least 10 minutes.

1. Park the vehicle on a level surface.

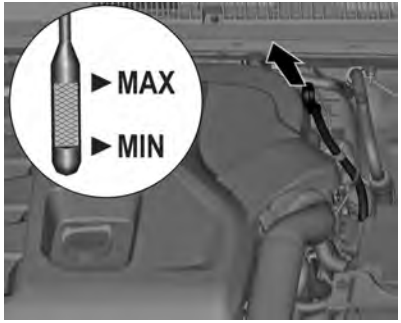

2. Remove the dipstick and wipe clean.
3. Insert the dipstick to the stop on the handle.
4. Remove and read the engine oil level.

   The level should be at the MAX mark. Add oil if the level is at the **MIN** mark.
5. Insert the dipstick to the stop on the handle.

Note

The engine oil level must not exceed the **MAX** mark on the dipstick.

For correct engine oil specification, see *Recommended Fluids and Lubricants* ⇨ *226*.

Adding Engine Oil

See *Capacities and Specifications* ⇨ *232*.

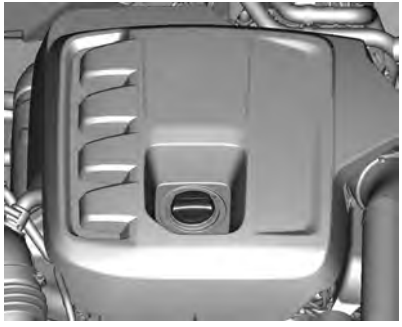

The engine oil filler cap is located on the top of the engine.

1. Rotate the engine oil filler cap anticlockwise and remove.
2. Add enough oil to reach below the **MAX** mark on the dipstick.
3. Check the level on the dipstick and add further oil if necessary.

   The engine oil must not exceed the **MAX** mark on the dipstick.

Caution
Overfilled engine oil must be drained or suctioned out.

4. Replace the engine oil filler cap tightly.

⚠ Danger
Engine oil is an irritant and if ingested, can cause illness or death. Keep out of reach of children. Avoid repeated or prolonged contact with skin. (Continued)

Danger (Continued)
Wash exposed areas with soap and water or hand cleaner. Be careful when draining the engine oil as it may be hot.

Automatic Transmission Fluid

How to Check Automatic Transmission Fluid

It is not necessary to check the transmission fluid level.
A transmission fluid leak is the only reason for fluid loss. If a leak occurs, take the vehicle to your dealer and have it repaired as soon as possible.

There is a special procedure for checking and changing the transmission fluid. Because this procedure is difficult, this should be done at the dealer.

Engine Air Cleaner/Filter

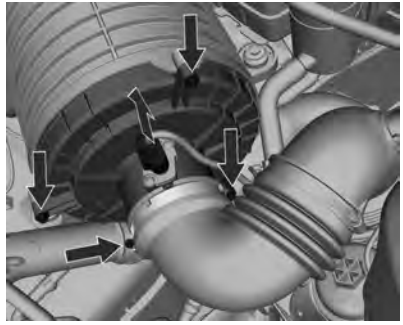

To replace the engine air filter, release the clamp and remove the air cleaner outlet duct. Disconnect the air sensor, unscrew the 3 screws and remove the filter housing.

Engine Coolant

Engine Coolant Level

Check the coolant level at least once a week.

Checking Coolant Level

⚠ Warning

Do not remove the radiator cap if the engine and radiator are still hot. Scalding fluid and steam can be blown out under pressure which could cause serious burns.

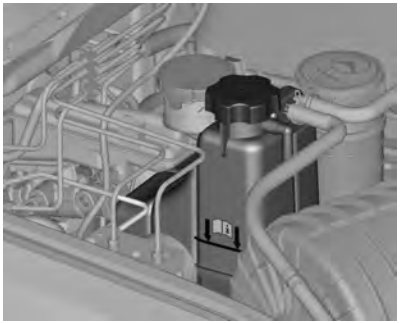

If the cooling system is cold, the coolant level should be above the line on the coolant reservoir.

Adding Coolant

Caution

If the coolant level is too low, engine damage may occur.

Do not spill coolant on the vehicle's exterior surfaces as it can damage the paintwork. If you do, wash it off immediately.

Note

Use only approved coolant. See *Recommended Fluids and Lubricants* ⇨ *226*.

1. Turn the ignition off.
2. Remove the coolant reservoir cap.
3. Add the required amount of coolant.
4. Replace the cap securely.

   If the coolant requires regular topping up, contact a Holden Dealer.

⚠ Warning

Avoid repeated or prolonged contact with coolant.

Wash off with soap and water.

Keep out of reach of children.

Power Steering Fluid

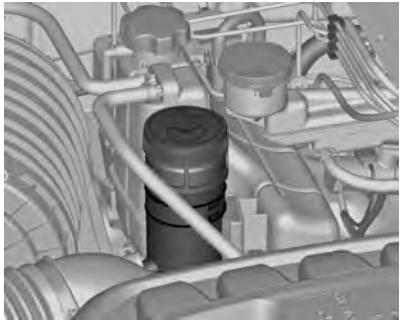

The power steering fluid level must be between the **MIN** and the **MAX** marks.

Adding Power Steering Fluid

1. Turn the ignition off.

Caution

Extremely small amounts of contamination can cause steering system damage and cause it to not work properly.

Do not allow contaminants to contact the fluid side of the reservoir cap/dipstick or to enter the reservoir.

2. Rotate the power steering fluid reservoir cap anticlockwise and remove.
3. Add the required amount of power steering fluid.

   Do not overfill the reservoir.
4. Replace the power steering fluid reservoir cap by rotating clockwise to secure.

Caution

Do not operate the vehicle without the required amount of power steering fluid. Damage to the power steering system may occur.

For correct power steering fluid specification, see *Recommended Fluids and Lubricants* ⇨ *226*.

Washer Fluid

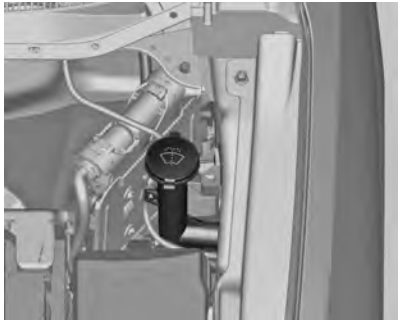

Check the fluid level weekly.

Adding Washer Fluid

1. Lift the front of the cap up.

   Use the correct amount of washer fluid additive. Refer to a Holden Dealer.

   Do not use ordinary soap or detergent as they froth up and damage the wiper rubbers.
2. Secure the cap.

Brake Fluid

⚠ Warning

Brake fluid is poisonous and corrosive and will damage the paint finish of the vehicle if spilt.

Caution

Avoid contact with eyes and skin. Wash any affected area immediately.

Checking Brake/Clutch (Manual) Fluid Level

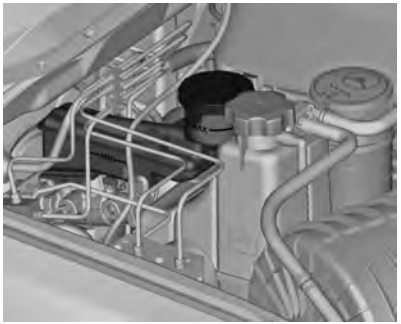

The level should be between the **MIN** and **MAX** marks.

If the fluid level is correct, do not remove the reservoir cap, as brake fluid exposed to the atmosphere will quickly absorb moisture.

Adding Brake Fluid

See *Recommended Fluids and Lubricants* ⇨ *226*.

1. Turn the ignition off.
2. Wipe the sides of the cap clean.
3. Rotate the brake fluid reservoir cap anticlockwise and remove.
4. Top up with the recommended brake fluid.

⚠ Warning

Using brake fluid other than GM recommended brake fluid may cause corrosion to components of the braking system and reduced braking performance.

Use only new brake fluid. Use of old, used or inferior brake fluid may endanger the functioning of the brake system.

5. Secure the cap by rotating clockwise and clean up any spilt fluid.

If the brake fluid requires regular topping up, contact a Holden Dealer immediately.

Caution

Do not dispose of used brake fluid with household waste.

Use the local, authorised waste management facility.

Battery

⚠ Warning

Batteries emit an explosive gas mixture which may be ignited. Therefore, you should keep sparks and flames away from the battery at all times. Never smoke near a battery.

Batteries contain sulphuric acid. If acid contacts skin or clothing, flush immediately with plenty of water. In case of eye contact, flush with plenty of water and contact a doctor immediately. Battery acid also damages paint and fabrics. To minimise damage, wash off immediately.

(Continued)

Warning (Continued)

Take care with all metal objects and tools including items you may wear (for example jewellery, rings and metal watch bands) near battery terminals.

The vehicle battery is maintenance free, provided that the driving profile allows sufficient charging of the battery. Short distance driving and frequent engine starts can discharge the battery. Avoid the use of unnecessary electrical consumers.

Batteries must be disposed of at an appropriate recycling collection point.

Laying up the vehicle for more than four weeks can lead to battery discharge. Disconnect the battery according to the procedure described in Battery Disconnection, thus avoiding its discharge.

Battery Replacement

For battery location, see *Engine Compartment Overview* ⇨ *191*.

For replacement, refer to a Holden Dealer or authorised repairer.

Caution

Do not dispose of batteries with household waste.

Use the local, authorised waste management facility.

Battery Disconnection

The battery may discharge if the vehicle is not used for approximately four weeks.

To disconnect the battery:

1. Turn the ignition off.
2. Disconnect the clamp from the negative terminal of the vehicle battery.

   Ensure the ignition is turned off before reconnecting the vehicle battery.

For emergency starting when the battery is flat, see *Jump Starting* ⇨ *217*.

Fuel Filter

When the water level in fuel filter is excessive, **Water in Fuel – Contact Service** illuminates on the instrument panel.

Caution

The engine and fuel system may be seriously damaged if the vehicle is driven while **Water in Fuel – Contact Service** is illuminated.

Contact a Holden Dealer immediately to have the fuel filter drained.

Note

The fuel filter will be drained when the vehicle is serviced. Refer to the Service/Warranty Booklet.

Diesel Fuel System Bleeding

The system requires bleeding if the vehicle has run out of fuel.

Note

A minimum of 5 litres of diesel fuel must be in the tank for the bleeding operation to work correctly.

1. Turn the ignition on for 15 seconds, and then off.
2. Repeat Step 1 three times.
3. Start the engine for a maximum of 40 seconds.
4. Repeat Steps 1 to 3 after 5 seconds.

   If the engine does not start, contact a Holden Dealer.

Wiper Blade Replacement

Regularly check the condition of the wiper blades.

- Replace hard, brittle or cracked blades or those that smear dirt on the windscreen.
- If the blades are not wiping properly, clean both the blades and the windscreen. See *Exterior Care* ⇨ *221*.

Bulb Replacement

Contact a trained service technician if unsure about the bulb replacement process.

When replacing bulbs:

- Turn the ignition off and remove the key.
- Turn off related switches.
- Fit bulbs of the specified wattage only.
- Do not touch bulbs or reflectors with bare hands.
- Clean stained bulbs with methylated spirits.

Bulbs to be Changed by a Holden Dealer

- Side turn signal lamps.
- Turn signal lamps on the exterior mirrors.
- Courtesy lamp.
- Reading lamps.
- Instrument panel lamps.
- LED rear lamps.
- Fog lamps.

Caution

Condensation may temporarily appear on the inside of exterior lamp lenses after rain or washing the vehicle. Condensation occurs when there is a temperature difference between the inside and outside of the lamp allowing a fine mist on the inside surface of the lamp lens. This condensation will disappear when the vehicle is in a dry environment or the lamp is on. If water does collect in the lamp contact a Holden Dealer.

Headlamps and Park Lamps

Low and High Beam (Type A)

Replace headlamp bulbs from within the engine compartment.

To remove the bulb covers:

- Rotate the outboard protective cover anticlockwise to open.
- Pull the inboard lower clip outwards to open the inboard protective cover.

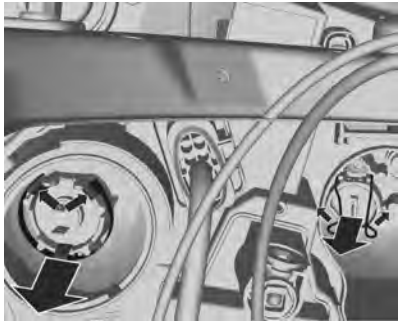

To replace the low beam bulb:

1. Disconnect the electrical connector.
2. Push the two upper tabs outwards.
3. Remove the bulb from the reflector housing, lifting upwards.
4. Replace the bulb.
5. Push the two upper tabs inwards to secure the bulb.
6. Refit the electrical connector and cover.
7. Check the lamp operation.

To replace the high beam bulb:

1. Disconnect the electrical connector.
2. Press the spring clips outwards to disengage.
3. Remove the bulb from the reflector housing.
4. Replace the bulb.
5. Press the spring clips inwards to secure the bulb.
6. Refit the electrical connector and cover.
7. Check the lamp operation.

Low and High Beam (Type B)

Replace headlamp bulbs from within the engine compartment.

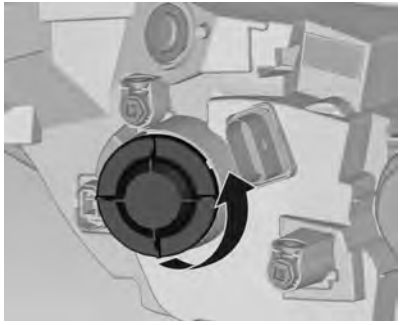

1. Rotate the protective covers anticlockwise to open.

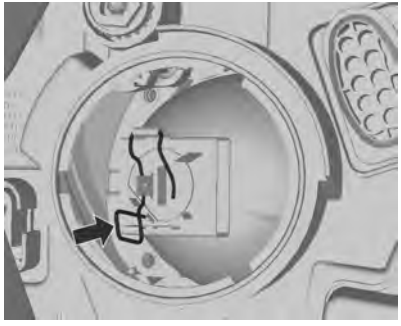

2. Disconnect the electrical connector.
3. Press the spring clip to disengage.
4. Swivel the spring clip to the right.

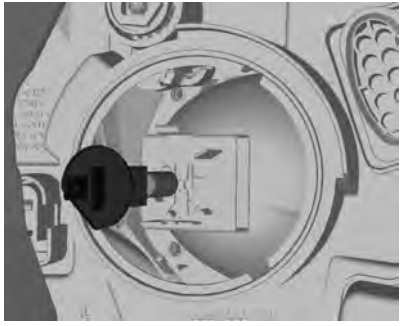

5. Remove the bulb from the reflector housing.
6. Fit the new bulb by engaging the lugs in the recesses on the reflector.
7. Engage the spring clip.
8. Reconnect the electrical connector.
9. Place the headlamp protective cover in position and close.
10. Check lamp operation.

Park Lamps

Replace front park lamp bulbs from within the engine compartment.

To remove the bulb cover, pull the inboard lower clip outwards to open the inboard protective cover.

1. Remove the park lamp bulb holder from the reflector.
2. Detach the plug connector from the bulb.

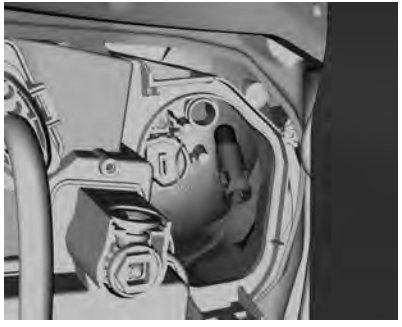

3. Remove the bulb from the socket.
4. Replace the bulb.
5. Plug the connector onto the bulb.
6. Insert the holder into the reflector.
7. Place the headlamp protective cover in position and close.
8. Check the lamp operation.

Front Turn Signal Lamps

1. Rotate the bulb holder anticlockwise to disengage.

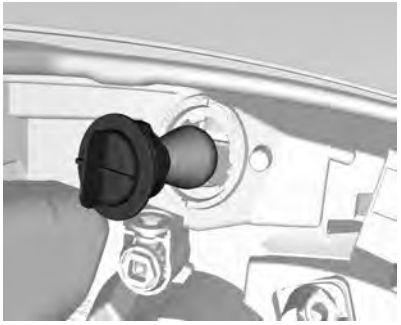

2. Push the bulb into the socket slightly and rotate anticlockwise, to remove.
3. Insert a new bulb.
4. Replace the bulb holder and rotate clockwise to engage.
5. Check lamp operation.

Tail lamps

1. Unscrew both fasteners.

2. Remove the tail lamp assembly by pulling straight out of the body.

Note
Take care that the cable duct remains in position.

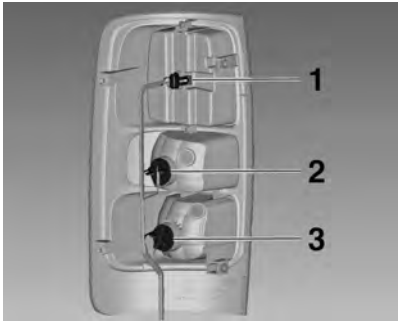

— Tail lamp/brake lamp (1)
— Turn signal lamp (2)
— Reverse lamp (3)

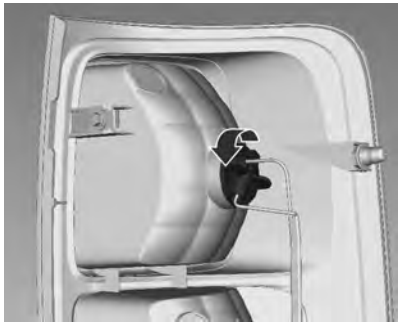

3. Rotate the required bulb holder anticlockwise.

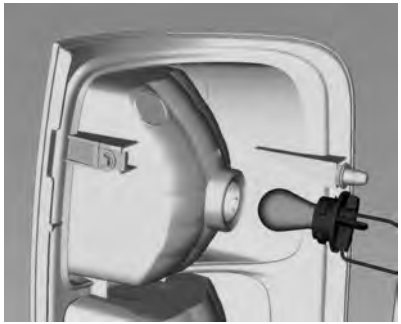

4. Remove bulb holder.
5. Push the bulb into the socket slightly and rotate anticlockwise to remove.
6. Insert a new bulb.
7. Insert the bulb holder into the tail lamp assembly by fastening into place.
8. Reinstall the tail lamp assembly and tighten the fasteners.
9. Check lamp operation.

Centre High-Mounted Stoplamp (CHMSL)

1. Unscrew the two screws.
2. Remove the lamp assembly.

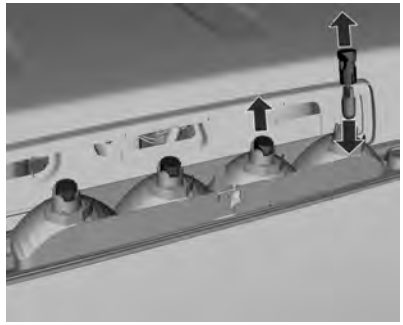

3. Pull the bulb socket to remove it from the lamp assembly.
4. Holding the socket, pull the bulb to remove it from the socket.
5. Push the new bulb into the socket.
6. Insert the bulb socket into the lamp assembly and push until it clicks.
7. Reinstall the lamp assembly and tighten the screws.
8. Check lamp operation.

Number Plate Lamp

The number plate lamp is located in the rear bumper.

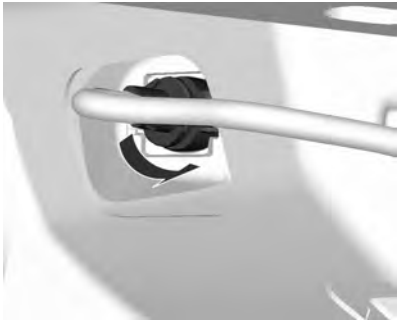

1. On the reverse side of the bumper, rotate the bulb holder anticlockwise to disengage.
2. Remove the bulb from the holder.
3. Insert a new bulb.
4. Insert the bulb holder into the bulb housing and rotate clockwise.
5. Check lamp operation.

Electrical System

Fuses

Fuse boxes are located:

- In the engine compartment
- In a storage compartment on the driver's side

There is a primary fuse holder connected to the positive battery post.

⚠ Warning

Turn off the ignition (LOCK position) and any electrical equipment before changing a fuse.

- Replace blown fuses promptly.
- A blown fuse can be recognised by its melted wire.
- Do not replace the fuse until the cause of the fault has been remedied.
- Some functions are protected by several fuses.

⚠ Warning

When replacing a fuse be sure to use a fuse of the specified amperage.

Never install a wire or similar as it could damage electrical components and cause a fire.

Any improper alterations to the electrical system may cause a fire hazard and engine damage. To maintain your own safety and that of the vehicle, have any work involving the electrical system or the replacement of high current fuses or relays carried out by a Holden Dealer.

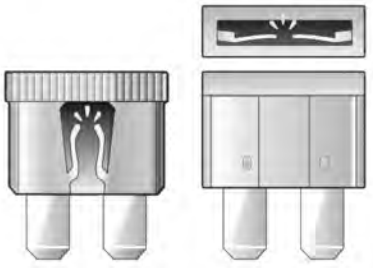

Fuse Extractor

A fuse extractor can be located in the fuse box in the engine compartment.

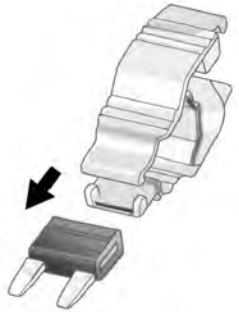

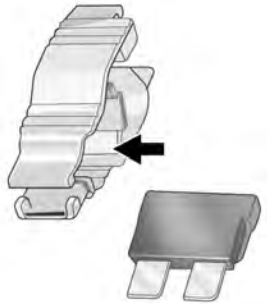

Place the fuse extractor on the top or side of the fuse to extract the fuse.

Engine Compartment Fuse Block

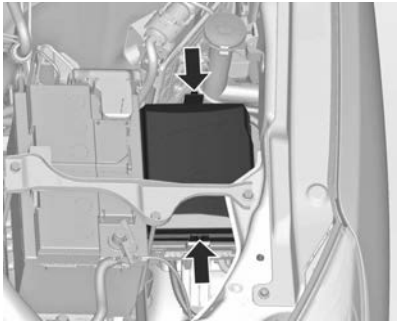

The fuse box is located on the passenger's side of the engine compartment.

To disengage the cover, lift upwards and remove.

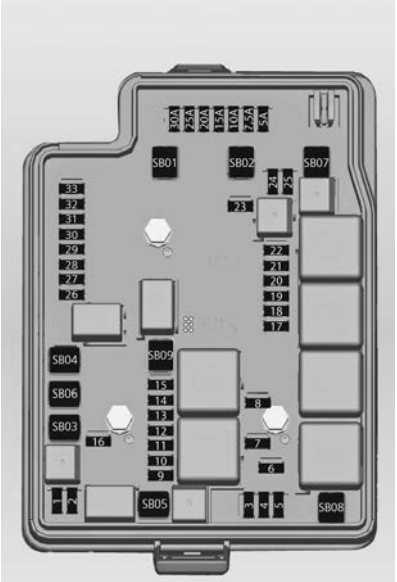

The vehicle may not be equipped with all of the fuses shown.

Fuses

1	COMPRESSOR A/C CLUTCH	10A
2	BCM BATT 6	15A
3	SPARE	15A
4	REAR LATCH	10A
5	HORN	15A
6	FRONT FOG LAMP	15A
7	HIGH BEAM LH	10A
8	HIGH BEAM RH	10A
9	ENGINE CONTROL MODULE	10A
10	ENGINE_3	15A
11	ENGINE CONTROL MODULE1	20A
12	ENGINE_1	10A
13	ENGINE_2	10A
14	ENGINE_4	15A
15	PWT	15A
16	TCM	15A

17	TRANSFER CASE MODULE AND LAMP LEVELLING	10A
18	CLUSTER - A/C - SDM	10A
19	FUEL PUMP	20A
20	SPARE	5A
21	REAR WINDOW HEATER	30A
22	OUTSIDE REAR VIEW MIRROR	15A
23	VISCOUS HEATER	15A
24	REAR WIPER	20A
25	FRT WASHER	10A
26	REAR PARK ASSIST	10A
27	BODY CONTROL MODULE RVC	5A
28	DRL/COLD START	7.5A
29	ABS MODULE ESC1	30A
30	HORN	10A
31	BODY CONTROL MODULE BATT7	15A
32	ENGINE CONTROL MODULE	15A
33	COMMON ENABLE	10A
SB01	ABS MODULE PUMP	50A
SB02	TRANSFER CASE CONTROL MODULE (4X4)	30A
SB03	GLOW PLUG MODULE (DIESEL)	60A
SB04	SPARE	20A
SB05	STARTER MOTOR SOLENOID	30A
SB06	FRONT WIPER	30A
SB07	COOL FAN	30A
SB08	-	
SB09	SPARE	30A

Instrument Panel Fuse Block

The fuse box is in a storage compartment on the driver's side of the instrument panel.

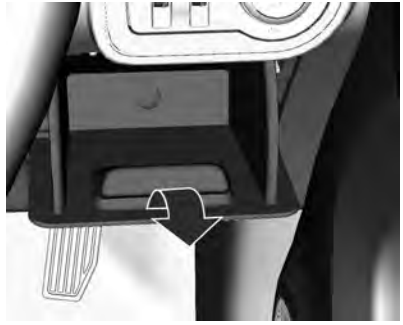

1. Open the storage compartment.

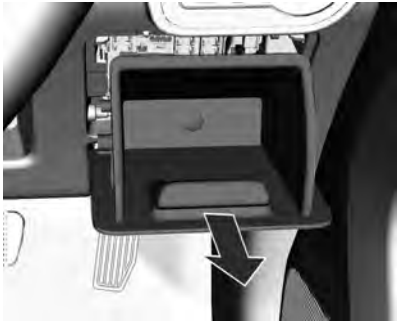

2. Lift the storage compartment until it audibly disengages.
3. Remove by pulling rearwards.
4. Reinstall in the reverse order.

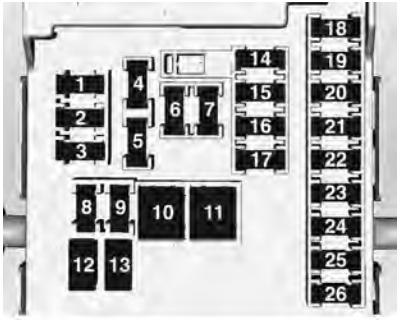

The vehicle may not be equipped with all of the fuses shown.

Fuses

1	HVAC AUTO	15A
2	BODY CONTROL MODULE (6)	15A
3	BODY CONTROL MODULE (5)	15A
4	CIGAR LIGHT AND POWER OUTLET	20A
5	CLOCK SPRING	2A
6	POWER WINDOW	30A
7	POWER OUTLET	20A
8	BODY CONTROL MODULE (2)	15A
9	BODY CONTROL MODULE (4)	15A
10	BODY CONTROL MODULE (8)	30A
11	RAP & ACCESSORY 12V	40A
12	-	
13	-	
14	DATA LINK CONNECTOR (DLC)	7.5A
15	SENSING AND DIAGNOSTIC MODULE (SDM)	10A
16	INSTRUMENT PANEL CLUSTER (IPC)	10A
17	RADIO	20A
18	HVAC BLOWER	30A
19	OUTSIDE REAR VIEW MIRRORS	5A
20	-	
21	HVAC CONTROL HEAD	10A
22	IGNITION SWITCH	2A
23	BODY CONTROL MODULE (5)	15A
24	BODY CONTROL MODULE (3)	15A

25	POWER WINDOW SWITCH	20A
26	POWER SEAT	25A

Vehicle Tools

Tools

The jack and tools are located in a storage compartment behind the driver's seat or under a back seat. See *Tyre Changing* ⇨ *213*.

1. Unhook the strap.
2. Remove the jack by rotating the lever on the side anticlockwise.

   When replacing the jack, rotate clockwise to secure into the bracket.
3. Remove the tools.

Wheels and Tyres

Tyre and Rim Condition

- To avoid tyre and rim damage and possible tyre blow-out, do not drive over sharp edges.
- Drive over edges slowly and at right angles, if possible.
- When parking, ensure the tyres are not pressed against the edge of the kerb.
- Check the tyres regularly for damage, stones, punctures, cuts, cracks, bulges, etc. Check the rims for damage. Contact a Holden Dealer, if in doubt.

Tyre Pressure

Keep the tyres at the recommended pressures to avoid increased fuel consumption, uneven and premature tyre wear.

- Tyre pressure should be checked when cold as tyre pressure will increase as the tyres warm up.

- Check the air pressure of tyres (including the spare) weekly, to ensure occupant safety, as well as reducing fuel consumption and increasing the life of the tyres.
- Replace any valve dust caps or extensions.

Tyre Placard

The correct pressures for tyres are shown on the tyre placard in the driver's door frame and in the tyre pressure table. See *Tyre Pressure* ⇨ *233*.

Always inflate the spare tyre to the pressure specified for maximum load.

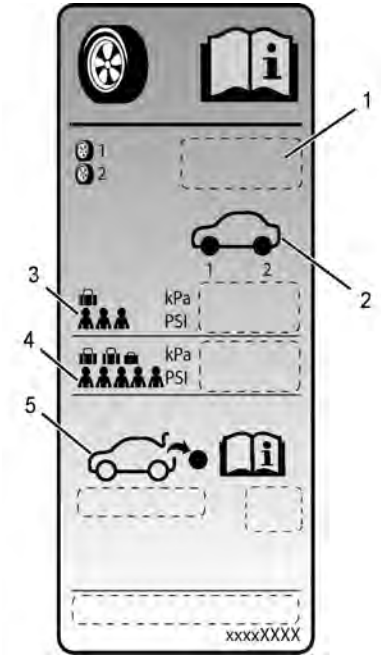

1. Tyre specifications
2. Tyre positions
3. Normal load (up to three people)
4. Full load (five people plus load)
5. Spare tyre information

Tread Depth

Check tread depth at regular intervals.

- Replace the tyres when they are worn to the point where the tread wear indicators (TWI) appear.

- Tyres age, even if they are not used. Replacement of tyres every six years is recommended.

⚠ Warning

Do not attempt to drive on a flat tyre more than is necessary to stop safely. Driving even a short distance can damage the tyre and wheel beyond repair. Tyres which have been repaired or retreaded are not capable of being driven safely at high speeds. Therefore, their use is not recommended.

Tyre Rotation

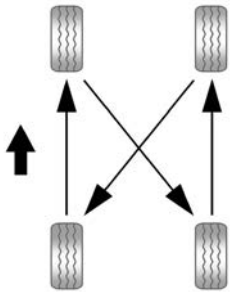

It is recommended that you rotate tyres at every scheduled maintenance service.

Different forces on the front and rear tyres make them wear differently, depending on several factors, such as road surface, driving style, suspension alignment, wheel balancing, tyre pressure, etc.

The owner must evaluate the vehicle wear. This includes regular tyre rotation, which should be performed at each inspection. Tyre rotation is vital to achieving even tread wear and long tyre life.

Tyre rotation must be performed as indicated in the illustration.

Tyre condition is checked at periodic inspections by your Dealer, who can diagnose signs of uneven wear that may compromise your car's safety and performance.

Never include the temporary spare tyre in the tyre rotation due to size differences.

Caution

- Ageing causes tyre rubber to deteriorate. This also happens to the spare tyre even if it has not been used.
- Tyre ageing depends on many conditions of use including temperature, load conditions, and tyre inflation pressure.
- A spare tyre which has not been used within a 6-year period should be used in emergencies only. If you need to use this tyre, drive at low speeds.

Buying New Tyres

Refer to the tyre placard on the vehicle for tyre size and load rating.

Using a different size or type of tyre may affect:

- Ride
- Handling
- Speedometer accuracy
- Vehicle ground clearance
- Tyre clearance
- Snow chain clearance

⚠ Warning

Do not use different sizes or types of tyres and wheels than those originally fitted to the vehicle. Safety and performance of the vehicle may be affected. It may also affect road handling and lead to serious injury.

When replacing tyres, install all four tyres and wheels of the same size, type, tread, brand and load-carrying capacity.

Wheel Covers

Use wheel covers and tyres that are factory approved for the vehicle and which comply with all of the relevant wheel and tyre combination requirements.

⚠ Warning

Use of incorrect tyres or wheel covers may result in damage to the vehicle and personal injury.

Tyre Chains

- Tyre chains should be fitted only on the rear wheels.
- Remove large hubcaps and valve extensions that contact parts of the chain.

⚠ Warning

Tyre chains may only be used at speeds up to 50 km/h. Tyre chains should only be used for short distances if the roads are

(Continued)

Warning (Continued)

not snow covered. The hard road surface causes rapid wear and the chain may break. Tyre chain links should not be thicker than 13 mm and the clasp should be well away from the bodywork. Thicker chains may damage the vehicle body.

- Check the tyre placard for correct tyre pressures. See Tyre Placard under *Tyre Pressure* ⇨ *209*.
- Whenever tyre chains are fitted, switch off the ESC. See *Electronic Stability Control (ESC)* ⇨ *170*.
- If driving in snowy conditions with a snorkel, see Snorkel Intake under *Add-On Electrical Equipment* ⇨ *184*.

Tyre Changing

⚠ Warning

All passengers must be out of the vehicle when it is being jacked.

Do not jack a vehicle with a trailer attached. Remove the trailer first.

Only jack the vehicle on hard, level surfaces.

Ensure moving parts of the jack are adequately lubricated before use.

Use the jack only at the designated lifting points. Use in other locations may result in the vehicle falling off the jack, or damage to the vehicle.

Do not start or run the engine while the vehicle is supported by the jack.

Use the jack only for lifting the vehicle when changing wheels.

(Continued)

Warning (Continued)

Do not get under a vehicle that is supported by a jack. No person should place any portion of their body under a vehicle that is supported by a jack.

Vehicles with alloy wheels may have a steel spare wheel. Drive carefully and do not exceed 80 km/h if the tyre size or tread pattern of the spare tyre is different to the other tyres on the vehicle. Although the spare tyre was fully inflated when the vehicle was new, it can lose air over time. Check the inflation pressure regularly.

After installing the spare tyre on the vehicle, stop as soon as possible to check the inflation pressure is correct. Have the flat tyre repaired or replaced and installed back on the vehicle as soon as possible.

1. Park on a hard, level surface, in a safe location.
2. Apply the park brake firmly.
3. Place manual transmissions in first or reverse gear.

   Place automatic transmissions in position **P**.
4. Switch the hazard warning flashers on.
5. Turn off the engine and remove the key.
6. Chock the wheel diagonally opposite the flat tyre with a suitable solid object.

Note

Do not change more than one wheel at one time.

7. Remove the tools. See *Tools ⇨ 209*.
8. Assemble the wheel wrench, jack handle extensions and the jack handle using a screwdriver.

The vehicle may have a spare wheel retainer cover.

9. Remove the spare wheel retainer cover and insert the chiselled end of the jack handle, at a slight angle, through the central hole in the rear bumper and into the funnel-shaped guide.

10. Rotate the wheel wrench anticlockwise to lower the spare tyre to the ground.
11. Continue to rotate the wheel wrench until the spare tyre can be pulled out from under the vehicle.

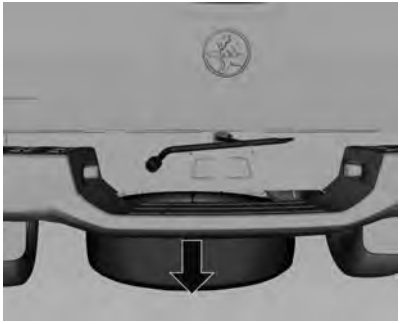

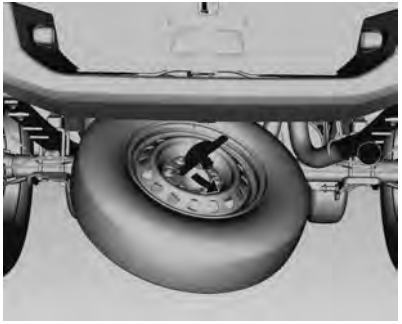

12. Tilt the retainer and slide it up the cable so it can be pulled up through the wheel opening.
13. Place the spare tyre near the flat tyre.

Wheel nut removal

14. Remove the centre cap by placing the chisel end of the wheel wrench into one of the slots on the cap and gently prise the cap out.

    To protect the wheel, place a soft cloth between the wheel wrench and the wheel.

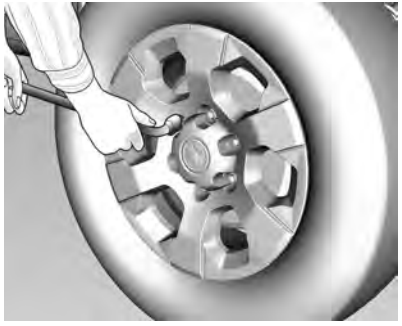

15. Turn the wheel wrench anticlockwise to loosen all the wheel nuts.

Note

Do not remove the wheel nuts at this stage.

Jacking procedure

Front position:

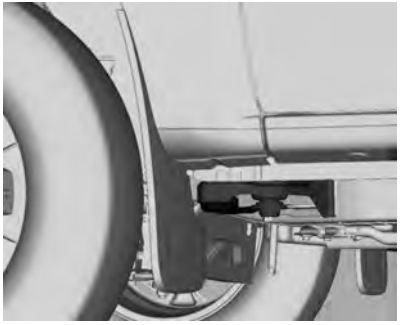

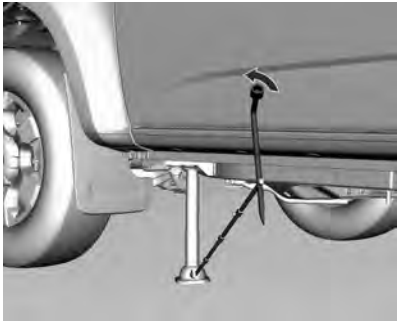

If the flat tyre is on the front of the vehicle, position the jack to the rear of the front tyre in the cut out on the frame.

Rear position:

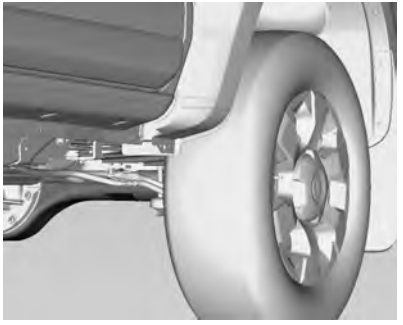

If the flat tyre is on the rear, position the jack under the rear axle and get as close as possible to the shock absorber.

16. Set the jack to the necessary height before positioning it directly below the jacking point in a manner that prevents it from slipping.

⚠ Warning

Failure to position the jack as described could cause the vehicle to slip off the jack.

(Continued)

Warning (Continued)

Do not get under a vehicle that is supported by a jack. No person should place any portion of their body under a vehicle that is supported by a jack.

17. Attach the jack handle and with the jack correctly aligned.
18. Rotate the handle until the wheel is clear of the ground.
19. Remove the wheel nuts.
20. Exchange the wheel on the vehicle with the spare wheel.
21. Remove any rust or dirt from the wheel nuts and studs, mounting surfaces and spare wheel.

⚠ Danger

Never use oil or grease on bolts or nuts as the nuts may come loose. The vehicle wheel could fall off and may lead to serious injury or death.

22. Put the wheel nuts back on with the rounded end of the nuts towards the wheel.
23. Tighten each wheel nut by hand, then use the wheel wrench to tighten the nuts until the wheel is held against the hub.
24. Lower the vehicle by reversing the jacking procedure.
25. Remove the jack from under the vehicle.

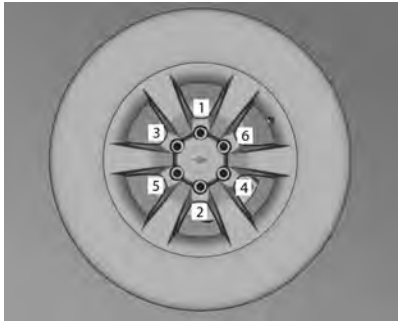

26. With the wheel on the ground, use the wheel wrench to tighten the wheel nuts in a crosswise sequence.

⚠ Warning

As soon as possible after changing a wheel, have the wheel nuts tightened with a torque wrench to 128 Nm (Newton metres). Wheel nuts must be tightened evenly to the correct torque, as wheel nuts which have not been tightened properly could eventually allow the wheel to come off while the vehicle is moving.

27. Stow the replaced wheel, by reversing Steps 8 to 13.
28. Stow the tools in the storage compartment. See *Tools* ⇨ *209*.
29. Have the flat tyre renewed or repaired.

When reinstalling the repaired wheel:

1. Install the centre cap.
2. Place the cap on the wheel and tap it into place until it is flush with the wheel.

Jump Starting

Read the following warnings and procedure in full before attempting to jump start the vehicle.

If you are still unsure about jump starting, Holden strongly recommends for your safety and that of the vehicle that you seek the assistance of a suitably trained service technician.

⚠ Warning

Do not push start or tow start the vehicle. Therefore, if the battery is flat, jump start, but do not push start the vehicle.

Batteries produce explosive gases, contain corrosive acids and supply levels of electrical current high enough to cause burns. Therefore, adhere to the following when working near a battery:

(Continued)

Warning (Continued)

- Do not attempt jump starting directly from the battery in the engine compartment.
- Do not let the jumper lead clamps touch each other or other metal parts.
- Do not allow the jumper leads to contact any rotating engine components.
- Do not use open flames or sparks near the battery.
- Do not smoke near the battery.
- Never use a quick charger to start the engine.
- The battery must be removed from the vehicle for recharging.
- Wear eye protection such as safety glasses and avoid leaning over the battery.

(Continued)

Warning (Continued)

- Battery acid is corrosive. If it gets on your skin, wash with plenty of water immediately. If it gets in your eyes you should not only flush with lots of water, but should also seek medical help. Battery acid also damages paint and fabrics. To minimise damage, wash it off immediately.
- Remove rings, metal watch bands and other metal jewellery before working around the battery.
- If a permanently connected hands free telephone kit is fitted to the vehicle, remove the fuse for the telephone kit before jump starting. Remember to replace the fuse afterwards.

- A discharged battery can freeze at temperatures of 0°C.

  Defrost the frozen battery before connecting jumper leads.
- Use a booster battery with the same voltage (12 volts). Its capacity (Ah) must not be much less than that of the discharged battery.
- Use jumper leads with insulated terminals and a cross section of at least 25 mm².
- Do not disconnect the discharged battery from the vehicle.
- Switch off all unnecessary electrical devices.
- Do not allow the terminals of one lead to touch those of the other lead.
- The vehicles must not come into contact with each other during the jump starting process.

Jump Starting Procedure

1. Position the two vehicles so that they are not touching.
2. Apply the park brakes.
3. For manual transmissions, place the shift lever in neutral.

   For automatic transmissions, place the shift lever in **P**.
4. Turn the ignition off.
5. Turn off all lamps and accessories in both vehicles, except the hazard warning flashers or any lights needed for the work area.

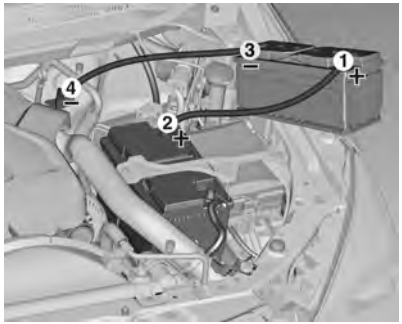

6. Connect one end of the red lead to the positive terminal of the booster battery (1).
7. Connect the other end of the red lead to the positive terminal of the discharged battery (2).

8. Connect the black lead to the negative terminal of the booster battery (3).
9. Connect the other end of the black lead to a vehicle grounding point, such as the engine block or an engine mounting bolt (4).

   Connect as far away from the discharged battery as possible (at least 60 cm).

Note

Route the leads so that they cannot catch on rotating parts within the engine compartment.

10. Start the engine of the vehicle providing the jump start and allow to idle for at least 5 minutes.
11. Start the engine of the vehicle with the flat battery.

    Start attempts should be made for no longer than 15 seconds at an interval of 1 minute.
12. Allow both engines to idle for approximately 3 minutes with the leads connected.
13. Switch on the headlamps and the heated rear window of the vehicle that received the jump start.
14. Leave the engines running while removing the BLACK negative jumper lead first, followed by the RED positive jumper lead.

Note

While removing each clamp, do not touch any other metal while the other end remains attached.

Towing

Towing the Vehicle

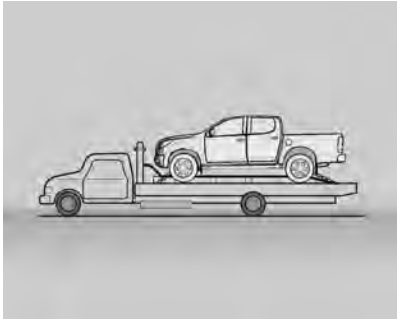

A flat-bed tow truck is the best method of towing the vehicle to avoid damage.

⚠ Warning
No passenger should remain in the vehicle being towed.

Proper lifting or towing equipment is necessary when lifting or towing the vehicle to prevent damage. State and local laws must be followed.

In an emergency, the vehicle may be towed on all four wheels for short distances only, using the front towing eyes.

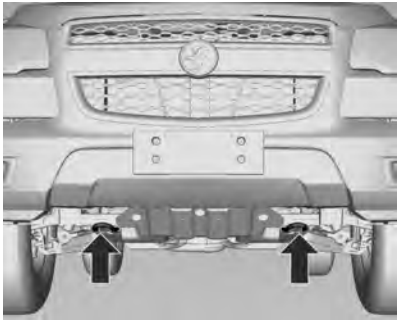

Caution
No load applied to an individual front towing eye shall exceed 1,500 kg (static or dynamic).

Emergency Towing Procedure

Tow only on hard-surfaced roads for a short distance and at low speeds:

1. Fit the towing equipment to the front towing eyes.

   Do not attach towing equipment to the bumpers or brackets, suspension or cross members.
2. Turn the ignition key to **ON** to enable the steering lock, windscreen wipers and turn signals operation.
3. Place the gear shift lever in **N** or neutral.
4. Release the park brake.

Note

Automatic transmission: If the vehicle's battery is flat and the vehicle requires towing, see *Interruption of Power Supply* ⇨ *162*.

Note

- A driver must be in the vehicle to steer and operate the brakes.
- Drive slowly when towing.
- Power assist for brakes and power steering are not available when the engine is turned off.

  The brakes and steering still function, but require greater effort.
- To prevent exhaust fumes entering the towed vehicle, close the windows and press .
- Vehicles with damaged transmissions must not be towed.
- The wheels, axles, drive train, steering and brakes must be in good condition.
- Only the driver should be inside a towed vehicle.

Vehicle Recovery

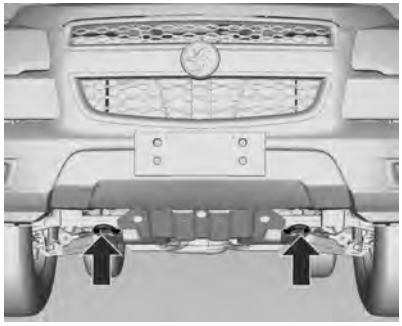

The vehicle may be recovered using the front towing eyes.

Attach a tow rope or other suitably rated system to the towing eyes.

Ensure all equipment is in good condition and is being used correctly.

Caution
The front towing eyes are rated to 1,500 kg each. Any load (static or dynamic) applied to these locations must not exceed the rated capacity of each point. Care should be taken not to damage the bumper fascia or other vehicle components with the tow rope or recovery system, during recovery.

Appearance Care

Exterior Care

Washing

The paintwork of the vehicle is exposed to environmental influences. Wash and wax regularly. When using automatic vehicle washes, select a programme that includes waxing.

Bird droppings, dead insects, resin, pollen and the like should be cleaned off immediately, as they contain aggressive constituents which can cause paint damage. Failure to do so may result in permanent damage, particularly in hot weather conditions.

Road bloom is a gradual build up of road and environmental grime. This should be removed with a paint cleaner once a year, in addition to normal washing.

If using a vehicle wash, comply with the vehicle wash manufacturer's instructions. Never use an automatic wash that requires anything touching the paint (other than water). The wipers must be switched off. Remove antenna and external accessories.

If you wash your vehicle by hand, make sure that the insides of the wheel housings are also thoroughly rinsed out.

Clean edges and folds on opened doors and the bonnet as well as the areas they cover.

Have the door hinges of all doors greased by a Holden Dealer.

Caution
Do not clean the engine compartment with a steam-jet or high-pressure jet cleaner.

Thoroughly rinse and chamois off the vehicle. Rinse chamois frequently. Use separate chamois for painted and glass surfaces: remnants of wax on the windows will impair vision.

Do not use hard objects to remove spots of tar. Use tar removal spray on painted surfaces.

⚠ Warning

Take care when moving the vehicle after washing, in case water has affected the brakes. Applying the brakes lightly will indicate whether they have been affected. To dry them quickly, lightly apply the brakes while maintaining a slow forward speed with a clear area ahead, until brake performance returns to normal.

Exterior Lamps

Headlamp and other lamp covers are made of plastic. Do not use any abrasive, solvent based cleaners or caustic agents and do not dry-clean them.

Air Intakes

Clear debris from the air intakes, between the bonnet and windscreen and below the front bumper, when washing the vehicle.

Polishing and Waxing

Wax the vehicle regularly (at the latest when water no longer beads).

Polishing is necessary only if the paint has become dull or if solid deposits have become attached to it.

Paintwork polish with silicone forms a protective film, making waxing unnecessary.

Plastic body parts must not be treated with wax or polishing agents.

Windows and Windscreen Wiper Blades

Use a soft lint-free cloth or chamois leather together with window cleaner and insect remover.

- Never use abrasive cleaners to clean glass.
- Refer to a Holden Dealer for windscreen washer additive.
- Old wiper blades can cause windscreen scratching. Regularly inspect and replace them.

Caution

Do not operate the wiper blades by hand as this damages the wiper drive mechanism.

When cleaning the rear window, make sure the heating element inside is not damaged.

Clean smearing wiper blades with a soft cloth and window cleaner.

Wheels and Tyres

Do not use high-pressure jet cleaners.

- Remove oil and grease with soap and water or detergent.
- Do not use petrol to clean tyres.
- Use a good quality tyre and bumper shine if required.
- A good quality wheel cleaner can be used for cleaning alloy wheels.
- Do not use abrasive cleaners.

Paintwork Damage

Rectify minor paintwork damage with a touch-up pen before rust forms.

Have more extensive damage or rust areas repaired by your Holden Dealer.

Caution

Do not spill coolant on the vehicle's exterior surfaces as it can damage the paintwork. If you do, wash it off immediately.

Underbody

Substances can cause rust under the vehicle.

- Hose the underbody with clean water whenever the vehicle is washed.
- Where the vehicle is exposed to heavy concentrations of corrosive materials, inspect and wash the complete underbody at least once each year, preferably after winter exposure.

Interior Care

⚠ Warning

Many cleaning products are toxic, flammable or may damage the interior. When cleaning the interior, avoid volatile cleaners such as acetone, lacquer thinners, enamel reducers, nail polish removers, or cleaners such as laundry soaps, bleaches or reducing agents. Never use carbon tetrachloride, petrol or naphtha for any cleaning purpose. Ensure that the vehicle is well ventilated while using any cleaners and always follow the cleaning product manufacturer's recommendations. Water based cleaners, rather than solvent based cleaners, are recommended.

Steam cleaning of seats is not recommended.

Interior and Upholstery

Only clean the vehicle interior, including the instrument panel fascia and panelling, with a dry cloth or interior cleaner.

The instrument panel should only be cleaned using a soft damp cloth.

Clean fabric upholstery with a vacuum cleaner and brush. Remove stains with an upholstery cleaner.

Clean seat belts with a mild, non-abrasive soap and lukewarm water.

After washing, thoroughly, sponge the solution out of the belts.

Caution

Close Velcro fasteners as open Velcro fasteners on clothing could damage seat upholstery.

Plastic and Rubber Parts

Plastic and rubber parts can be cleaned with the same cleaner as used to clean the body. Use interior cleaner if necessary. Do not use any other agent. Avoid solvents and petrol in particular. Do not use high pressure jet cleaners.

Floor Mats

Ensure that floor mats, when fitted, are securely fastened.

Service and Maintenance

General Information
Service Information 225

Recommended Fluids, Lubricants, and Parts
Recommended Fluids and Lubricants 226

General Information

Service Information

In order to ensure economical and safe vehicle operation and to maintain the value of your vehicle, it is of vital importance that all maintenance work is carried out at the proper intervals as specified.

See your Service/Warranty Booklet for the service schedules and for more information.

Engine Oil Life System

The vehicle has a computer system that lets you know when to change the engine oil and filter.

The frequency of the oil change depends on driving patterns, engine RPM and engine temperature.

When the system has calculated that oil life has been diminished, Change engine oil soon will appear in the Driver Information Centre (DIC).

When Change engine oil soon is displayed, have the engine oil and filter changed as soon as possible, within the next 1,000 km.

It is possible that, if you are driving under the best conditions, the oil life system may not indicate that an oil change is necessary for a longer period than that shown in the Maintenance schedule. However, the engine oil and filter must be changed in accordance with the Maintenance schedule outlined in the Service/Warranty Booklet.

Recommended Fluids, Lubricants, and Parts

Recommended Fluids and Lubricants

Engine Type	2.8L Diesel
Engine oil specification	SAE 5W-30; dexos (dexos™ 2)
Coolant specification	50% clean fresh water and 50% Dexcool® anti-freeze coolant, conforming to specification number GM6277M
Manual transmission fluid	Dexron® VI
Automatic transmission fluid	Dexron® VI
Transfer case fluid (four-wheel drive)	Dexron® VI
Differential oil	Synthetic Hypoid 75W/90 GL5
Brake fluid	DOT 4 Hydraulic brake fluid conforming to specification number GMW3356
Power steering fluid	Dexron® VI
Battery	12 volts, 90 amp hours

Technical Data

Vehicle Identification
Vehicle Identification Number (VIN) 227
Identification Plate 227

Vehicle Data
Engine Data 229
Vehicle Weight 230
Vehicle Dimensions 231
Capacities and Specifications 232
Tyre Pressure 233

Vehicle Identification

Vehicle Identification Number (VIN)

The Vehicle Identification Number (VIN) is located on the chassis rail on the driver's side.

The VIN is also located on the instrument panel visible through the windscreen.

Identification Plate

An identification label is located on the front door frame or on the rear door frame (Space Cab).

1: Approval number

2: Manufacturer

3: Category

4: Number of seats

5: Vehicle identification number

6: Compliance date

Engine Number

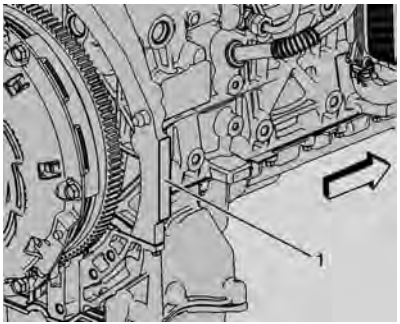

⇨: Front of vehicle

The engine serial number (1) is located on the right side at the rear of the engine block.

Vehicle Data

Engine Data

Engine Type	2.8 L L4 Turbo Diesel
Number of cylinders	4
Engine	2776 cc
Engine power	Please refer to holden.com.au
Engine torque	Please refer to holden.com.au
Diesel fuel	Complies with Euro Standard EN590

Vehicle Weight

Axle Loads

Maximum Front and Rear Axle Loads

Do not exceed the maximum axle loads, including the weight of any options, tow ball download when towing, or accessories fitted to the vehicle. Weigh at a weighbridge if unsure.

	Front Axle Load (kg)	Rear Axle Load (kg)
DX	1450	1850
LS	1450	1850
LT	1450	1850
LTZ	1450	1650

Refer to the vehicle's compliance plate for gross vehicle mass (GVM) figures.

Carrying Capacity

Carrying capacity (payload) is the maximum capacity of the vehicle for the carriage of all non-standard items including cargo carrying devices (e.g. tray or body, if applicable), the cargo itself, occupants, tow ball download when towing, optional equipment and accessories.

Light commercial vehicles, depending on their model and specification, have different carrying capacities.

Vehicle Dimensions

Dimensions (mm)

		Length	Width (incl. mirrors)	Height	Front and Rear Track	Front overhang	Wheel Base
Single cab chassis	4x2	5147	2132	1785	1570	944	3096
Single cab chassis	4x4	5147	2132	1785	1570	944	3096
Crew cab chassis	4x2	5127	2132	1780	1570	944	3096
Crew cab chassis	4x4	5127	2132	1780	1570	944	3096
Crew cab pickup	4x2	5347	2132	1780	1570	944	3096
Crew cab pickup	4x4	5347	2132	1780	1570	944	3096
Crew cab pickup (Z71)	4x4	5360	2132	1793	1570	956	3096
Space cab chassis	4x4	5127	2132	1780	1570	944	3096
Space cab pickup	4x4	5347	2132	1780	1570	944	3096

The above figures are based on the design dimensions.

Note

Length of cab chassis is determined by tray or body fitted.

Capacities and Specifications

Engine Type	2.8 L L4 Turbo Diesel
Refill engine oil including filter (approximately)	5.7 L
Coolant (approximately)	9.0 L
Fuel tank	76.0 L

Tyre Pressure

Tyre Size	Wheel Size and Profile	Recommended Pressure									
		Normal Load				Maximum Load				Spare	
		Front		Rear		Front		Rear		—	
		kPa	PSI	kPa	PSI	kPa	PSI	kPa	PSI	kPa	PSI
245/70 R16 SL 111S	16 x 6.5J	240	35	240	35	260	38	300	44	300	44
255/65 R17 XL 110S	17 x 7.0J	240	35	240	35	260	38	300	44	300	44
265/60 R18 SL 110T	18 x 7.5J	240	35	240	35	260	38	300	44	300	44

Customer Information

Customer Information
Owner Assistance 234

Customer Information

Owner Assistance

Holden Customer Care

At Holden, we want you to be completely satisfied with your ownership experience. This applies to your vehicle and any Holden representative you may deal with.

Refer below for two options for seeking assistance with your query.

Holden Dealerships

Holden encourages you to seek assistance from your Holden Dealership. Each Holden Dealership is equipped to manage any sales, servicing, parts or technical query.

In the instance that you wish to escalate a query to a higher level of staff, further options are available to you.

As a first step, Holden suggests you discuss any concern with the relevant Department Manager (Sales Manager or Service Manager).

Alternatively, the Dealership General Manager or Dealer Principal will also be happy to assist you.

Holden Customer Care Office

Should you wish to speak to a Holden representative, you are welcome to contact the Holden Customer Care team.

Refer below for operating hours and various methods of communication.

Operating Hours

Weekdays: 8am – 7pm AEST

Saturday: 9am – 1pm AEST

Telephone

Holden Customer Care can be telephoned from anywhere within Australia for only the cost of a local call.

The contact number is:

1800 033 349

Email

Alternatively, you may prefer to email Holden at:

holdencustomercare@gm.com

Written Correspondence

You can also write to Holden at the address below:

The Manager
Holden Customer Care Centre
GPO Box 1714
Melbourne 3001

Your written correspondence should clearly outline your concern or query and include:

- Your name and address
- Telephone numbers, both private and business
- Servicing dealer's name and address
- Vehicle model
- Vehicle identification number (I.S.O.V.I.N.), refer to the inside front cover of the Service/ Warranty Booklet in your vehicle's glovebox
- Date of purchase
- Current odometer reading

Most of this information will be found on the Vehicle Identification Certificate, located inside the front cover of the Service/Warranty Booklet in your vehicle's glovebox.

Before you write however, remember that the telephone is a quicker and more effective means of communication.

New Zealand

The information in this Owner's Handbook applies primarily to Australian Holden vehicles and there may be some differences to the Warranty and Owner Assistance provisions for New Zealand.

Applicable details for New Zealand are set out in the Holden Warranty and Owner Assistance Information booklet enclosed in the New Zealand glovebox wallet.

New Zealand Assistance can be reached on:

0800 HOLDEN (0800 465 336)

This number provides access to New Zealand Roadside Assistance as well as New Zealand Customer Care.

Alternatively, you may prefer to email Holden at:

holdencustomercare@gm.com

You can also write to Holden at the address below:

The Manager
Holden Customer Care Centre
PO Box 11195
Ellerslie
Auckland 1542

Trademarks and Licence Agreements

About DivX® Video

DivX® is a digital video format created by DivX®, LLC, a subsidiary of Rovi Corporation.

This is an official DivX Certified® device that plays DivX® video. Visit divx.com for more information and software tools to convert your files into DivX® videos.

About DivX® Video-On-Demand

The DivX Certified® device must be registered in order to play purchased DivX® Video-on-Demand (VOD) movies.

To obtain a registration code, locate the DivX® VOD section in the device setup menu. Go to vod.divx.com for more information on how to complete your registration.

Index

A

Add-On Electrical Equipment ... 184
Adjustable Air Vents 152
Adjustments
  Seat, Initial Drive 27
Air Cleaner/Filter, Engine 193
Air Conditioning 147
Air Conditioning Regular
  Operation 153
Air Filter, Passenger
  Compartment 153
Air Intake 153
Airbags
  Curtain 38
  Front 36
  Seat Belt Tensioner Light 61
  Side 37
  System Check 35
Alarm System
  Anti-theft 19
AM-FM Radio 88, 111
Anti-theft
  Alarm System 19
  Alarm System Messages 69
Antilock Brake System (ABS) ... 167
  Warning Light 63
Appearance Care
  Exterior 221
Appearance Care (cont'd)
  Interior 223
Armrest Storage 48
Audio Players 91
  CD 91
Automatic
  Transmission 160
  Transmission Fluid 193
Automatic Transmission
  Electronic Driving
    Programs 161
  Fault 161
  Interruption of Power
    Supply 162
  Manual Mode 161
  Shift Lever 160
  Transmission Display 160
Auxiliary
  Devices 98
Auxiliary Devices 115

B

Battery 196
  Jump Starting 217
  Power Protection 81
  Voltage and Charging
    Messages 66
Blade Replacement, Wiper 198

Bleeding
Diesel Fuel System 198
Bluetooth
Overview 102
Bonnet 189
Brake
System Warning Light 62
Brakes 167
Antilock 167
Assist 168
Fluid 195
Parking 168
System Messages 67
Break-In, New Vehicle 157
Bulb Replacement
Centre High-Mounted Stoplamp (CHMSL) 203
Front Turn Signal Lamps 201
Headlamps 198
Headlamps and Park Lamps 199
Number Plate Lamps 204
Tail lamps 202
Buying New Tyres 212
Buzzers, Warning 66

C
Camera, Rear Vision 175
Capacities and Specifications 232
Carbon Monoxide
Engine Exhaust 159
Tailgate 19
Caution, Danger, and Warning 2
CD Player 91
Central Locking System 17
Centre High-Mounted Stoplamp (CHMSL) 203
Chains, Tyre 212
Charging System Light 62
Check
Malfunction Indicator Engine Light 62
Child Restraint Systems
Top Tether 43
Child Restraints
ISOFIX 43
Systems 39
Cleaning
Exterior Care 221
Interior Care 223
Climate Control System
Electronic 149
Compartment 48
Compartment (cont'd)
Load 48
Computer, Trip 71
Control System
Emission 187
Convex Mirrors 21
Coolant
Engine 193
Engine Temperature Gauge 60
Cooling System
Engine Messages 67
Courtesy Lamps 79
Cover
Tonneau 49
Covers 78
Misted Lamps 78
Wheel 212
Cruise Control 172
Light 65
Messages 67
Cupholders 46
Curtain Airbag System 38

D
Danger, Warning, and Caution 2
Descent Control System 63
Descent Control System (DCS) 171

Devices
Auxiliary 98, 115
USB 96
Diesel
Starting Your Engine 158
Diesel Fuel System Bleeding ... 198
Dimensions
Vehicle 231
Displays
Automatic Transmission 160
Door
Ajar Messages 67
Central Locking System 17
Manual Door Locks 16
Rear Doors 18
Driver Information
Centre (DIC) 65
Driving
Electronic Programs 161
Environment 155
Hill and Mountain Roads 156
Off-Road 155

E

Electrical Equipment,
Add-On 184
Electrical System
Engine Compartment Fuse
Block 206
Electrical System (cont'd)
Fuses 204
Instrument Panel Fuse
Block 207
Electronic Climate Control
System 149
Electronic Driving Programs 161
Electronic Stability Control 170
Electronic Stability Control
(ESC) Off Light 64
Electronic Stability Control
Indicator Light 63
Emission Control System 187
Emission Information 187
Engine
Air Cleaner/Filter 193
Check and Service Engine
Soon Light 62
Compartment Overview 191
Coolant 193
Coolant Temperature Gauge 60
Cooling System Messages 67
Exhaust 159
Oil Messages 67
Oil Pressure Light 64
Power Messages 68
Starting 158
Starting Your Diesel Engine ... 158
Engine Data 229
Entry Lighting 81
Exit Lighting 81
Exterior Lamp Controls 76

F

Fault, Automatic
Transmission 161
Filter
Fuel 197
Filter,
Engine Air Cleaner 193
Flashers, Hazard Warning 77
Flat Tyre
Changing 213
Fluid
Automatic Transmission 193
Brakes 195
Four-Wheel Drive
Transfer Case 163
Power Steering 194
Washer 195
Fog Lamps
Front 78
Folding Mirrors 21
Four-Wheel Drive 163
Four-Wheel-Drive Light 63
Front Airbag System 36

Front Fog Lamp
Light 65
Front Seat Position Seats
Adjustment 27
Front Seats
Adjustment 27
Heated 29
Front Turn Signal Lamps 201
Fuel 177
Filling the Tank 178
Filter 197
Gauge 60
Low Fuel Warning Light 64
System Messages 68
Fuses 204
Engine Compartment Fuse Block 206
Instrument Panel Fuse Block 207

G

Gauges
Engine Coolant Temperature ... 60
Fuel 60
Odometer 59
Speedometer 59
Tachometer 59
Turn Signal 61
Gauges (cont'd)
Warning Lights and Indicators 59
General Information
Vehicle Care 187
Glovebox 46

H

Hands-Free Phone 104
Hazard Warning Flashers 77
Head Restraints 26
Headlamp Flash 77
Headlamps
Bulb Replacement 198
Headlamp Flash 77
High-Beam On Light 65
High/Low Beam Changer 76
Park Lamps 199
Range Adjustment 77
Headlight Range Adjustment 77
Heated
Rear Window 25
Heated Front Seats 29
High-Beam On Light 65
Hill and Mountain Roads 156
Hill Start Assist (HSA) 169
Horn 10, 57

I

Identification Plate 227
Ignition Positions 157
Immobiliser 20
Light 64
Information
Service 225
Information on Loading the Vehicle 53
Infotainment 82, 106
Instrument Panel
Storage Area 44
Instrument Panel Overview 3, 55
Interruption of Power Supply 162
ISOFIX Child Restraint
Systems 43

J

Jump Starting 217

K

Key and Lock Messages 68
Keys 14

L

Lamps
Courtesy 79
Exterior Controls 76
Front Fog 78
Front Turn Signal 201

Lamps (cont'd)
Headlamps and Park Lamps 199
Malfunction Indicator 62
Messages 68
Misted Covers 78
Number Plate 204
Reading 80
Reversing 78
Tail lamps 202
Lap Belt 34
Light
Electronic Stability Control (ESC), Off 64
Pre-Heat 64
Lighting
Entry 81
Exit 81
Illumination Control 79
Lights
Airbag and Seat Belt Tensioner 61
Antilock Brake System (ABS) Warning 63
Brake System Warning 62
Charging System 62
Cruise Control 65
Descent Control System 63
Lights (cont'd)
Engine Oil Pressure 64
Four-Wheel-Drive 63
Front Fog Lamp 65
Headlamp Flash 77
High-Beam On 65
High/Low Beam Changer 76
Immobiliser 64
Low Fuel Warning 64
Seat Belt Reminders 61
Tail Lamp Indicator 65
Up-Shift 63
Load compartment 48
Loading the Vehicle 53
Locks
Central Locking System 17
Manual Door 16
Safety 17
Low Fuel Warning Light 64

M

Maintenance
Air Conditioning Regular Operation 153
Maintenance Schedule
Recommended Fluids and Lubricants 226
Maintenance Schedule (cont'd)
Transfer Case 163
Malfunction Indicator Lamp 62
Manual Mode 161
Manual Transmission 163
Manual Windows 23
Messages
Airbag System 69
Anti-theft Alarm System 69
Battery Voltage and Charging 66
Brake System 67
Door Ajar 67
Engine Cooling System 67
Engine Oil 67
Engine Power 68
Fuel System 68
Key and Lock 68
Lamp 68
Ride Control System 69
Transmission 69
Vehicle 66
Vehicle Reminder 70
Vehicle Speed 71
Mirrors
Convex 21
Folding 21
Manual Rear View 22

Mirrors (cont'd)
Power 21
Misted Light Covers 78

N

New vehicle running-in 157

O

Odometer 59
Off-Road 155
Driving 155
Oil
Engine 192
Messages 67
Pressure Light 64
Operation 106
Operation, Infotainment System 85
Other Service Items
Air Conditioning System 147
Outlets
Power 58
Overview
Instrument Panel 55
Overview, Infotainment System 83
Owner Assistance 234

P

Parking 159
Brake 168
Parking Assist 174
Passenger Compartment Air Filter 153
Personalisation
Vehicle 73
Phone
Bluetooth 102
Hands-Free 104
Power
Mirrors 21
Outlets 58
Protection, Battery 81
Seat Adjustment 28
Steering Fluid 194
Windows 23
Pre-Heat Light 64
Pregnancy, Using Seat Belts 34
Pressure
Tyre 233

R

Radio
AM-FM 111
Radios
AM-FM Radio 88
Reading Lamps 80
Rear Doors 18
Rear Seats 30
Rear View Mirrors 22
Rear Vision Camera (RVC) 175
Rear Windows
Heated 25
Recommended Fluids and Lubricants 226
Remote Control 15
Radio 15
Replacement Parts
Airbags 38
Replacing Airbag System 38
Replacing Seat Belt System Parts after a Crash 34
Restraints
Where to Put 41
Reverse Lamps 78
Ride Control Systems 170
Electronic Stability (ESC) 170
Messages 69
Roof Rack System 53
Rotation, Tyres 211

S
Safety Locks 17
Seat Belts 31
Care 34
Lap Belt 34
Reminders 61
Replacing after a Crash 34
Three-Point 32
Use During Pregnancy 34
Seats
Adjustment, Front 27
Head Restraints 26
Heated Front 29
Position, Front 27
Power Adjustment, Front 28
Rear 30
Underseat Storage 47
Service
Doing Your Own Work 188
Engine Soon Light 62
Service and Maintenance
Service Information 225
Service Information 225
Shift Lever 160
Side Airbag System 37
Signals, Turn and
Lane-Change 78
Specifications and
Capacities 232
Speedometer 59
Start Assist, Hills 169
Starting the Diesel Engine 158
Starting the Engine 158
Steering
Fluid, Power 194
Wheel Adjustment 56
Wheel Controls 56
Storage
Load compartment 48
Vehicle 187
Storage Areas
Armrest 48
Glovebox 46
Information on Loading the
Vehicle 53
Instrument Panel 44
Roof Rack System 53
Underseat 47
Sun Visors 25
System
Infotainment 82
Roof Rack 53

T
Tachometer 59
Tail Lamp Indicator Light 65
Tail lamps 202
Tailgate 19
Technical Data
Tyre Pressure 233
Theft-Deterrent Systems
Immobiliser 20
Thread Depth 210
Three-Point Seat Belt 32
Tonneau Cover 49
Tools 209
Top-Tether Child Restraint
Systems 43
Towing
Trailer 180
Trailer Sway Control (TSC) ... 184
Vehicle 219
Traction
Control System (TCS) 169
Trailer
Sway Control (TSC) 184
Towing 180
Transfer Case 163
Transmission
Automatic 160
Fluid, Automatic 193

Transmission (cont'd)
Messages 69
Transmission Display 160
Trip Computer 71
Turn and Lane-Change
Signals 78
Turn Signal 61
Tyre Pressure 233
Tyres
Buying New Tyres 212
Chains 212
Changing 213
Rotation 211
Tyres and Wheels 209

U

Underseat Storage 47
Upshift light 63
USB 96
Using This Manual 2

V

Vehicle
Identification Number (VIN) ... 227
Messages 66
Personalisation 73
Reminder Messages 70
Speed Messages 71
Towing 219
Vehicle Care
Tyre Pressure 209
Vehicle Dimensions 231
Vehicle Identification
Plate 227
Vehicle Storage 187
Vehicle Weight 230
Ventilation
Adjustable Air 152
Visors 25

W

Warning
Brake System Light 62
Caution and Danger 2
Warning Chimes 66
Warning Lights, Gauges, and
Indicators 59
Warnings
Hazard Flashers 77
Washer Fluid 195
Weights
Vehicle 230
Wheel Covers 212
Wheels and Tyres 209
Where to Put the Restraint 41
Windows
Heated, Rear 25
Manual 23
Power 23
Windscreen
Wiper/Washer 57
Wiper Blade Replacement 198